

## vidaXL vidaXL 80 cm White Kitchen Wall Cabinet

# vidaXL Kitchen Wall Cabinet 80 cm White Instruction Manual

Model: vidaXL 80 cm White Kitchen Wall Cabinet

## 1. INTRODUCTION

---

Thank you for choosing the vidaXL Kitchen Wall Cabinet. This manual provides essential information for the safe and correct assembly, installation, operation, and maintenance of your new cabinet. Please read these instructions thoroughly before beginning assembly and retain them for future reference.

This wall cabinet features a sleek white design with two shelves and glass doors, offering both storage and a stylish addition to your kitchen space.

## 2. SAFETY INFORMATION

---

- Always handle components with care to avoid injury.
- Ensure all parts are present before assembly. Do not proceed if parts are missing or damaged.
- Assembly requires two people for safety and ease.
- Use appropriate tools as specified in the assembly guide.
- Wall/ceiling fixtures (screws, wall plugs) are **not included**. Use fixings suitable for your specific wall type to ensure secure installation. Consult a professional if unsure.
- Do not overload the cabinet. The maximum weight capacity is 154 lbs (70 kg).
- Keep small parts away from children during assembly to prevent choking hazards.

## 3. PACKAGE CONTENTS

---

Before starting assembly, verify that all components are present and undamaged. Refer to the included parts list (usually found in the separate assembly diagram) to identify each piece.

- Cabinet panels (top, bottom, sides, back)
- Shelves
- Doors (with glass inserts)

- Hinges and mounting hardware
- Handles
- Assembly screws and dowels
- Wall mounting brackets (note: wall fixings are not included)

## 4. SETUP (ASSEMBLY AND INSTALLATION)

---

Assembly is required for this product. It is recommended that two people perform the assembly.

### 4.1. Pre-Assembly

1. Clear a spacious, clean, and flat area for assembly.
2. Lay out all components and hardware.
3. Gather necessary tools: screwdriver (Phillips head), hammer, measuring tape, level, drill (for wall mounting).

### 4.2. Assembly Steps

1. **Assemble the Cabinet Frame:** Attach the side panels to the top and bottom panels using the provided screws and dowels. Ensure all connections are tight and secure.
2. **Install the Back Panel:** Slide or nail the back panel into the designated grooves or onto the back of the frame. This adds stability to the cabinet.
3. **Insert Shelves:** Place the shelves into the desired positions using the shelf pins.
4. **Attach Hinges to Doors:** Secure the hinges to the cabinet doors according to the instructions in the separate assembly diagram.
5. **Mount Doors to Cabinet:** Attach the doors to the cabinet frame by securing the hinges. Adjust the hinges as needed to ensure proper door alignment and smooth opening/closing.
6. **Install Handles:** Attach the handles to the doors.

### 4.3. Wall Mounting

This cabinet is designed for wall mounting. **Wall/ceiling fixtures (screws, wall plugs) are not included.** You must select appropriate fixings for your wall type (e.g., drywall, concrete, wood studs) to ensure secure installation. Consult a qualified professional if you are unsure about the correct fixings or installation process.

1. **Determine Mounting Location:** Choose a suitable location on your kitchen wall, ensuring it is clear of electrical wires or plumbing.
2. **Mark Drilling Points:** Hold the assembled cabinet against the wall at the desired height and use a pencil to mark the positions for the wall mounting brackets. Use a level to ensure the marks are perfectly horizontal.
3. **Drill Holes:** Drill holes at the marked points using a drill bit appropriate for your chosen wall fixings. Insert wall plugs if necessary.
4. **Attach Mounting Brackets:** Secure the wall mounting brackets to the wall using your chosen fixings. Ensure they are firmly attached.
5. **Hang the Cabinet:** Carefully lift the cabinet and hook it onto the wall mounting brackets. Ensure it is securely seated and level.

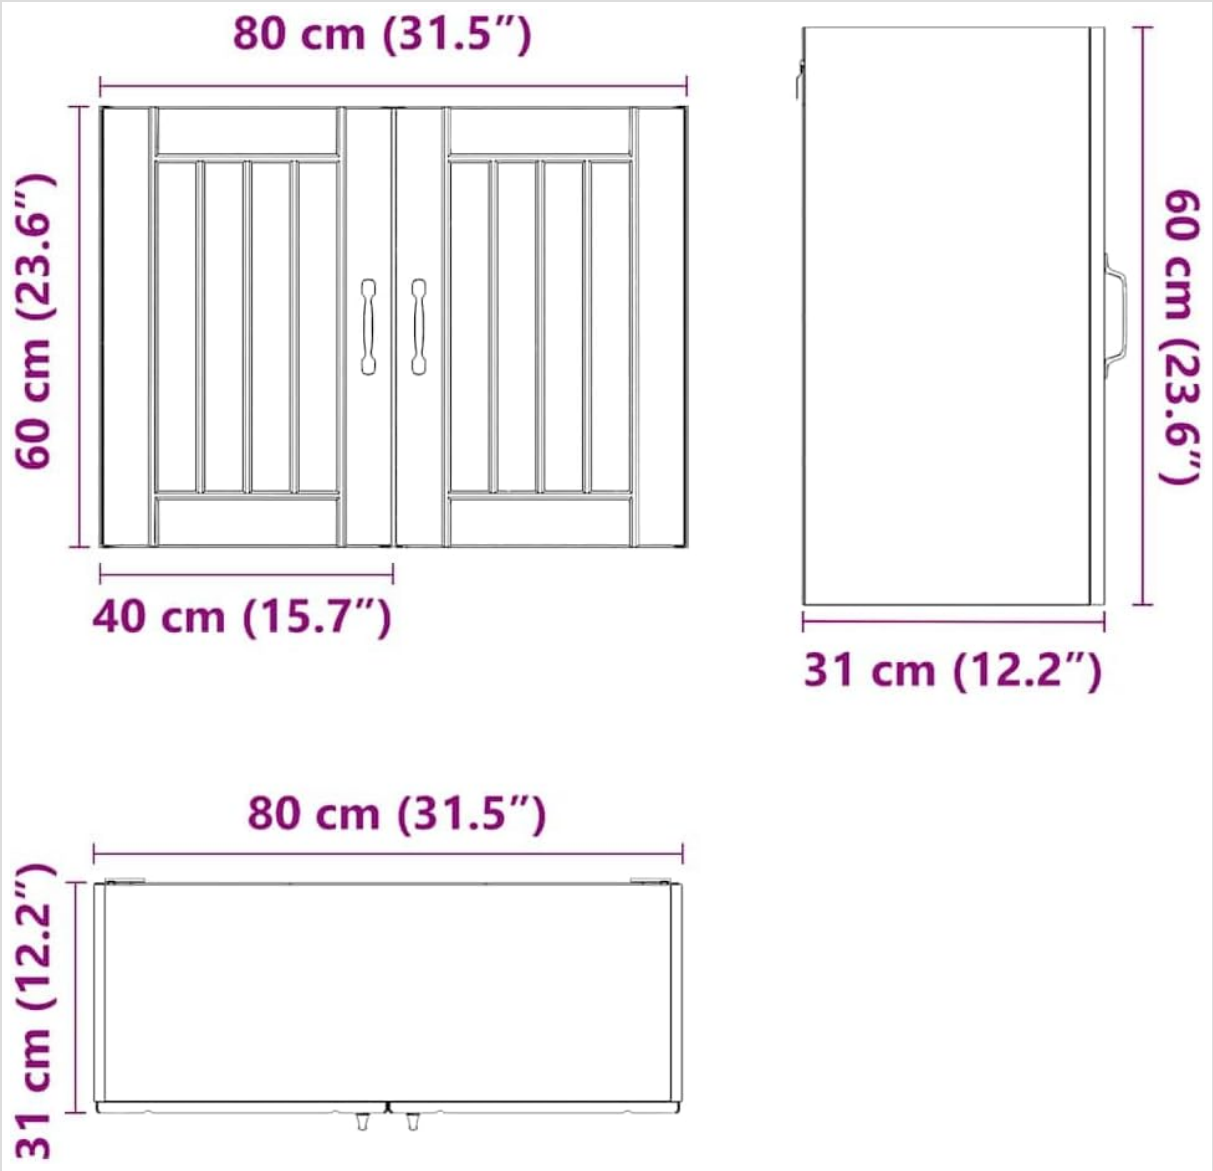


Figure 1: Cabinet Dimensions. This diagram illustrates the overall measurements of the wall cabinet, including its width, height, and depth, which are 80 cm (31.5 inches), 60 cm (23.6 inches), and 31 cm (12.2 inches) respectively.



Figure 2: Rear View with Mounting Hardware. This image displays the back of the cabinet, highlighting the pre-installed brackets designed for wall attachment. Note that wall fixings are not supplied.



Figure 3: Interior View. The cabinet is shown with its doors open, revealing two internal shelves for storage and the robust hinges that support the doors.

## 5. OPERATING THE CABINET

The vidaXL Kitchen Wall Cabinet is designed for straightforward use.

- **Opening/Closing Doors:** Use the handles to gently open and close the cabinet doors. Avoid forcing the doors.
- **Adjusting Shelves:** The shelves can be adjusted to different heights to accommodate various items. To adjust, remove any items from the shelf, lift the shelf, remove the shelf pins, reposition the pins to the desired height, and then place the shelf back on the pins.
- **Storage:** Utilize the two internal shelves for organizing kitchen essentials such as dishes, glasses, or pantry items.

## 6. MAINTENANCE

Proper maintenance will ensure the longevity and appearance of your cabinet.

- **Cleaning:** The smooth surface of the cabinet is easy to clean. Wipe regularly with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary to maintain stability.

## 7. TROUBLESHOOTING

If you encounter any issues with your cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet feels wobbly or unstable.	Loose screws or improper wall mounting.	Ensure all assembly screws are tightened. Verify wall mounting brackets are securely fastened to the wall with appropriate fixings.
Doors do not align or close properly.	Hinges are not adjusted correctly.	Adjust the screws on the hinges to align the doors. Refer to the hinge adjustment section in the detailed assembly diagram.
Shelf is not level.	Shelf pins are not inserted correctly or are uneven.	Remove the shelf and ensure all shelf pins are fully inserted into the corresponding holes at the same height.

## 8. SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model	80 cm White Kitchen Wall Cabinet
Color	White
Material	Engineered wood

Feature	Detail
Finish	Matte
Room Type	Kitchen
Number of Doors	2
Dimensions (W x L x H)	12.2 x 31.5 x 23.6 inches (31 x 80 x 60 cm)
Item Weight	43.8 pounds (19.8 kg)
Maximum Weight Capacity	154 lbs (70 kg)
Assembly Required	Yes
Recommended for Assembly	2 people
Wall Mounting	Wall/ceiling fixtures not included

## 9. WARRANTY AND SUPPORT

---

For warranty information or if you require further assistance, please refer to the documentation provided with your purchase or contact vidaXL customer support directly. Keep your proof of purchase for any warranty claims.