

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Razee](#) /
- › [Razee Kids Play Tent with Padded Mat Instruction Manual](#)

Razee USRP-22 Beige

Kids Play Tent Instruction Manual

Brand: Razee

Model: USRP-22 Beige

INTRODUCTION

Thank you for choosing the Razee Kids Play Tent. This playhouse is designed to provide a safe, comfortable, and imaginative space for children aged 3 years and up. Crafted from soft, durable, and odorless fabric, it offers a delightful environment for indoor and outdoor play, reading, or quiet time. This manual provides essential information for assembly, operation, and maintenance to ensure long-lasting enjoyment.



Image: The Razee Kids Play Tent, fully assembled and decorated.

WHAT'S IN THE BOX

Please ensure all components are present before beginning assembly:

- Tent Canvas (fabric cover)
- Support Poles (for frame construction)
- Padded Mat (for the tent floor)
- Colorful Pennant Banners (decorative accessory)
- Star Lights (decorative string lights)

SETUP AND ASSEMBLY

Assembly of the Razee Play Tent is designed to be straightforward and typically takes only a few minutes. Follow these steps for proper setup:

1. **Unpack Components:** Carefully remove all items from the packaging and lay them out to identify each piece.
2. **Assemble the Frame:** Connect the support poles according to the included assembly guideline. Ensure all pipes are fully inserted into their connectors for a stable structure.
3. **Drape the Tent Canvas:** Carefully place the fabric tent cover over the assembled pole frame. Ensure the tent is oriented correctly, with the main opening facing forward. The tent cover features ties to secure it to the frame.
4. **Position the Padded Mat:** Lay the padded mat inside the tent, ensuring it covers the entire floor area for comfort.
5. **Add Decorations:** Hang the colorful pennant banners and star lights as desired to enhance the play tent's ambiance. The star lights require 2 AA batteries (not included).



Image: Play tent dimensions for reference during setup.



Image: Details of the tent's fabric, window, and ties for securing the entrance.

OPERATING THE PLAY TENT

The Razee Play Tent is designed for versatile use, offering a cozy retreat for various activities.

- **Entrance Flaps:** The tent features front flaps that can be opened for easy access or tied back to keep the entrance open. They can also be closed for privacy or to create a cozy enclosed space.
- **Windows:** The tent includes breathable windows on the sides. These can be rolled up and secured with ties to allow for airflow and visibility, or left down for a more enclosed feel.
- **Star Lights:** The included star lights can be draped along the interior or exterior of the tent to create a magical atmosphere, especially in low light conditions. Ensure batteries are installed correctly.
- **Versatile Use:** This play tent is suitable for various activities such as reading, playing with toys, napping, or simply relaxing. It can be used indoors in bedrooms, family rooms, or playrooms, and outdoors in backyards or parks on dry, flat surfaces.



Image: A child enjoying the spacious interior of the play tent.



Colorful
Pennant Banners



Image: The play tent as an ideal space for imaginative play and special occasions.

CARE AND MAINTENANCE

Proper care will extend the life of your Razee Play Tent:

- **Tent Fabric:** The tent canvas is made from durable fabric. For minor spills, spot clean with a damp cloth and mild soap. For deeper cleaning, the fabric is machine washable. Use a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.
- **Padded Mat:** The included padded mat is also machine washable. Follow the same instructions as the tent fabric for cleaning.
- **Poles:** Wipe poles with a damp cloth if needed. Ensure they are completely dry before storage to prevent mildew.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct sunlight to prevent fading and material degradation.



Image: The tent fabric and padded mat are machine washable for easy cleaning.

TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

Problem	Solution
Tent frame feels unstable or collapses easily.	Ensure all pole connections are fully inserted and secure. Sometimes, a firm push is needed until they click into place.
Tent fabric is wrinkled.	The fabric may arrive with wrinkles due to packaging. Use a steamer or iron on a low setting to smooth out the wrinkles before or after assembly.
Star lights are not working.	Check if the batteries are inserted correctly and are not depleted. Replace with fresh AA batteries if necessary.

Problem	Solution
Missing parts.	Carefully check all packaging materials. If a part is genuinely missing, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	57 x 35.5 x 53 inches
Item Weight	9.31 pounds
Model Number	USRP-22 Beige
Recommended Age	3 years and up
Material	Fabric (odorless, safe for kids)
Included Accessories	Padded Mat, Colorful Pennant Banners, Star Lights

WARRANTY AND SUPPORT

For any questions, concerns, or warranty inquiries regarding your Razee Kids Play Tent, please contact Razee customer support through the retailer's platform or the official Razee website. Please have your model number (USRP-22 Beige) and purchase information ready when contacting support.