

Hermitlux HDW5CW01

Hermitlux Countertop Dishwasher User Manual

Model: HDW5CW01

1. INTRODUCTION

The Hermitlux Countertop Dishwasher is a compact and efficient appliance designed for modern living, especially in small spaces such as apartments, dorms, RVs, and boats. With its built-in 5-liter water tank, it offers unparalleled flexibility, eliminating the need for permanent plumbing installation. This manual provides comprehensive instructions for the safe and effective operation, maintenance, and troubleshooting of your new dishwasher.



Figure 1.1: Hermitlux Countertop Dishwasher in operation.

Key Features:

- **Compact Design:** Measures 16.85" W x 16.73" D x 18.23" H, ideal for limited counter space.
- **5 Place-Setting Capacity:** Accommodates over 30 pieces of kitchenware, including 10.25" dishes.
- **7 Washing Programs + 3 Extra Functions:** Offers versatile cleaning options for various dish types.
- **Water-Saving:** Uses only 5 liters of water per cycle, saving up to 83% compared to handwashing.
- **No Installation Needed:** Features a built-in water tank for easy portability and use.
- **360° All-Around Cleaning:** Equipped with 14 water jets for thorough cleaning.
- **Extra Drying & Stay Fresh:** Provides 60 minutes of hot air drying and 72 hours of automatic ventilation.

COMPACT SIZE BUT LARGE CAPACITY

Wash Up To 30+ Pieces
Of Tableware At A Time



Figure 1.2: Compact size with large capacity, showing dimensions and dish placement.



Figure 1.3: Water saving efficiency compared to traditional handwashing.

2. WHAT'S IN THE Box

Upon unboxing your Hermitlux Countertop Dishwasher, please ensure all the following components are present and in good condition:

- 1 x Hermitlux Countertop Dishwasher 120V
- 1 x Storage rack
- 1 x Cutlery basket
- 1 x Tableware basket
- 1 x Inlet hose
- 1 x Drain hose
- 1 x Fruit basket
- 1 x Cup
- 1 x Hose collar
- 1 x User manual
- 1 x Funnel

List for packing

1 X hermitlux Countertop Dishwasher 120V	
1 X Storage rack	1 X Fruit basket
1 X Cutlery basket	1 X Cup
1 X Tableware basket	1 X Hose collar
1 X Inlet hose	1 X User manual
1 X Drain hose	1 X Funnel



Figure 2.1: All components included in the product packaging.

3. SETUP AND INSTALLATION

Your Hermitlux Countertop Dishwasher offers two convenient water supply modes: the built-in water tank mode and the faucet connection mode. Choose the method that best suits your needs.

3.1 Water Tank Mode (No Hookup Needed)

This mode allows for instant use by simply filling the internal 5-liter water tank. It is ideal for portability and situations where a direct water connection is not available.

1. Place the dishwasher on a stable, level surface. Ensure there is at least 20.08 inches of clearance between your countertop and any overhead cabinets.
2. Open the water inlet cover located on the top of the dishwasher.
3. Use the provided funnel to carefully pour water into the inlet until the dishwasher beeps, indicating the tank is full. This prevents overflow and ensures precise water control.
4. Close the water inlet cover securely.

3.2 Faucet Connection Mode

For continuous water supply, you can connect the dishwasher directly to a faucet.

1. Connect the provided inlet hose to the designated inlet port on the back of the dishwasher.
2. Connect the other end of the inlet hose to your kitchen faucet. Ensure a secure connection to prevent leaks. Check hose compatibility with your faucet; an adapter may be needed.
3. Connect the drain hose to the drain outlet on the back of the dishwasher.
4. Direct the drain hose into a sink or a bucket for wastewater disposal. Ensure the hose is not kinked and allows for proper drainage.



Figure 3.1: Illustration of water tank filling and faucet connection.

4. OPERATING INSTRUCTIONS

Your Hermitlux Countertop Dishwasher is equipped with a user-friendly control panel and multiple washing programs to ensure optimal cleaning for various types of dishes.

4.1 Control Panel Overview

The LED display and touch controls allow for easy program selection and monitoring.

4.2 Washing Programs

Select the appropriate program based on the type and soil level of your dishes:

- **Standard:** For daily dishwashing of normally soiled dishes.
- **Quick:** A faster cycle for lightly soiled dishes.
- **Strong:** For heavily soiled dishes and pots.
- **ECO:** Energy-efficient program for normal loads.
- **Fruit:** A dedicated program for washing fruits and vegetables.
- **Self-clean:** For cleaning the interior of the dishwasher.
- **Glass:** Gentle cycle for delicate glassware.

4.3 Extra Functions

- **Delay:** Set a delayed start time for up to 18 hours to benefit from off-peak power rates or for convenience.
- **Child Lock:** Prevents accidental operation by children.
- **Dry:** Activates the hot air drying function.



Figure 4.1: Overview of washing programs and extra functions.

4.4 Loading Dishes

Proper loading ensures optimal cleaning. Place larger items on the bottom rack and smaller items, cups, and cutlery in the designated areas. The special dish rack and cutlery holder are designed to maximize space.

4.5 360° All-Around Cleaning

The dishwasher features spray arms with 14 water jets that spray from both the top and bottom, providing comprehensive 360° cleaning coverage for a meticulous rinse.

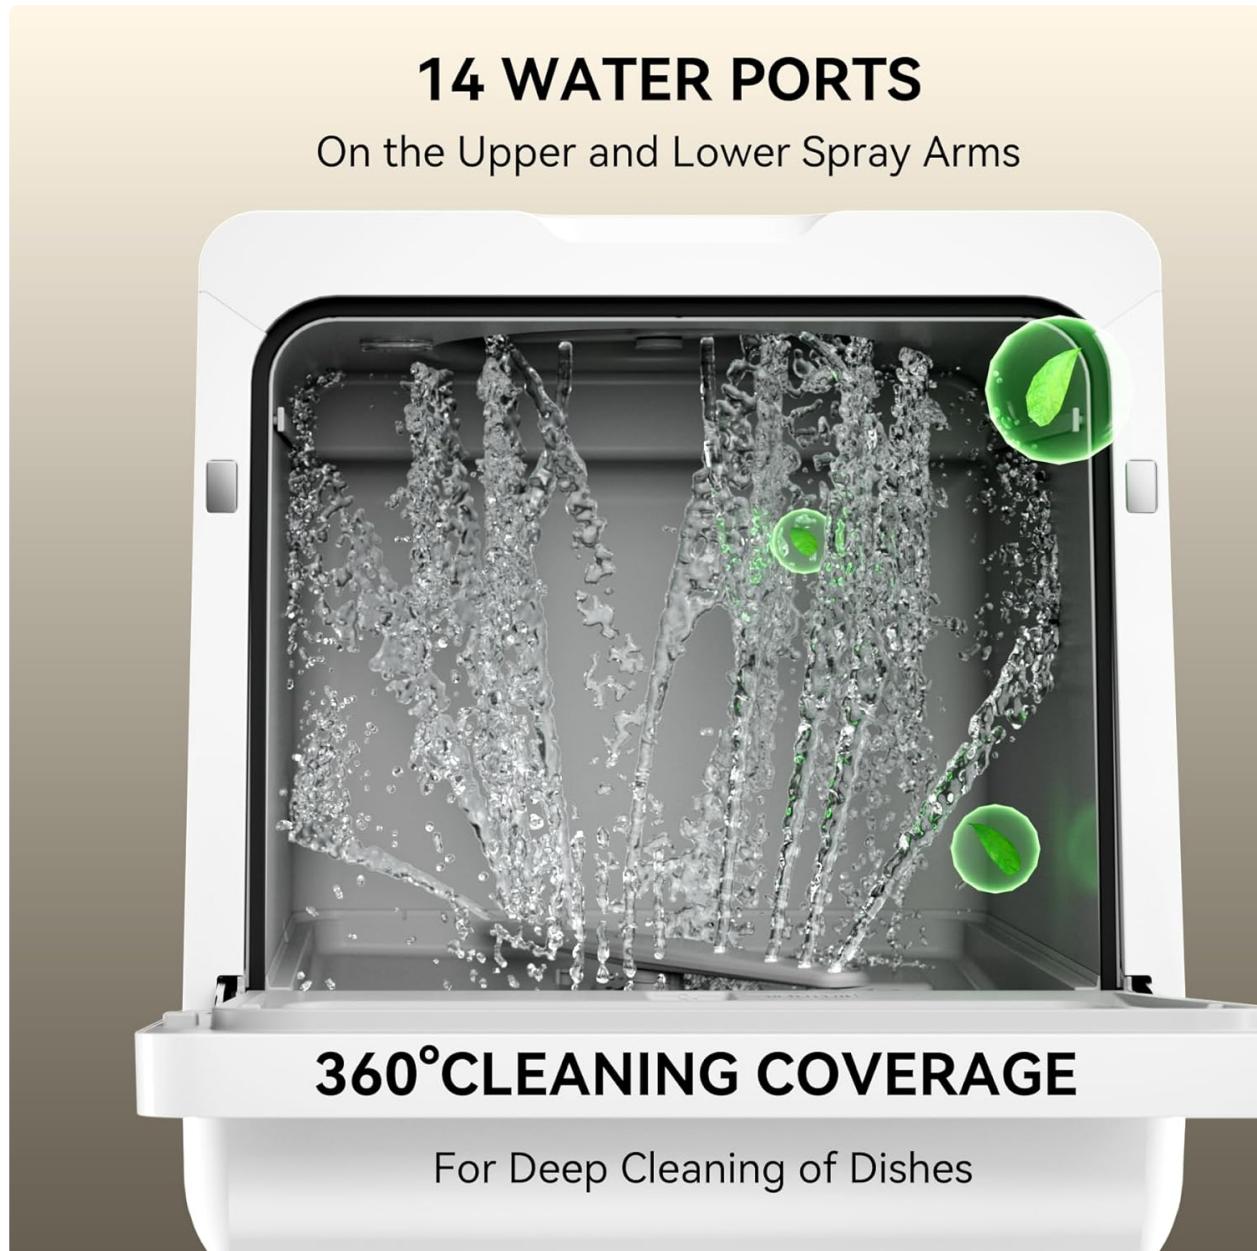


Figure 4.2: Illustration of the 360° cleaning coverage.

4.6 Extra Drying & Stay Fresh

After a wash cycle, the dishwasher offers 60 minutes of hot air drying. Additionally, it provides 72 hours of automatic ventilation to keep dishes dry and odor-free. The drying mode can be used with any cycle except the fruit cycle, or independently.

Drying Mode Up to 140°F

Odorless

Damp Proof

Mildew Proof



Figure 4.3: Benefits of the drying and ventilation features.

4.7 Official Product Video

Video 4.1: Official Hermitlux video demonstrating the countertop portable dishwasher with water tank. This video showcases the product's features and operation.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning the Filter

The efficient food debris filter traps crumbs and grease. It should be cleaned regularly to prevent blockages and ensure proper drainage. Simply unscrew and rinse the filter under running water.

5.2 Self-Clean Program

Utilize the dedicated Self-clean program to maintain the interior hygiene of your dishwasher. This 79-minute cycle at 154°F helps keep the dishwasher clean and free from odors.

5.3 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.

6. TROUBLESHOOTING

If you encounter any issues with your dishwasher, please refer to the following common problems and solutions before contacting customer support.

6.1 Common Issues and Solutions

- Dishwasher not starting:** Ensure the power cord is securely plugged in and the power button is pressed. Check if the door is fully closed and latched.
- Water not filling:** In tank mode, ensure the water tank is filled until the beep sounds. In faucet mode, check the water supply connection and ensure the faucet is turned on.
- Dishes not clean:** Ensure dishes are loaded correctly, not blocking spray arms. Use appropriate detergent and select the correct washing program for the soil level. Clean the filter regularly.
- Excessive noise:** Check for any foreign objects inside the dishwasher that might be interfering with the spray arms or pump. Ensure the dishwasher is level.
- Water remaining in the bottom:** A small amount of residual water after testing is normal. Ensure the drain hose is not kinked or blocked and is properly positioned for drainage.

7. SPECIFICATIONS

Specification	Detail
Form Factor	Countertop
Model Name	HDW5CW01
Item Weight	35.3 Pounds
Product Dimensions	16.73"D x 16.85"W x 18.23"H
Voltage	120 Volts
Water Consumption	5 Liters (per cycle)
Energy Consumption	0.38 Kilowatt Hours (Annual)
Noise Level	50 dB
Material Type	Glass, Plastic
Certification	ETL
Special Features	Portable, Childproof Lock, Glass Washing, Timer Delay, Self Cleaning

8. WARRANTY AND SUPPORT

All Hermitlux dishwashers undergo strict testing to ensure quality and performance. It is normal to find a small amount of residual water inside the unit due to factory testing procedures.

For any questions, concerns, or technical assistance, please do not hesitate to contact Hermitlux customer

service. Our team is dedicated to providing excellent service and support for your product. Please refer to your purchase documentation or the official Hermitlux website for specific warranty details and contact information.