



Manuals.plus /

› Coleshome /

› Coleshome L-Shaped Desk User Manual

Coleshome ZJZ-ZX4D

Coleshome L-Shaped Desk User Manual

Model: ZJZ-ZX4D

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Coleshome L-Shaped Desk. Please read this manual thoroughly before beginning assembly or use to ensure proper setup and safe operation.

The Coleshome L-Shaped Desk is designed to maximize space efficiency, featuring a reversible configuration and integrated storage solutions, including a PC compartment and four fabric drawers. Its robust construction ensures durability for daily use.

SAFETY WARNINGS

WARNING:

- Ensure the desk is properly anchored to prevent any risk of tipping.
- Keep all small parts and packaging materials away from children to prevent choking hazards.
- Do not overload the desk or drawers beyond their specified weight capacity.
- Use appropriate tools and follow all assembly steps carefully to avoid injury.

SETUP AND ASSEMBLY

Your Coleshome L-Shaped Desk is designed for straightforward assembly. All necessary parts are identified, and detailed instructions are included with the product packaging. Please ensure all components are present before starting.

Reversible Design

This versatile computer desk can be assembled in either a right-hand or left-hand configuration to best suit your space and needs. Refer to the assembly instructions for specific steps on how to achieve your desired orientation.



Figure 1: Illustration of the reversible L-shaped desk, demonstrating how it can be configured for both left and right-hand setups to adapt to different room layouts.

Assembly Steps

1. Unpack all components and verify against the parts list provided in the packaging.
2. Identify the main frame components and assemble them according to the chosen left or right configuration.
3. Attach the desktop panels securely to the frame.
4. Install the PC compartment and the four fabric drawers into their designated slots.
5. Ensure all screws and fasteners are tightened for stability.
6. Place the desk in its final position and ensure it is stable and level.



Figure 2: The Coleshome L-Shaped Desk fully assembled and in use, showcasing its spacious desktop, integrated PC compartment, and convenient fabric drawers for storage.

OPERATING INSTRUCTIONS

The Coleshome L-Shaped Desk is designed for optimal functionality in various settings, from home offices to bedrooms. Its features are intended to enhance organization and productivity.

Storage and Organization

The desk includes four fabric drawers and an integrated PC compartment. These features are designed to keep your workspace tidy and essential items within easy reach.

- **Fabric Drawers:** Utilize the four fabric drawers for storing pens, documents, accessories, and other office supplies. These drawers help maintain order and protect contents from dust.
- **PC Compartment:** The dedicated compartment provides a secure and accessible space for your computer tower, helping to keep it off the floor and integrated into the desk design.
- **Headphone Hook:** A convenient hook is provided for hanging headphones or bags, keeping your desktop clear.

4 Étagères de rangement à étages

Vous avez suffisamment de place pour ranger les objets de tous les jours



Figure 3: Detailed view of the four fabric drawers, illustrating their capacity for organizing office supplies and personal items, contributing to a clutter-free workspace.

MAINTENANCE

To ensure the longevity and appearance of your Coleshome L-Shaped Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the anti-scratch and stain-resistant finish.
- **Spills:** Clean up spills immediately to prevent staining.
- **Stability Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain desk stability.
- **Drawer Care:** The fabric drawers can be spot cleaned with a mild detergent if needed. Ensure they are completely dry before returning them to the desk.

TROUBLESHOOTING

If you encounter any issues with your Coleshome L-Shaped Desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose fasteners; uneven floor.	Check and tighten all screws and bolts. Adjust leveling feet if present, or place shims under legs on uneven surfaces.
Drawers do not slide smoothly.	Improper installation; obstruction.	Ensure drawers are inserted correctly and nothing is obstructing their path.
Missing or damaged parts upon delivery.	Shipping damage or packing error.	Contact customer service immediately with details of the missing/damaged parts. Refer to the "Warranty and Support" section.

SPECIFICATIONS

Below are the key specifications for the Coleshome L-Shaped Desk (Model: ZJZ-ZX4D, 100x70cm variant):



Figure 4: Detailed dimensional drawing of the L-shaped desk, including measurements for overall length, width, height, and internal compartment sizes.

Feature	Detail
Brand	Coleshome
Model Number	ZJZ-ZX4D
Color	Black
Product Dimensions (L x W x H)	100 x 70 x 75.5 cm (39.4 x 27.6 x 29.7 inches)
Item Weight	12.1 Kilograms (26.7 lbs)
Material	Metal frame, Wood top, Fabric drawers
Number of Drawers	4
Desk Design	L-Shaped Computer Desk
Special Features	Reversible configuration, Integrated PC compartment, Anti-scratch and stain-resistant surface

WARRANTY AND SUPPORT

Coleshome is committed to customer satisfaction. If your product is damaged, has missing parts, or exhibits scratches upon arrival, our specialized customer service team is available to assist you.

- **Customer Service:** For any issues, please contact our customer service. We aim to resolve any problems within 24 hours.
- **Return Policy:** Refer to your purchase platform's return policy for details on returns and replacements (e.g., Amazon's 30-day return policy).
- **Spare Parts:** Information regarding the availability of spare parts is currently unavailable.

For further assistance, please visit the Coleshome official website or contact the seller directly through your purchase order.

