

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Coeshome](#) /

› [Coeshome L-shaped Desk with 4 Drawers, 120x70cm, Grey Oak - Instruction Manual](#)

Coeshome ZJZ-ZX4D

Coeshome L-shaped Desk with 4 Drawers (Model ZJZ-ZX4D)

Instruction Manual

[Safety Warnings](#) [Package Contents](#) [Setup & Assembly](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

INTRODUCTION

Thank you for choosing the Coeshome L-shaped Desk. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new desk. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: Coleshome L-shaped Desk in Grey Oak, measuring 120x70cm. The desk features an L-shape design, four fabric drawers for storage, and a dedicated compartment for a PC tower. This image shows the overall design and functionality of the desk.

SAFETY WARNINGS

Attention: This product requires self-assembly. Follow the instructions carefully. For heavy parts, seek assistance during assembly to prevent injury or damage.

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are tightened securely before use.
- Do not overload the desk or drawers beyond their intended capacity.
- Keep small parts and packaging materials away from children.
- Avoid direct exposure to excessive moisture or heat.

PACKAGE CONTENTS

Before starting assembly, verify that all components are present and undamaged. Refer to the detailed parts list provided in the assembly instructions included in the package.

- Desk panels (top, side, back)
- Frame components and legs
- 4 Fabric drawers
- PC compartment panels
- Headphone/bag hook
- Assembly hardware (screws, dowels, connectors)
- Assembly tools (e.g., Allen key)
- Detailed assembly instructions

SETUP & ASSEMBLY

The Coleshome L-shaped Desk is designed for straightforward assembly. All parts are clearly labeled, and detailed step-by-step instructions are provided in the included manual. Please follow these steps carefully.

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface. Group similar parts and identify them using the labels provided.
2. **Review Instructions:** Read through the entire assembly manual before starting to familiarize yourself with the process.
3. **Assemble Frame:** Begin by assembling the main frame components according to the diagrams. Ensure all connections are secure but do not overtighten screws until the entire frame is aligned.
4. **Install Panels:** Attach the desk panels, including the top surface and side supports.
5. **Reversible Design:** This desk features a reversible design, allowing the L-shape to be configured for either a left or right orientation. Follow the specific instructions in your manual for your desired setup.
6. **Install PC Compartment and Drawers:** Assemble and integrate the PC compartment and the four fabric drawers into their designated slots.
7. **Attach Hook:** Secure the headphone/bag hook to the desired location on the desk.
8. **Final Tightening:** Once all components are in place and aligned, fully tighten all screws and fasteners.
9. **Positioning:** Carefully move the assembled desk to its final desired location.

Note: For optimal stability, ensure the desk is placed on a level surface. Adjustable feet may be present to compensate for minor unevenness.

OPERATING INSTRUCTIONS

Your Coleshome L-shaped Desk is designed for versatile use in various environments, including offices, bedrooms, and gaming setups.

- **Work Surface:** Utilize the spacious L-shaped surface for your computer, monitor, keyboard, and other work essentials.
- **Fabric Drawers:** The four fabric drawers are ideal for organizing office supplies, documents, and personal items. Pull them out gently for access and push them back fully to keep your workspace tidy and protect contents from dust.
- **PC Compartment:** The integrated compartment is designed to house your PC tower, keeping it off the floor and neatly tucked away.

- **Headphone/Bag Hook:** Use the convenient hook to hang headphones, bags, or other accessories, keeping them within easy reach and off the desk surface.

MAINTENANCE

Proper care will ensure the longevity and appearance of your Coleshome desk.

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as they may damage the scratch and stain-resistant finish.
- **Dusting:** Regularly dust the desk and drawers with a dry, soft cloth.
- **Spills:** Immediately wipe up any spills to prevent staining.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Drawer Care:** The fabric drawers can be spot cleaned with a mild detergent and damp cloth if needed. Allow to air dry completely.

TROUBLESHOOTING

If you encounter any issues during assembly or use, please refer to the following common solutions.

Problem	Solution
Missing or Damaged Parts:	If your desk arrives with damaged, missing, or scratched parts, please contact our professional support team within 24 hours of receipt. Provide your order details and a description of the issue.
Desk is Wobbly:	Ensure all screws and fasteners are fully tightened. Check that the desk is on a level surface. Adjust any leveling feet if present.
Difficulty Assembling:	Review the assembly instructions carefully, ensuring each step is followed in sequence. Do not force parts together. If a step is unclear, refer to the diagrams or contact support.

SPECIFICATIONS

Feature	Detail
Brand	Coleshome
Model Number	ZJZ-ZX4D
Color	Grey Oak (Graue Eich)
Dimensions (L x W x H)	120 x 70 x 75.5 cm (approx. 47.2 x 27.6 x 29.7 inches)
Material	Grey Oak (Chêne gris)
Special Features	L-shape, Reversible, PC Compartment, 4 Fabric Drawers, Headphone/Bag Hook
Item Weight	10.1 Kilograms (approx. 22.27 lbs)
Desk Design	Computer Desk
Top Material Type	Oak Wood

Feature	Detail
Finish Type	Powder Coating

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Coleshome L-shaped Desk, please do not hesitate to contact our professional support team. We are committed to resolving your issues within 24 hours.

Contact Information: Please refer to the contact details provided on your purchase receipt or the Coleshome official website for the most up-to-date support channels.

Note: Information regarding spare parts availability is not provided at this time.

