

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [vidaXL](#) /

› [vidaXL TV Cabinet 4018678: Solid Mango Wood Assembly and Care Manual](#)

## vidaXL 4018678

# vidaXL TV Cabinet 4018678: Assembly and Care Manual

Solid Mango Wood TV Cabinet with 2 Doors and 1 Drawer

## 1. INTRODUCTION

Thank you for choosing the vidaXL TV Cabinet, Model 4018678. This elegant and functional TV cabinet is crafted from robust solid mango wood, engineered wood, and metal, designed to provide ample storage and a stable surface for your entertainment devices. Its unique grain patterns ensure that each piece is distinct. This manual provides essential information for safe assembly, proper use, and effective maintenance to ensure the longevity of your furniture.



Figure 1: Front view of the assembled vidaXL TV Cabinet.

## 2. SAFETY INFORMATION

- Read all instructions carefully:** Before beginning assembly, read and understand all steps.
- Two-person assembly recommended:** Due to the size and weight of the components, assembly by two adults is highly recommended to prevent injury and damage.
- Keep children and pets away:** Small parts and packaging materials can be a choking hazard.

- **Use on a flat, stable surface:** Assemble the cabinet on a clean, level, and soft surface (e.g., carpet) to avoid scratching the furniture or floor.
- **Do not overtighten screws:** Overtightening can strip screws or crack wood.
- **Check for stability:** After assembly, ensure the cabinet is stable and all connections are secure.
- **Weight limits:** Do not overload the cabinet. Place heavier items on lower shelves or in the center.
- **Anti-tip kit (if included):** If an anti-tip kit is provided, it is strongly recommended to secure the cabinet to a wall to prevent tipping, especially in households with children.

### 3. PACKAGE CONTENTS

Please check that all components and hardware are present before starting assembly. If any parts are missing or damaged, please contact vidaXL customer support.

- Top Panel
- Bottom Panel
- Side Panels (2)
- Back Panel
- Middle Shelf / Divider Panels
- Drawer Components (front, back, sides, bottom)
- Door Panels (2)
- Legs (4)
- Hardware Pack (screws, dowels, cam locks, hinges, drawer slides, handles, etc.)

### 4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have a second person assist you.

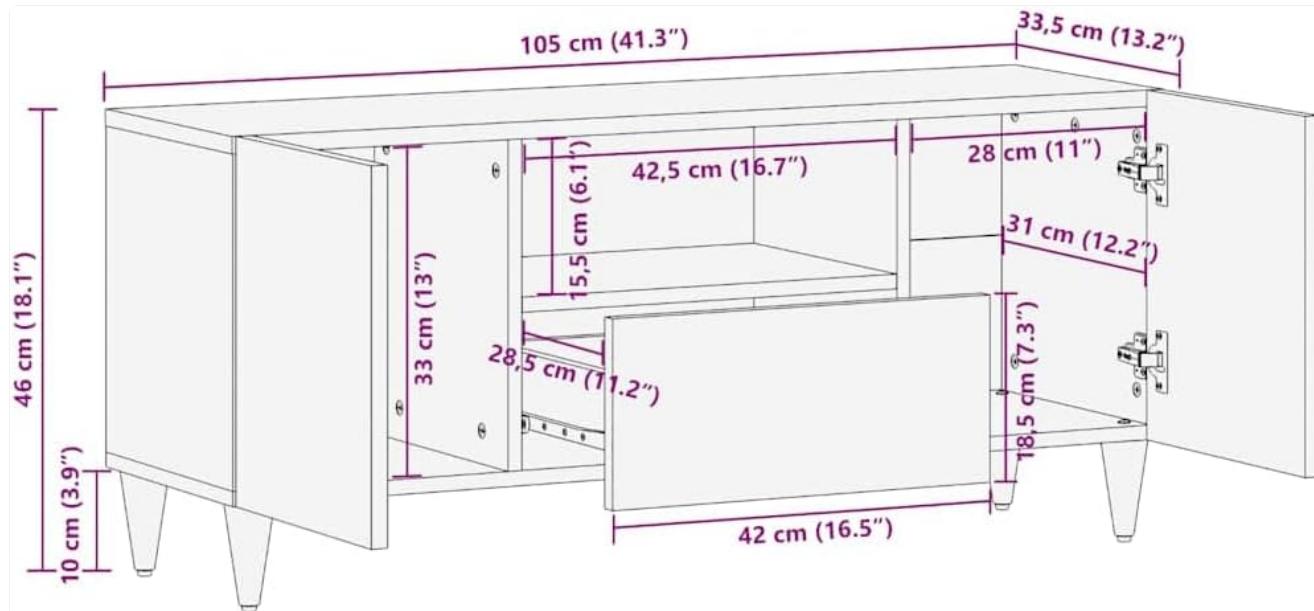


Figure 2: Dimensional overview of the TV Cabinet.

1. **Prepare the Workspace:** Clear a spacious, flat, and clean area. Lay down a blanket or cardboard to protect the furniture parts and your floor.
2. **Attach Legs:** Secure the four legs to the bottom panel using the provided screws. Ensure they are firmly

attached and oriented correctly.

3. **Assemble the Frame:** Attach the side panels to the bottom panel. Then, insert any fixed middle dividers or shelves. Secure these connections using dowels, screws, or cam locks as indicated in the hardware instructions.
4. **Install Back Panel:** Slide or nail the back panel into place. This adds stability to the structure.
5. **Attach Top Panel:** Carefully place and secure the top panel to the assembled frame.
6. **Assemble the Drawer:** Follow the specific instructions for assembling the drawer box (front, back, sides, bottom). Install the drawer slides onto the drawer box and the corresponding slides inside the cabinet opening. Insert the assembled drawer into the cabinet.
7. **Attach Doors:** Mount the hinges to the doors and then attach the doors to the cabinet frame. Adjust the hinges as needed to ensure the doors align properly and close smoothly.
8. **Install Handles:** Attach the handles to the drawer front and door panels.
9. **Final Check:** Verify that all screws are tightened, and the cabinet is stable. Gently move the cabinet to its desired location.

## 5. OPERATING INSTRUCTIONS

---

This TV cabinet is designed for convenient storage and display.

- **Storage:** Utilize the two doors and one drawer to store media accessories, books, magazines, or other household items. The central open compartment is ideal for media players, gaming consoles, or soundbars.
- **Top Surface:** The sturdy top surface is suitable for placing your television, decorative items, or plants. Ensure the weight is evenly distributed and does not exceed the cabinet's capacity.
- **Cable Management:** If applicable, use any pre-drilled holes in the back panel for cable routing to keep wires tidy and out of sight.



Figure 3: Detail of the drawer interior.

## 6. MAINTENANCE AND CARE

---

Proper care will help maintain the beauty and integrity of your mango wood TV cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture. Dry immediately with a clean cloth.
- **Dusting:** Regularly dust with a soft, dry cloth to prevent buildup.
- **Protect from Heat and Moisture:** Use coasters under drinks and avoid placing hot items directly on the wood surface. Wipe up spills immediately.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or cracking of the wood.
- **Humidity Control:** Maintain a consistent humidity level in your room to prevent wood from expanding or contracting excessively.
- **Periodic Inspection:** Periodically check all screws and fittings and tighten them if necessary to ensure stability.



Figure 4: Detail of the mango wood surface and pattern.

## 7. TROUBLESHOOTING

---

- **Wobbly Cabinet:** Ensure the cabinet is on a level surface. Check and tighten all assembly screws. If necessary, use furniture levelers under the legs.
- **Drawer Sticks or Doesn't Close Smoothly:** Check that the drawer slides are correctly installed and aligned on both the drawer and the cabinet. Ensure no objects are obstructing the drawer's path.
- **Doors Misaligned:** Adjust the hinges on the doors. Most hinges allow for minor adjustments in height, depth, and side-to-side to achieve proper alignment.
- **Scratches or Dents:** For minor imperfections, wood repair kits or markers can be used. For significant damage, professional repair may be required.

## 8. SPECIFICATIONS

---

Feature	Detail
---------	--------

Feature	Detail
Model Number	4018678
Brand	vidaXL
Material	Solid Mango Wood, Engineered Wood, Metal
Color	Natural Mango Wood with White Paint Screen
Overall Dimensions (W x D x H)	105 x 33.5 x 46 cm (41.3 x 13.2 x 18.1 inches)
Leg Height	20 cm (7.9 inches)
Number of Doors	2
Number of Drawers	1
Item Weight	20.21 kg (44.56 lbs)
Assembly Required	Yes

## 9. WARRANTY AND SUPPORT

vidaXL products are manufactured with quality and care. For any questions regarding assembly, missing parts, or product defects, please refer to your purchase documentation for warranty details and contact information for vidaXL customer support. Please have your model number (4018678) and purchase date ready when contacting support.



Figure 5: Original Hand Made Product tag, highlighting the unique nature of each item.