

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MIUZZY](#) /
- › [MIUZZY M243 Cordless Vacuum Cleaner Instruction Manual](#)

MIUZZY M243

MIUZZY M243 Cordless Vacuum Cleaner Instruction Manual

Model: M243

[Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SETUP

1.1 Unboxing and Components

Carefully remove all components from the packaging. Ensure all parts listed below are present.



Image: All components of the MIUZZY M243 Cordless Vacuum Cleaner.

- Main Vacuum Unit
- Adjustable Extension Tube
- Motorized Floor Brush with LED Light
- Rechargeable Battery Pack
- Power Adapter
- 2-in-1 Crevice Tool
- Sofa Brush
- Wall Mount Bracket with Screws
- Cleaning Tool
- Spare HEPA Filter
- User Manual

1.2 Assembly

Follow these steps to assemble your vacuum cleaner:

1. Insert the Adjustable Extension Tube into the Main Vacuum Unit until it clicks securely.
2. Attach the Motorized Floor Brush to the other end of the Extension Tube, ensuring it locks into place.
3. Slide the Rechargeable Battery Pack into the designated slot on the Main Vacuum Unit until it clicks.
4. For handheld use, detach the Extension Tube and attach desired accessories (2-in-1 Crevice Tool or Sofa Brush) directly to the Main Vacuum Unit.



Image: Assembly diagram for the MIUZZY M243 Cordless Vacuum Cleaner.

1.3 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

- Connect the Power Adapter to the charging port on the battery pack.
- Plug the adapter into a wall outlet.
- The battery indicator lights will show charging status. A full charge typically takes 4-5 hours.
- The battery pack is removable for convenient charging or swapping.



Image: Removable Battery Pack.



Image: Power Adapter.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off and Speed Adjustment

To power on the vacuum, press the power button located on the main unit. The vacuum features three suction modes: Eco, Medium, and Max. Press the mode button to cycle through these settings to match your cleaning needs. The battery life varies by mode:

- **Eco Mode:** Up to 50 minutes (with Long Crevice/Dust Brush)
- **Medium Mode:** Up to 30 minutes
- **Max Mode:** Up to 15 minutes

The vacuum provides up to 28,000Pa suction power in Max mode for deep cleaning.

2.2 Usage Modes and Attachments

The MIUZZY M243 is designed for versatile cleaning across various surfaces and areas.

- **Stick Vacuum Mode:** Ideal for cleaning hard floors and carpets. The motorized floor brush effectively picks up dust, dirt, and pet hair.

Autonomie Prolongée de la Batterie
Dites adieu aux recharges fréquentes

UP TO
45
mins

6*2500mAh
Grande capacité

45minutes
Durée d'exécution maximale

4-5H
Temps de charge

* Testé en mode Eco avec accessoire. La durée d'exécution réelle peut varier en fonction du mode d'alimentation, température de la batterie, type de sol et accessoire utilisé.

The advertisement features a central image of the MIUZZY M243 vacuum in stick mode. A blue circular graphic on the left contains the text 'UP TO 45 mins'. On the right, three blue icons are stacked vertically: a battery icon with '6*2500mAh Grande capacité', a battery with a lightning bolt icon with '45minutes Durée d'exécution maximale', and a clock icon with '4-5H Temps de charge'. A blue arrow curves from the bottom of the clock icon back to the vacuum.

Image: Vacuum in Stick Mode.

- **Handheld Vacuum Mode:** Detach the extension tube to use as a lightweight handheld vacuum for furniture, stairs, and car interiors.

Rangement Facile et Accès Pratique

Sans besoin de support supplémentaire ou de montage mural



Image: Vacuum in Handheld Mode.

- **2-in-1 Crevice Tool:** Use for narrow gaps, corners, and edges.

Réalisez Facilement Diverses Tâches de Nettoyage



Image: Handheld with Crevice Tool.

- **Sofa Brush:** Ideal for cleaning upholstery, pet beds, and mattresses.

Aspiration Puissante

Offre une aspiration de 28 000 Pa* pour un nettoyage efficace



Image: Handheld with Sofa Brush.

2.3 LED Headlights and Self-Standing Design

The motorized floor brush is equipped with LED headlights to illuminate dust and debris in dark areas, ensuring thorough cleaning. The vacuum also features a self-standing design, allowing it to stand upright on its own for convenient pauses during cleaning or storage.

Performances Silencieuses de 62dB

Faible bruit mais puissant, laisse les surfaces propres avec un minimum d'effort



Image: Self-Standing Vacuum.

3. MAINTENANCE

3.1 Emptying the Dust Cup

To maintain optimal suction, empty the dust cup regularly, ideally after each use. Press the release button to detach the dust cup from the main unit and empty its contents into a trash bin.



Image: Emptying the Dust Cup.

3.2 Cleaning the Filters

The vacuum features a multi-layer MIF filter and a 5-stage cyclone system. Clean the filters regularly (e.g., every 2-4 weeks, depending on usage) to prevent clogging and maintain suction power. Rinse the filters with cold water and ensure they are completely dry before reinserting.



Image: MIF Filter.

3.3 Cleaning the Brush Roll

Periodically check the motorized brush roll for tangled hair or debris. Use the provided cleaning tool to cut and remove any tangled hair. The brush roll can be easily removed for thorough cleaning.



Image: Removable Brush Roll.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced Suction Power	Dust cup full, filters clogged, or brush roll tangled.	Empty dust cup, clean/replace filters, clear brush roll of debris.
Vacuum Not Turning On	Battery not charged or not properly inserted.	Ensure battery is fully charged and correctly seated in the unit.
Brush Roll Not Rotating	Hair or debris tangled in the brush roll.	Turn off the vacuum, remove the brush roll, and clear any obstructions.
Short Battery Runtime	Operating in Max mode, or battery needs replacement.	Use lower suction modes for longer runtime. If battery life significantly degrades, consider replacing the battery.
Clogging Reminder (Indicator Light)	Blockage in the air path or dust cup.	Check and clear any blockages in the extension tube, dust cup, or brush head.

5. SPECIFICATIONS

Brand: MIUZZY

Model Name: M243 Cordless Vacuum Cleaner

Special Feature: Cordless, Lightweight, Self-Standing, LED Headlights

Suction Power: Up to 28,000Pa

Filter Type: Multi-layer MIF filter, 5-stage cyclone system

Included Components: Battery, Extension Tube, Floor Brush, Crevice Tool, Sofa Brush, Charger, Wall Mount,

Cleaning Tool

Capacity: 1.2 Liters (Dust Cup)

Wattage: 250 watts

Form Factor: Stick, Handheld

Product Dimensions: 5"L x 5"W x 5"H (Main Unit)

Noise Level: 62 Decibels

Battery Life: Up to 50 minutes (Eco mode)

Number of Speeds: 3 (Eco, Medium, Max)

Item Weight: 7 pounds

Power Source: Battery Powered

Surface Recommendation: Hard Floors, Short-Pile Carpet, Hardwood Floors, Pet Hair, Car, Stair, Sofa, Bed, Curtain, Desk

6. WARRANTY AND SUPPORT

MIUZZY is committed to providing high-quality products and customer satisfaction. Your MIUZZY M243 Cordless Vacuum Cleaner comes with the following:

- **90-Day Full Refund:** If you are not completely satisfied, you may be eligible for a full refund within 90 days of purchase.
- **24-Month Warranty:** The product is covered by a 24-month warranty against manufacturing defects.
- **Customer Service:** For any inquiries or support, our customer service team is available to assist you within 4-24 hours. Please refer to the contact information provided in your product packaging or on the official MIUZZY website.