



Manuals.plus /

- › CIRCLE JOY /
- › CIRCLE JOY Rechargeable Milk Frother User Manual

CIRCLE JOY KJBQ-65DX-BK

CIRCLE JOY Rechargeable Milk Frother User Manual

Model: KJBQ-65DX-BK

Brand: CIRCLE JOY

1. INTRODUCTION

Thank you for choosing the CIRCLE JOY Rechargeable Milk Frother. This handheld electric frother is designed to create creamy, rich foam for a variety of beverages, including coffee, lattes, cappuccinos, matcha, and hot chocolate. Its powerful motor and dual-ring whisk can produce foam within 20 seconds, enhancing your drink experience. This manual provides essential information for the safe and efficient use of your frother.



Image: The CIRCLE JOY Rechargeable Milk Frother, its protective storage tube, a USB-C charging cable, and a visual representation of frothed milk in coffee.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the frother away from children.
- Do not immerse the main body of the frother in water or other liquids. Only the whisk head is designed for immersion.
- Ensure the frother is fully charged before first use.
- Do not operate the frother if it is damaged or malfunctioning.
- Use only the provided USB-C cable for charging.
- Avoid touching the whisk while the frother is operating.
- This appliance is intended for household use only.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x CIRCLE JOY Rechargeable Milk Frother (with integrated dual spring whisk)
- 1 x Protective Storage Tube
- 1 x USB-C Charging Cable
- 1 x User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your CIRCLE JOY Milk Frother:



Image: A diagram illustrating the key components of the frother: (1) One Touch Button, (2) Ergonomical Handle, and (3) Stainless Steel Whisk, along with its overall dimensions (22cm/8.66inch length, 9cm/3.54inch whisk length).

- **One Touch Button:** Located at the top, this button activates and deactivates the frother.
- **Ergonomical Handle:** Designed for comfortable grip and ease of use.
- **Stainless Steel Whisk:** Features a durable, food-grade 304 stainless steel dual-spring design for efficient frothing. This part is non-removable.
- **USB-C Charging Port:** Located on the handle for convenient recharging.
- **Protective Storage Tube:** A transparent tube that covers the whisk for hygiene and safe storage.

DOUBLE SPRING WHISK & 304 FOOD-GRADE SAFE MATERIAL

The double spring whisk produces richer and creamier foam than a single whisk, just like a professional barista!



Image: A close-up view of the dual spring whisk immersed in a glass of frothed coffee, highlighting the 304 stainless steel mixing head.

5. SETUP

5.1 Initial Charging

Before first use, fully charge your milk frother. The frother is equipped with a rechargeable Lithium Ion

battery.

1. Connect the provided USB-C charging cable to the charging port on the frother.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a USB port.
3. The indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 2.5 hours.



Image: A hand connecting the USB-C charging cable to the frother, indicating its USB rechargeable feature.

5.2 Cleaning Before First Use

It is recommended to clean the whisk head before using the frother for the first time. Refer to the 'Maintenance and Cleaning' section for detailed instructions.

6. OPERATING INSTRUCTIONS

The CIRCLE JOY Milk Frother is designed for simple, one-touch operation.

1. Pour your desired liquid (milk, coffee, etc.) into a cup or container. For best frothing results, ensure the liquid level allows space for foam expansion.
2. Remove the protective storage tube from the frother.
3. Immerse the stainless steel whisk head into the liquid. Ensure the whisk is fully submerged but not touching the bottom or sides of the container to avoid splashing.
4. Press the One Touch Button located at the top of the frother to start the whisking action. The frother operates at approximately 13,000 rotations per minute.
5. Move the frother gently up and down in the liquid for about 15-20 seconds, or until the desired foam consistency is achieved.
6. Press the One Touch Button again to turn off the frother.
7. Carefully remove the frother from the frothed liquid.



Image: The milk frother's whisk creating a vortex in a liquid, illustrating its high-speed rotation of 13,000 rotations per minute.

Tips for Best Results:

- For milk frothing, cold milk (especially whole milk) generally produces the best and most stable foam.
- Heat milk to approximately 150-160°F (65-70°C) before frothing for hot beverages.
- Do not overfill your cup to prevent spills.

ENJOY PERFECT DRINKS ANYWHERE



Image: A collage showing the portable frother being used in different environments, including a home kitchen, an outdoor camping setup, and an office, emphasizing its versatility for enjoying drinks anywhere.

7. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your frother.

7.1 Cleaning the Whisk Head

1. After each use, immediately rinse the whisk head under running water.
2. For a more thorough clean, immerse the whisk head in a glass of warm, soapy water.
3. Briefly press the One Touch Button to activate the frother, allowing the whisk to clean itself in the soapy water.
4. Rinse the whisk head again with clean water.

5. Turn off the frother and wipe the whisk head dry with a clean cloth.
6. **Important:** The frother's main body is not waterproof. Do not immerse it in water. The product care instructions specify 'Hand Wash Only' for the whisk part.

7.2 Storage

After cleaning and drying, place the protective storage tube over the whisk head. This protects the whisk from dust and damage, making it convenient for storage in drawers or for travel.



Image: The CIRCLE JOY Milk Frother, enclosed in its protective storage tube, being placed into a kitchen drawer, demonstrating its convenient and compact storage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Battery is depleted.	Charge the frother using the provided USB-C cable.
Frother operates weakly or slowly.	Low battery charge.	Recharge the frother.
Liquid does not froth effectively.	Liquid type or temperature is not ideal. Whisk is not fully submerged.	Use cold whole milk for best results, or heat milk to optimal temperature. Ensure whisk is fully submerged and not touching container walls.
Splashing occurs during operation.	Whisk is not deep enough or container is too full.	Ensure whisk is adequately submerged. Do not overfill the cup.

9. SPECIFICATIONS

- **Brand:** CIRCLE JOY
- **Model Name:** KJBQ-65
- **Item Model Number:** KJBQ-65DX-BK
- **Color:** Rechargeable/Black
- **Material:** Acrylonitrile Butadiene Styrene (ABS) (Handle), Food-grade 304 Stainless Steel (Whisk)
- **Special Feature:** Portable
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Wattage:** 10 watts
- **Item Weight:** 165 Grams (5.8 ounces)
- **Package Dimensions:** 12.4 x 1.65 x 1.61 inches
- **Product Care Instructions:** Hand Wash Only (whisk head)

10. WARRANTY AND SUPPORT

CIRCLE JOY offers a 1-year after-sale service and a 60-day satisfaction guarantee for this product. If you encounter any issues or have questions regarding your CIRCLE JOY Rechargeable Milk Frother, please contact customer support. We are committed to ensuring your satisfaction and will assist you even after the standard return window has closed.

For support, please refer to the contact information provided with your purchase documentation or visit the official CIRCLE JOY website.