

[Manuals.plus](#) /

› [Effireli](#) /

› N2QAYB001113 Replacement Remote for Panasonic Blu-ray Recorder DMR-BCT765 DMR-BST760 DMR-BST765 DMR-BCT760EG DMR BCT765 DMR BCT760 DMR-BCT76 DMR-BCT760 User Manual

Effireli YK-N2QAYB001113

N2QAYB001113 Replacement Remote Control User Manual

Effireli

1. INTRODUCTION

This manual provides comprehensive instructions for the Effireli N2QAYB001113 Replacement Remote Control, specifically designed for use with various Panasonic Blu-ray Recorders. This remote offers a seamless replacement experience, requiring no complex programming or setup. Simply insert batteries and begin operation.

Compatible Models:

- DMR-BCT765
- DMR-BST760
- DMR-BST765
- DMR-BCT760EG
- DMR BCT765
- DMR BCT760
- DMR-BCT76
- DMR-BCT760

If your specific model number is not listed above or your original remote appears different, please contact customer support to confirm compatibility.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery cover by sliding it back into place until it clicks securely.

2.2 No Programming Required

This replacement remote control is pre-programmed and ready to use with compatible Panasonic Blu-ray Recorders immediately after battery installation. No additional setup, pairing, or code entry is necessary.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the layout and functions of the remote control buttons. Point the remote directly at your Panasonic Blu-ray Recorder for optimal performance.



Image: Front view of the Effireli N2QAYB001113 Replacement Remote Control, showing all buttons and their labels.

3.1 Power and Input Controls

- **Power (Red button with circle and line):** Turns the Blu-ray Recorder on or off.
- **INPUT AV:** Selects the input source (e.g., HDMI 1, HDMI 2, AV).
- **INPUT SELECT:** Cycles through available input sources.

3.2 TV Control Buttons

- **TV Power (Red button with circle and line, within TV box):** Turns the connected TV on or off.
- **VOL +/-:** Adjusts the TV volume up or down.
- **CH ^/V:** Changes the TV channel up or down.

3.3 Numeric Keypad and Channel/Page

- **0-9:** Enters channel numbers or numerical values.
- **PAGE ^/V:** Navigates through pages in menus or guides.

3.4 Navigation and Confirmation

- **Arrow Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms a selection or enters a menu.

3.5 Playback Controls

- **Play (Triangle pointing right):** Starts playback of media.
- **Pause (Two vertical bars):** Pauses playback.
- **Stop (Square):** Stops playback.
- **Rewind (Double left arrows):** Rewinds media.
- **Fast Forward (Double right arrows):** Fast forwards media.
- **Skip Back (Vertical bar with double left arrows):** Skips to the previous track/chapter.
- **Skip Forward (Vertical bar with double right arrows):** Skips to the next track/chapter.
- **REC (Red circle):** Initiates recording.
- **x1.3:** Changes playback speed (e.g., 1.3x speed).
- **SLOW:** Activates slow-motion playback.
- **-10s:** Skips back 10 seconds.
- **+60s:** Skips forward 60 seconds.
- **REWIND LIVE TV:** Rewinds live television.
- **PAUSE LIVE TV:** Pauses live television.

3.6 Special Function Buttons

- **LAST VIEW:** Returns to the last viewed channel or input.
- **RADIO/TV:** Toggles between radio and TV modes.
- **INTERNET:** Accesses internet features or web browser.
- **NETFLIX:** Direct access button for the Netflix application.
- **STATUS (i):** Displays current status information.
- **EXIT (X):** Exits the current menu or function.
- **GUIDE (Green button):** Opens the Electronic Program Guide (EPG).
- **VIDEO MENU:** Accesses video-related menus.
- **FUNCTION MENU:** Opens the main function menu.
- **OPTION:** Displays context-sensitive options.
- **RETURN:** Returns to the previous screen or menu.
- **AUDIO (Red):** Adjusts audio settings or selects audio tracks.

- **DRIVE SELECT (Green):** Selects the recording or playback drive.
- **TEXT (Yellow):** Activates or deactivates Teletext.
- **STTL (Blue):** Activates or deactivates subtitles.

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as they may damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of old batteries responsibly according to local regulations.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the Blu-ray Recorder's infrared sensor.
- **Remote Sensor:** Ensure the infrared sensor on the Blu-ray Recorder is clean and not covered.
- **Test Remote:** You can test if the remote is emitting an IR signal by pointing it at a smartphone camera (most smartphone cameras can detect IR light) and pressing a button. You should see a light flash on the phone screen.

5.2 Limited Range or Intermittent Operation

- **Battery Level:** Low batteries can reduce the remote's effective range. Replace them.
- **Interference:** Strong light sources (like direct sunlight or certain types of fluorescent lighting) can interfere with IR signals. Try operating the remote in different lighting conditions.
- **Distance:** Ensure you are within the typical operating range of the device (usually up to 20 feet or 6 meters).

6. SPECIFICATIONS

Feature	Detail
Brand	Effireli

Model Number	YK-N2QAYB001113
Connectivity Technology	Infrared
Compatible Devices	DVD/Blu-ray Player
Max Number of Supported Devices	1
Special Feature	No Programming Required
Item Weight	2.82 ounces
Package Dimensions	7.09 x 1.77 x 0.79 inches

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Effireli replacement remote control comes with a **30-day money-back guarantee** from the date of purchase. Additionally, it is covered by a **12-month warranty** against manufacturing defects. Returns and exchanges are accepted within this warranty period for eligible issues.

7.2 Customer Support

For any questions, concerns, or assistance with your remote control, please refer to the contact information provided by your retailer or the manufacturer. When contacting support, please have your product model number (YK-N2QAYB001113) and purchase details ready.