

- Manuals.plus /
- › [Effireli](#) /
 - › Effireli RM-ED011 Replacement Remote Control User Manual for Sony Bravia TVs

Effireli YK-RM-ED011

Effireli RM-ED011 Replacement Remote Control User Manual

Brand: Effireli | Model: YK-RM-ED011

1. PRODUCT OVERVIEW

The Effireli RM-ED011 is a direct replacement remote control designed for various Sony Bravia television models. This remote is engineered for immediate use without the need for any programming or complex setup procedures. Simply insert batteries and begin operating your compatible Sony TV.

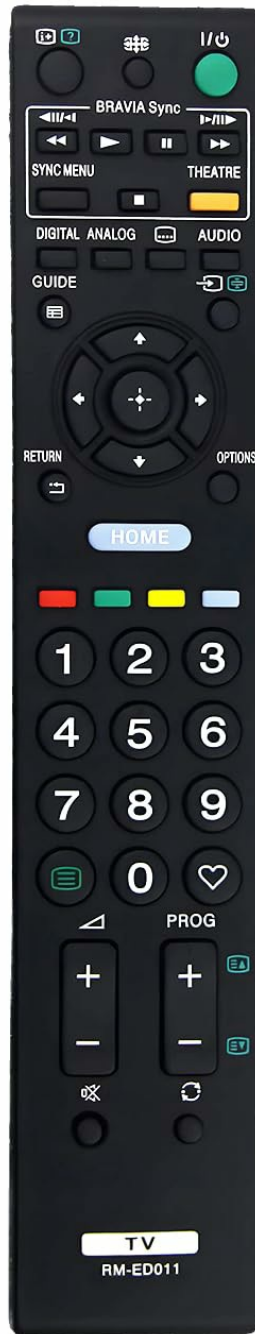


Image: The Effireli RM-ED011 replacement remote control, showing its standard button layout and ergonomic design.

Key Features:

- **No Programming Required:** Ready to use out of the box.
- **Direct Replacement:** Functions identically to the original Sony RM-ED011 remote.
- **Infrared Technology:** Standard IR signal for reliable communication with your TV.

2. SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for immediate use with compatible Sony TV models.

3. OPERATING INSTRUCTIONS

To operate your television with the Effireli RM-ED011 remote control, ensure there is a clear line of sight between the remote's infrared emitter and the TV's IR receiver. Point the remote directly at the television.

Basic Functions:

- **Power Button:** Press to turn the TV on or off.
- **Channel Buttons (CH +/-):** Press to change channels up or down.
- **Volume Buttons (VOL +/-):** Press to increase or decrease the volume.
- **Mute Button:** Press to mute or unmute the TV sound.
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Menu/Home Button:** Access the TV's main menu or smart TV interface.
- **Navigation Buttons (Arrows, Enter):** Use to navigate through menus and confirm selections.

Refer to your Sony TV's original user manual for specific functions of advanced buttons if they are present on this replacement remote.

4. COMPATIBLE MODELS

The Effireli RM-ED011 replacement remote control is compatible with a wide range of Sony Bravia TV models, including but not limited to:

- KDL-46W4210
- KDL-46W4220
- KDL-46W4230
- KDL-46W4500
- KDL-46W4730
- KDL-52W4000
- KDL-52W4210
- KDL-52W4220
- KDL-52W4500
- KDL-37V4500
- KDL-37V4710
- KDL-40E4000
- KDL-40E4020
- KDL-40E4030
- KDL-40E4050
- KDL-40W4000
- KDL-40W4210
- KDL-40W4220
- KDL-26E4000
- KDL-26E4020

- KDL-26E4030
- KDL-26E4050
- KDL-26V4500
- KDL-26V4710
- KDL-26V4720
- KDL-26V4730
- KDL-32E4000
- KDL-32E4020
- KDL-32E4030
- KDL-32E4050
- KDL-32V4500
- KDL-32V4710
- KDL-32V4720
- KDL-32V4730
- KDL-32W4000
- KDL-32W4210
- KDL-32W4220
- KDL-37V4500
- KDL-40W4230
- KDL-40W4500
- KDL-40W4730
- KDL-46W4000

If your specific Sony TV model is not listed or if your original remote control has a significantly different appearance, please contact customer support to confirm compatibility.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old or depleted batteries with new ones.
 - Check for any obstructions between the remote and the TV's IR receiver.
 - Confirm that the remote is pointed directly at the TV.
- **Some buttons not working:**
 - This remote is a direct replacement for the RM-ED011. If your original remote had different functions or buttons, some specific features might not be supported.
 - Ensure the TV is powered on and not in a standby mode that restricts certain functions.
- **Remote requires programming:**
 - The Effireli RM-ED011 is designed to work without programming. If your TV requires programming for this remote, it may indicate an incompatibility or an issue with the TV's IR receiver.

6. SPECIFICATIONS

Brand	Effireli
-------	----------

Model Number	YK-RM-ED011
Special Feature	No Programming Required
Connectivity Technology	Infrared (IR)
Compatible Devices	Sony Televisions (KDL series)
Max Number of Supported Devices	1
Item Weight	0.08 Kilograms

7. WARRANTY AND SUPPORT

Warranty Information:

This product comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered.

Returns and exchanges are accepted within the warranty period for eligible issues.

Customer Support:

For any questions, compatibility concerns, or warranty claims, please contact the seller or manufacturer directly. Provide your product model number (YK-RM-ED011) and details of your inquiry for efficient assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPGJ8C1F>

More documents and user manuals: <https://manuals.plus/>