

- Manuals.plus /
- › Legami /
- › Legami Erasable Gel Pens User Manual

Legami LEG-ERASABLE-ASRT_2X7

Legami Erasable Gel Pens User Manual

Model: LEG-ERASABLE-ASRT_2X7

INTRODUCTION

Thank you for choosing Legami Erasable Gel Pens. This set includes 7 unique pens, each with a distinct animal design and thermosensitive ink that allows for smooth writing and clean erasing. This manual provides essential information on how to use and care for your pens to ensure optimal performance.

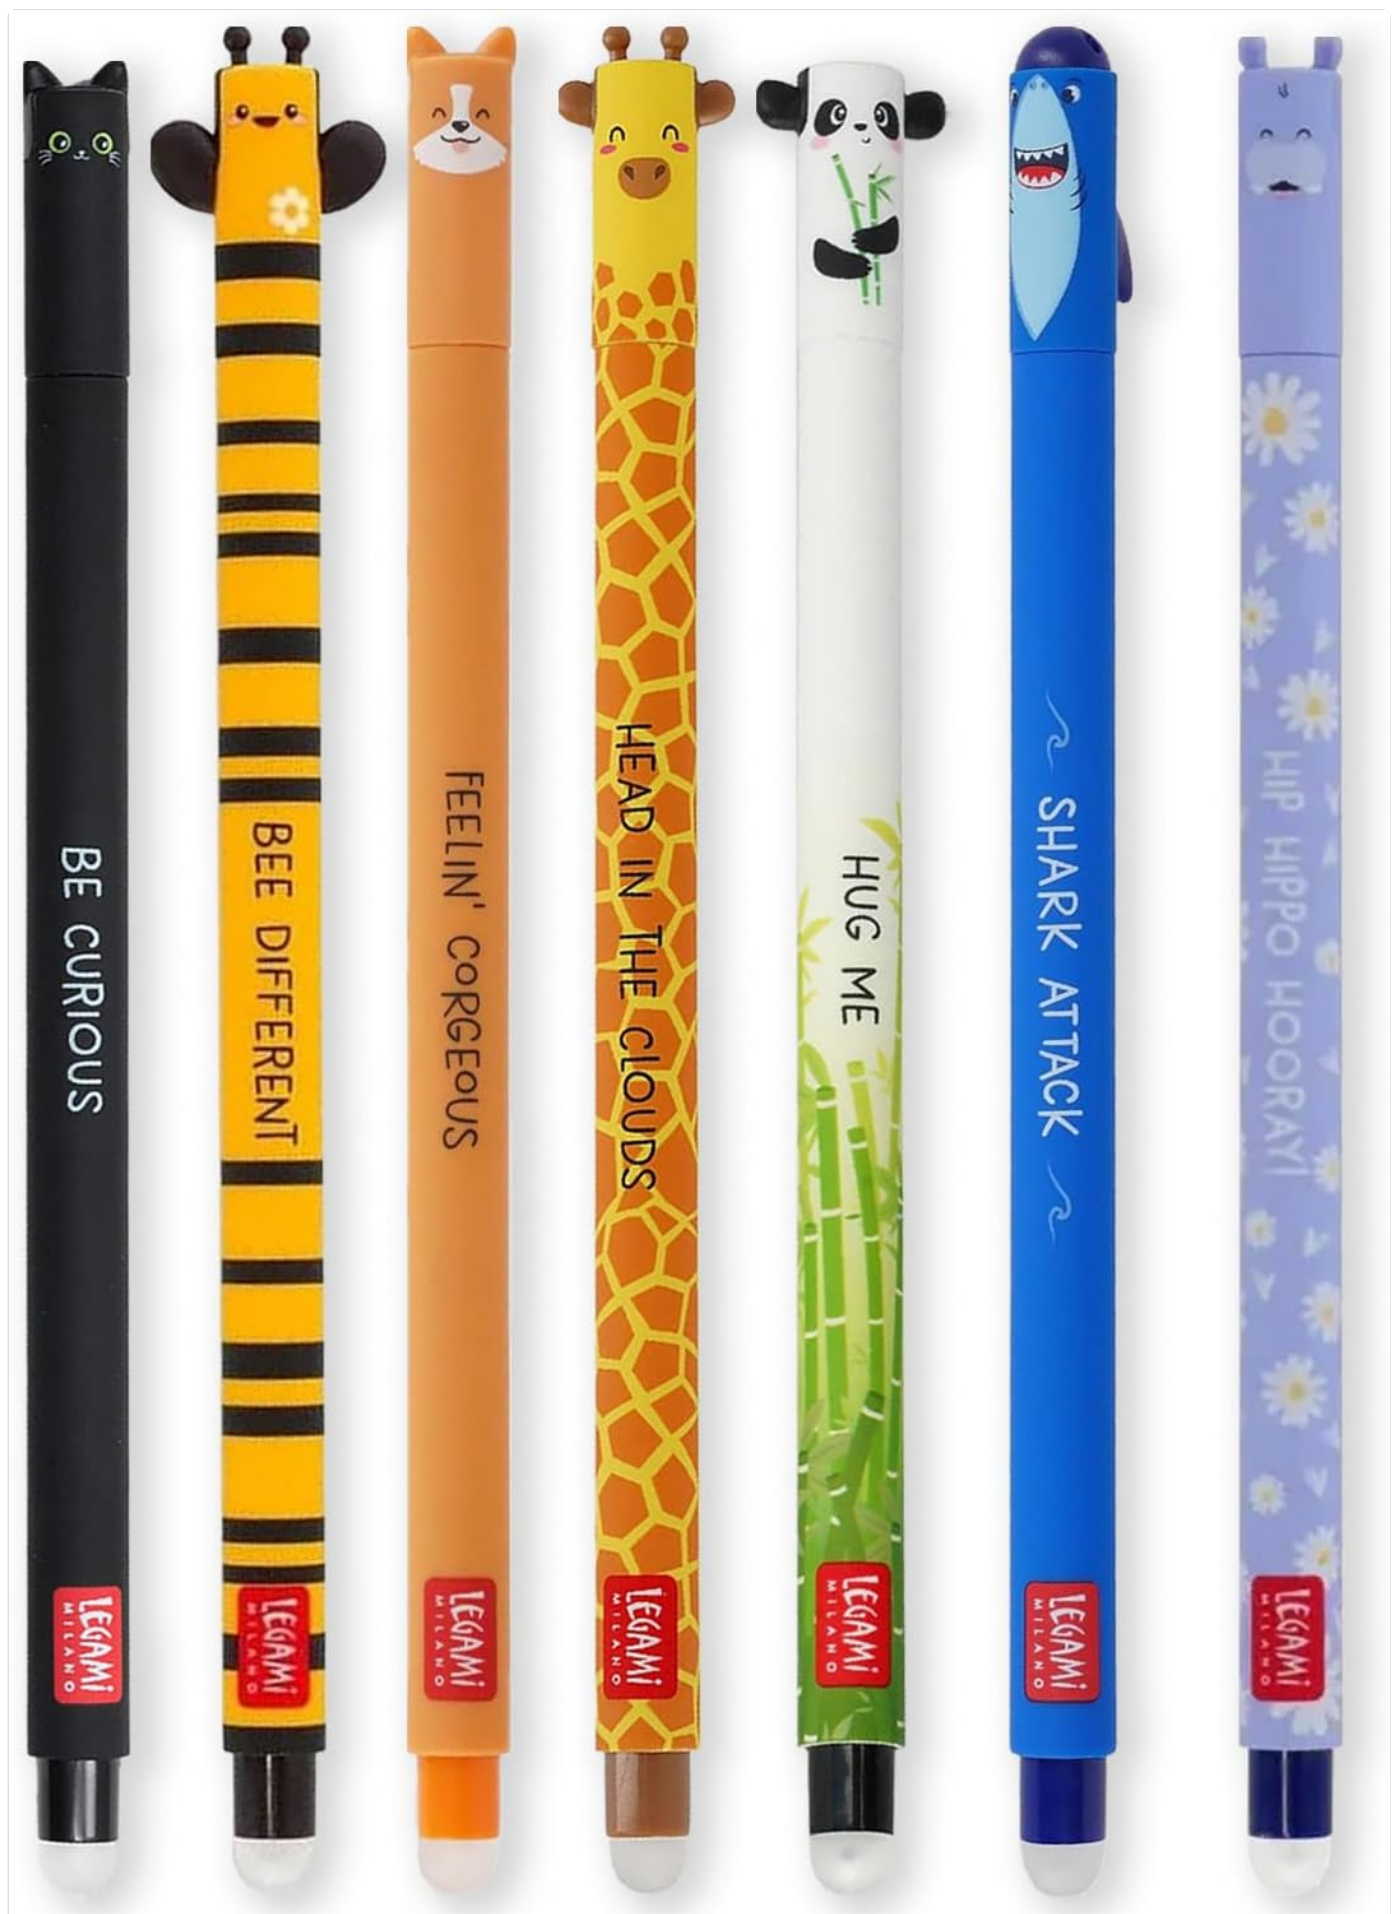


Image: The complete set of 7 Legami Erasable Gel Pens, showcasing the Cat, Bee, Corgi, Giraffe, Panda, Shark, and Hippo designs.

SETUP

Your Legami Erasable Gel Pens are ready for immediate use with minimal setup.

1. **Unpackaging:** Carefully remove the pens from their packaging.
2. **Cap Removal:** To begin writing, simply pull off the click-off cap from the pen.



Image: A single Legami Cat Erasable Gel Pen, illustrating its design and the removable cap.

OPERATING INSTRUCTIONS

These pens utilize special thermosensitive ink, allowing for unique writing and erasing capabilities.

Writing

- Hold the pen comfortably as you would any standard gel pen.
- Apply light pressure to write smoothly on paper. The 0.7mm tip provides a medium line.
- Ink colors are black for Cat, Bee, Corgi, Giraffe, Panda designs, and blue for Shark and Hippo designs.

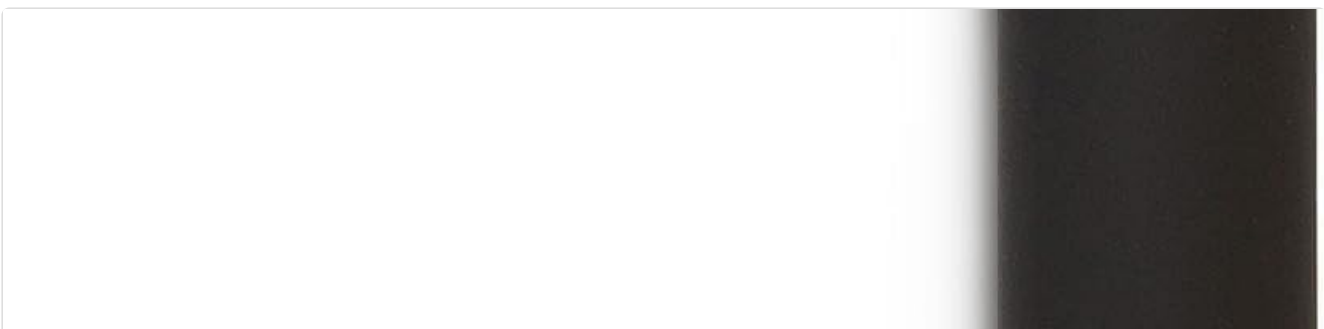


Image: A hand demonstrating writing with a Legami Cat Erasable Gel Pen on a spiral notebook.

Erasing

The eraser is located at the end of the pen, opposite the writing tip.

- To erase, rub the eraser firmly over the written text. The friction generates heat, which causes the thermosensitive ink to become transparent.
- The eraser is designed not to wear down or damage the paper surface, ensuring clean corrections.





Thermosensitive Ink Properties

The ink in these pens is unique because it reacts to temperature changes:

- **Erasing:** Heat generated by friction (rubbing the eraser) makes the ink disappear.
- **Reappearance:** The ink will reappear at temperatures below -10°C (14°F). This means if a written or erased message is exposed to very cold conditions, it may become visible again.



Image: An instructional graphic demonstrating that erased ink can reappear when exposed to temperatures below -10°C .

MAINTENANCE

Proper care will extend the life and performance of your Legami Erasable Gel Pens.

- **Storage:** Store pens at room temperature, away from direct sunlight or extreme heat sources, as high temperatures can cause the ink to fade or become transparent.

- **Refilling:** These pens are designed to be refillable. When the ink runs out, replace it with Legami thermosensitive ink refills to maintain the erasable function.
- **Cap Usage:** Always replace the cap after use to prevent the ink from drying out and to protect the pen tip.

★ Erasable pens ★

BE YOURSELF AND MAKE MISTAKES



Image: A graphic highlighting the refillable nature of the thermosensitive ink and the durability of the eraser.

TROUBLESHOOTING

If you encounter issues with your pens, consider the following common solutions:

Problem	Possible Cause	Solution
Ink appears faded or invisible.	Exposure to heat (e.g., warm room, direct sunlight, friction).	Place the paper or pen in a cold environment (e.g., refrigerator) for a few minutes. The ink should reappear when the temperature drops below -10°C (14°F).

Problem	Possible Cause	Solution
Pen is not writing smoothly or ink flow is inconsistent.	Ink may be low, or the tip may have dried slightly.	Ensure the cap was replaced after last use. Try writing a few strokes on a scrap piece of paper to prime the tip. If the issue persists, consider replacing the ink refill.
Eraser is not effective.	Insufficient friction/heat, or attempting to erase non-thermosensitive ink.	Apply firm, consistent pressure when rubbing the eraser. Ensure you are only attempting to erase ink from Legami thermosensitive pens.

SPECIFICATIONS

- **Brand:** Legami
- **Model Number:** LEG-ERASABLE-ASRT_2X7
- **Item Weight:** 1.48 ounces (for the set)
- **Product Dimensions:** 6.1 x 2.76 x 0.39 inches (packaging)
- **Pen Dimensions:** Approximately 0.8 cm diameter, 15 cm height
- **Ink Colors:** Black (Cat, Bee, Corgi, Giraffe, Panda), Blue (Shark, Hippo)
- **Closure Type:** Click-Off Cap
- **Grip Type:** Smooth
- **Material Type:** Plastic
- **Number of Items:** 7 pens per set
- **Point Type:** Medium
- **Line Size:** 0.7mm

WARRANTY AND SUPPORT

Information regarding product warranty and customer support for Legami Erasable Gel Pens is not provided within this manual. Please refer to the product packaging or the official Legami website for details on warranty coverage and how to contact customer service for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPGK2Q4F>

More documents and user manuals: <https://manuals.plus/>