

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Radio Flyer](#) /

› [Radio Flyer Folding Table for Wagons Instruction Manual AC3710Z](#)

Radio Flyer AC3710Z

Radio Flyer Folding Table for Wagons Instruction Manual

Model: AC3710Z

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Radio Flyer Folding Table for Wagons, Model AC3710Z. This accessory is designed to convert compatible Radio Flyer folding wagons into a convenient tabletop surface for various outdoor activities.

SAFETY INFORMATION

- **Weight Limit:** Do not exceed the maximum weight capacity of 35 lbs (15.8 kg) on the tabletop. Overloading can cause damage or instability.
- **Secure Attachment:** Ensure the table is securely attached to the wagon's seatbacks before placing any items on it.
- **Stability:** Always use the table on a stable, level surface. Avoid placing heavy or unstable items near the edges.
- **Supervision:** Keep children away from the table during assembly and when it is loaded with items to prevent accidents.
- **Compatibility:** This table is compatible with select Radio Flyer folding pull wagons and all Stroll 'N Wagons. Verify compatibility with your specific wagon model before use.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Folding Tabletop Unit (1)
- Support Poles (2)
- Instruction Manual (1)

SETUP AND ASSEMBLY

The Radio Flyer Folding Table for Wagons is designed for tool-free assembly.

1. Unfold the tabletop unit.
2. Connect the two support poles to the designated slots on the underside of the tabletop.
3. Position the assembled tabletop over the seatbacks of your compatible Radio Flyer wagon. Ensure it slides securely into place.



**Two
Cupholders**



**Mesh
Pocket**



**Holds Up To
35 lbs.**



**Underneath
Storage**

Image: The folding table accessory securely attached to a Radio Flyer wagon, illustrating its use as a picnic surface with cupholders and a mesh pocket.

OPERATING INSTRUCTIONS

Using the Tabletop

- Place snacks, drinks, and other essentials on the tabletop surface.
- Utilize the two built-in cupholders to secure beverages.
- Store smaller personal items in the integrated mesh pocket.



Image: Detailed view of the table in use, highlighting the cupholders and mesh pocket for small items.

Additional Storage

When the wagon is in bench mode, you can access additional storage space underneath the tabletop. Simply zip down the wagon side wall to store larger items like blankets, bags, or other supplies.

Additional storage underneath when in bench mode



Image: The folding table positioned on a wagon, demonstrating the available storage space beneath the table when the wagon's side is lowered.

Folding for Storage

When not in use, the table folds compactly for easy storage.

1. Remove the table from the wagon.
2. Disconnect the support poles.
3. Fold the tabletop unit according to its design until it is compact.

Folds compactly when not in use



Image: The folding table accessory shown in its compact, folded state, ready for storage.

MAINTENANCE

- **Cleaning:** Wipe the tabletop surface with a damp cloth and mild soap as needed. Do not use abrasive cleaners.
- **Storage:** Store the folded table in a dry place away from direct sunlight when not in use to prolong its lifespan.
- **Inspection:** Periodically inspect the table and its components for any signs of wear or damage. Discontinue use if any damage is found.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table does not fit on wagon.	Incompatible wagon model.	Ensure your wagon is a compatible Radio Flyer folding pull wagon or Stroll 'N Wagon. Contact Radio Flyer customer service for compatibility questions.

Problem	Possible Cause	Solution
Table feels unstable.	Not properly secured; uneven surface; overloaded.	Verify support poles are fully connected and table is securely seated on wagon seatbacks. Move to a level surface. Do not exceed 35 lbs weight limit.
Cupholders or mesh pocket are damaged.	Excessive force or sharp objects.	Avoid placing sharp objects in pockets. Do not force oversized items into cupholders.

SPECIFICATIONS

Model Number	AC3710Z
Brand	Radio Flyer
Material	Plastic
Color	Gray
Assembled Dimensions (Approx.)	32" L x 20" W x 6.5" H
Folded Dimensions (Approx.)	20" L x 6.5" W x 2.9" H
Item Weight	3 Pounds (1.36 kg)
Weight Limit	35 Pounds (15.8 kg)
Special Features	Built-In Cup Holder, Built-In Shelf, Collapsible, Foldable, Lightweight
UPC	042385132587



Image: Visual representation of the assembled and folded dimensions of the folding table.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about compatibility with specific wagon models, please contact Radio Flyer customer service.

Radio Flyer Customer Service:

Visit the official Radio Flyer website for contact details.

Refer to the packaging for specific warranty terms and conditions.



