

## Incase U7Z-00001

# Incase Wireless Mobile Mouse 1850 User Manual

Model: U7Z-00001

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Incase Wireless Mobile Mouse 1850. This compact and comfortable mouse is designed for both left and right-handed users and offers reliable wireless connectivity for various computing environments.



Image: The Incase Wireless Mobile Mouse 1850 in Flame Red, shown alongside its compact USB nano transceiver.

## PACKAGE CONTENTS

---

Ensure all items are present in the package:

- Incase Wireless Mobile Mouse 1850
- USB Nano Transceiver
- 1 AA Battery

## SETUP

---

### 1. Installing the Battery

1. Locate the battery compartment on the underside of the mouse.
2. Slide the battery compartment cover open.
3. Insert the included AA battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.







Image: The underside of the mouse, illustrating the battery compartment and the slot for storing the USB nano transceiver.

## 2. Connecting the USB Nano Transceiver

1. Remove the USB nano transceiver from its storage slot on the underside of the mouse (if stored).
2. Plug the USB nano transceiver into an available USB port on your computer (Mac or Windows 8/10/11).
3. Your computer should automatically detect and install the necessary drivers. This may take a few moments.

The nano transceiver is designed for "plug-and-go" convenience and can be left plugged into your computer or stored in the mouse when not in use.

## OPERATION

---

### Power On/Off


Locate the On/Off power switch on the underside of the mouse. Slide the switch to the "On" position to activate the mouse. Slide it to "Off" when not in use to conserve battery life.

# Wireless Mobile Mouse 1850

Designed by Microsoft™

Seamlessly scroll with a sculpted, compact design

Ultra-comfortable dual left or right-hand design

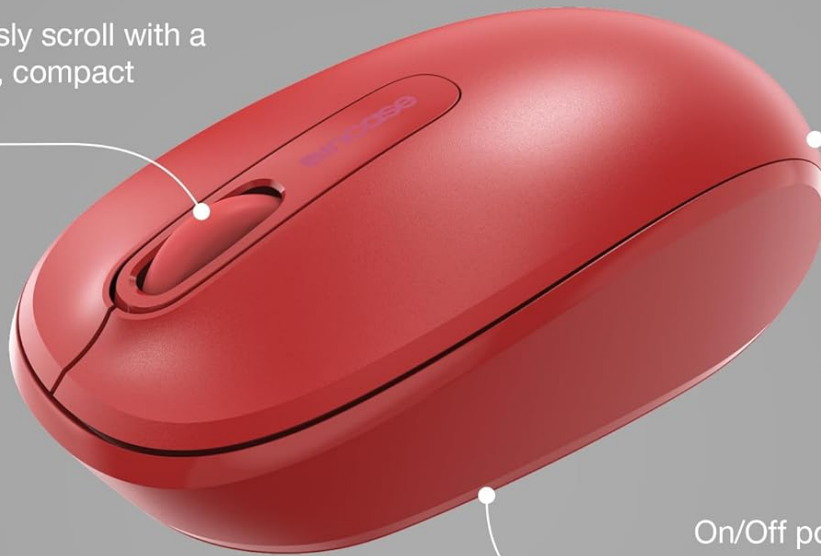

On/Off power switch for transporting worry-free.

Portable design + wireless connectivity



Mouse: 1 AA (included)  
Up to 6 months battery life<sup>1</sup>

**incase**

1 "Battery life may vary based on user and computing conditions."

Image: A detailed view of the mouse, pointing out its ambidextrous design, scroll wheel, and the location of the On/Off power switch.

## Basic Functions

- **Left Click:** Press the left button to select items or activate functions.
- **Right Click:** Press the right button to access context menus.
- **Scroll Wheel:** Roll the scroll wheel up or down to navigate through documents and web pages. The scroll wheel can also be pressed for middle-click functionality, depending on your operating system settings.

## Ambidextrous Design

The Incase Wireless Mobile Mouse 1850 features a symmetrical design, making it comfortable for both left-handed and right-handed users. No special configuration is required for ambidextrous use, though you may adjust primary button settings in your operating system's mouse preferences.





Image: The mouse positioned on a mousepad, demonstrating its ergonomic shape suitable for general use.

## MAINTENANCE

---

### Cleaning

- Use a soft, lint-free cloth to wipe the surface of the mouse.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- Do not use harsh chemicals, abrasive cleaners, or solvents.

### Battery Replacement

The mouse is designed for up to six months of battery life. When the mouse performance degrades or stops responding, replace the AA battery by following the "Installing the Battery" steps in the Setup section.

## TROUBLESHOOTING

---

Problem	Solution
Mouse not responding	<ul style="list-style-type: none"><li>• Ensure the mouse is powered on.</li><li>• Check if the AA battery is correctly installed and has sufficient charge. Replace if necessary.</li><li>• Verify the USB nano transceiver is securely plugged into a working USB port on your computer.</li><li>• Try plugging the nano transceiver into a different USB port.</li><li>• Restart your computer.</li></ul>
Erratic cursor movement	<ul style="list-style-type: none"><li>• Clean the optical sensor on the underside of the mouse.</li><li>• Ensure you are using the mouse on a suitable surface (e.g., a mousepad). Avoid highly reflective or transparent surfaces.</li><li>• Check for interference from other wireless devices.</li></ul>
Wireless connection issues	<ul style="list-style-type: none"><li>• Reduce the distance between the mouse and the USB nano transceiver.</li><li>• Ensure there are no large metal objects obstructing the signal path.</li><li>• Unplug and re-plug the USB nano transceiver.</li></ul>

## SPECIFICATIONS

- Model Number:** U7Z-00001
- Connectivity:** 2.4 GHz Wireless (USB Nano Transceiver)
- Movement Detection:** Optical
- Battery Type:** 1 x AA (included)
- Battery Life:** Up to 6 months (typical use)
- Dimensions (L x W x H):** Approximately 4.0 x 2.3 x 1.5 inches
- Weight:** 3.2 ounces (with battery)
- Compatibility:** Windows 8, Windows 10, Windows 11, Mac OS
- Special Features:** Ambidextrous design, Portable, Lightweight, Nano Transceiver storage

# Wireless Mobile Mouse 1850

Designed by Microsoft™



Image: A visual representation of the mouse with its approximate length (4.0 in), width (2.3 in), and height (1.5 in) indicated.

## WARRANTY AND SUPPORT

### Warranty Information

The InCase Wireless Mobile Mouse 1850 is backed by a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by accident, abuse, misuse, or unauthorized modification.

Please retain your proof of purchase for warranty claims.

 





 





### Customer Support

For technical assistance, warranty claims, or further information, please visit the official InCase support website or contact their customer service department. Refer to the product packaging or the InCase website for the most current contact details.

You can also visit the [InCase Store on Amazon](#) for additional product information.



Related Documents - U7Z-00001

<div></div>	<p><a href="#">Incase Sculpt Ergonomic Mouse Quick Start Guide</a></p> <p>A concise guide to setting up and using your Incase Sculpt Ergonomic Mouse, including connection instructions and ergonomic tips.</p>
<div></div>	<p><a href="#">Incase Wireless Desktop 850 Keyboard and Mouse Quick Start Guide</a></p> <p>Get started quickly with your Incase Wireless Desktop 850 keyboard and mouse. This guide provides simple instructions for setup and usage.</p>
<div></div>	<p><a href="#">Incase Wireless Desktop 900: Quick Start Guide for Wireless Keyboard and Mouse</a></p> <p>Setup and connection guide for the Incase Wireless Desktop 900, featuring a wireless keyboard and mouse. Learn how to install batteries, connect the USB receiver, and start using your devices.</p>
<div></div>	<p><a href="#">Incase Bluetooth Keyboard Quick Start Guide</a></p> <p>A quick start guide for the Incase Bluetooth Keyboard, detailing setup and pairing instructions.</p>
<div></div>	<p><a href="#">Incase Product Guide: Safety, Usage, and Regulatory Information</a></p> <p>Comprehensive guide from Incase covering safety instructions, usage guidelines, battery safety, RF exposure, regulatory compliance, and troubleshooting for Incase electronic accessories.</p>
<div></div>	<p><a href="#">Incase Product Guide: Safety, Usage, and Regulatory Information</a></p> <p>Comprehensive guide to Incase products, covering safety instructions, proper usage, cleaning guidelines, and regulatory compliance information for various models. Includes details on RF exposure, battery safety, and disposal.</p>

