

[Manuals.plus](#) /

› [MZK](#) /

› MZK 20V Cordless Leaf Blower SG1613 User Manual

MZK SG1613

MZK 20V Cordless Leaf Blower User Manual

Model: SG1613

1. SAFETY INSTRUCTIONS

Read all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety

- Always wear eye protection (safety glasses) and hearing protection when operating the leaf blower.
- Wear long pants, long sleeves, gloves, and sturdy footwear. Do not wear loose clothing or jewelry that could get caught in moving parts.
- Keep children, bystanders, and pets at least 50 feet (15 meters) away from the operating area.
- Do not operate the blower in wet conditions or rain.
- Inspect the work area before use. Remove any objects that could be thrown or become entangled in the blower.
- Never point the blower nozzle at people or animals.
- Do not use the blower to spread chemicals, fertilizers, or other substances.

Battery Safety

- Use only the specified battery pack and charger for this product.
- Do not charge the battery in damp or wet locations.
- Do not incinerate the battery pack, even if it is severely damaged or completely dead. The battery can explode in a fire.
- Store battery packs away from metal objects that could short the terminals.
- If battery fluid comes into contact with skin, wash immediately with soap and water. If it gets into eyes, flush with water for at least 15 minutes and seek medical attention.

2. PRODUCT OVERVIEW

The MZK 20V Cordless Leaf Blower is designed for efficient clearing of leaves, debris, and dust from various

surfaces. Its lightweight and cordless design offer ease of use and maneuverability.



Image: The MZK 20V Cordless Leaf Blower, showing the main unit, detachable nozzle, and 20V battery pack.

Components

- **Blower Unit:** Main body containing the motor and handle.
- **Blower Nozzle:** Detachable tube for directing airflow.
- **20V Lithium-Ion Battery:** Provides power to the blower.
- **Battery Charger:** For recharging the 20V battery.

Key Features

- **Cordless Design:** Offers unrestricted movement.
- **Lightweight:** Weighs approximately 3.9 lbs for comfortable operation.
- **Powerful Motor:** Delivers air speeds up to 130 MPH and 150 CFM.
- **Adjustable Handle:** For ergonomic use and reaching different angles.

- **Trigger Lock:** For continuous operation without holding the trigger.

3. SETUP

Assembly

1. Align the blower nozzle with the air outlet on the main blower unit.
2. Push the nozzle firmly onto the outlet until it clicks into place, ensuring a secure connection.

Battery Charging

1. Connect the battery charger to a standard electrical outlet.
2. Slide the 20V Lithium-Ion battery pack onto the charger. Ensure it is fully seated.
3. The indicator light on the charger will show the charging status (e.g., red for charging, green for fully charged).
4. Once fully charged, remove the battery from the charger.

Battery Installation

1. Ensure the blower is turned off.
2. Slide the charged battery pack into the battery slot on the blower handle until it locks securely into place.
3. To remove the battery, press the release button on the battery pack and slide it out.



Image: The MZK 20V Cordless Leaf Blower with the battery properly installed, ready for operation.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your MZK Cordless Leaf Blower.

Starting and Stopping

1. Ensure the battery is fully charged and securely installed.
2. To start the blower, press and hold the trigger switch.
3. For continuous operation, press the trigger lock button while holding the trigger. Release the trigger, then release the trigger lock.
4. To stop the blower, release the trigger switch. If the trigger lock is engaged, press the trigger again to disengage the lock, then release the trigger.

Usage Tips

- **General Blowing:** Hold the blower firmly with one hand. Sweep the nozzle from side to side, directing debris away from desired areas.
- **Leaves and Light Debris:** For best results, blow leaves and light debris into piles before collecting them.
- **Patio and Driveway Cleaning:** Use the blower to clear dust, grass clippings, and small debris from hard surfaces.
- **Drying Surfaces:** The blower can be used to quickly dry wet surfaces, such as car exteriors after washing.
- **Adjustable Handle:** Utilize the adjustable handle feature for comfortable operation, especially when reaching higher areas or for extended use.

ONE FOR ALL MULTI-SCENE



SIDEWALK



YARD



LAWN



CAR DEBRIS

Image: The MZK Leaf Blower demonstrating its versatility across various cleaning tasks, including sidewalks, yards, lawns, and car debris.

A person wearing a dark t-shirt, grey pants, and brown work boots is using a black and red handheld leaf blower on a paved path. The background shows a lush green garden with a wooden gate and various plants. A circular graphic in the upper left corner contains a leaf icon and the text '3.7LBS'.

LIGHTWEIGHT ONLY 3.7 LBS
3 LBS BARE TOOL

Image: A person operating the MZK Leaf Blower to efficiently clear a substantial accumulation of dry leaves from a paved surface.



Image: A user demonstrating the adjustable handle feature of the MZK Leaf Blower, using it to clear leaves from a high gutter while positioned on a ladder.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your leaf blower.

Cleaning the Blower

- Always remove the battery pack before cleaning.
- Use a soft brush or cloth to remove dust and debris from the air intake vents and blower nozzle.
- Do not use water or cleaning solvents directly on the blower unit. Wipe with a damp cloth if necessary, then dry thoroughly.
- Ensure all vents are clear to prevent overheating.

Battery Care and Storage

- Store batteries in a cool, dry place, away from direct sunlight and extreme temperatures.

- For long-term storage, charge the battery to approximately 50% capacity.
- Do not store batteries in a discharged state for extended periods.

General Storage

- Store the leaf blower in a dry, secure location out of reach of children.
- Detach the battery pack from the blower before storing.

6. TROUBLESHOOTING

If you encounter issues with your MZK Cordless Leaf Blower, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Blower does not start	Battery not charged Battery not properly installed Trigger not fully pressed	Charge the battery Ensure battery is securely clicked into place Press the trigger completely
Low blowing power	Battery charge is low Air intake/outlet blocked	Recharge the battery Clear any obstructions from vents and nozzle
Short battery run time	Battery not fully charged Battery is old or damaged Operating in high-demand conditions	Ensure battery is fully charged Consider replacing the battery Optimize usage for lighter tasks or use multiple batteries
Blower overheats	Blocked air vents Continuous heavy use	Clear air vents Allow the blower to cool down before resuming use

7. SPECIFICATIONS

Technical details for the MZK 20V Cordless Leaf Blower, Model SG1613.

Feature	Detail
Brand	MZK
Model Name	SG1613
Power Source	Battery Powered (20V Lithium-Ion)
Max Air Speed	130 MPH
Max Air Volume	150 CFM
Item Weight	Approximately 3.9 lbs (1.77 kg) with battery
Product Dimensions	14.96"L x 5.51"W x 10.63"H
Battery Type	1 AAA batteries required. (included) - <i>Note: This refers to the battery for the product itself, not the 20V power tool battery.</i>

8. WARRANTY AND SUPPORT

MZK is committed to providing quality products and customer satisfaction. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official MZK website.

If you have any questions or problems with your MZK tool, please feel free to contact us. We are dedicated to assisting you with any issues you may encounter.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DPH8SCJP>

More documents and user manuals: <https://manuals.plus/>