

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NJALNKHM](#) /
- › [User Manual for NJALNKHM US-G016 Backlit Universal Remote Control](#)

## NJALNKHM US-G016

# User Manual

NJALNKHM US-G016 Backlit Universal Remote Control

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your NJALNKHM US-G016 Backlit Universal Remote Control. This 8-in-1 remote is designed to simplify your home entertainment experience by controlling multiple devices, including TVs, DVD/Blu-ray players, streaming media players, cable/satellite boxes, sound bars/audio systems, and home theater systems.

Please read this manual carefully before using the remote control to ensure proper functionality and to maximize its capabilities.

## PRODUCT OVERVIEW

---

The NJALNKHM US-G016 is an advanced universal remote control featuring a backlit design for easy use in low-light conditions. Its ergonomic design and durable ABS material ensure comfortable and long-lasting use.

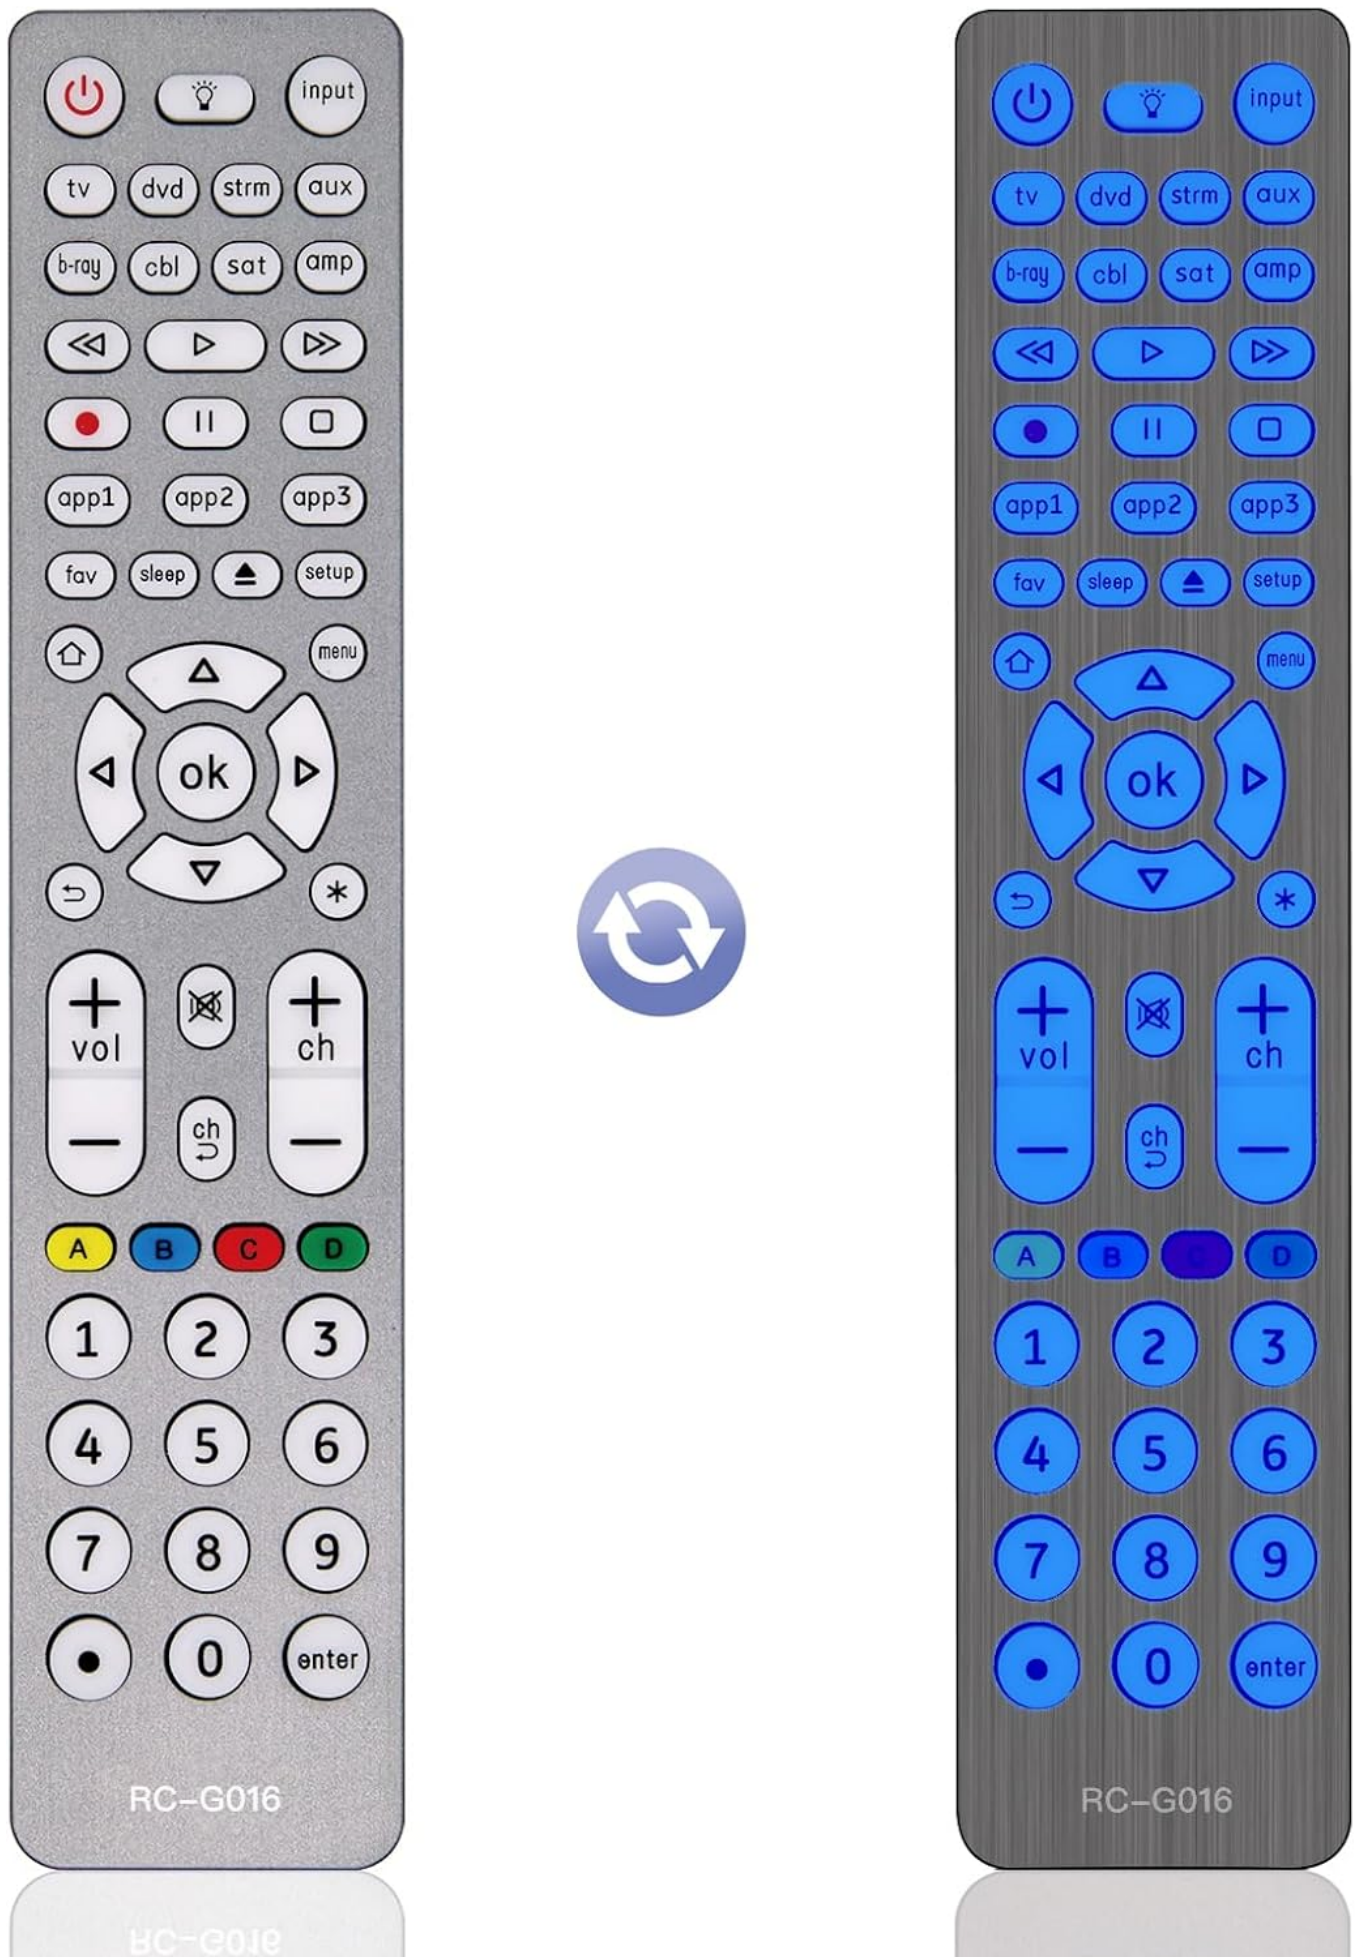


Figure 1: Front view of the US-G016 remote control, showing both unlit and backlit states. The backlit buttons illuminate in blue for visibility in dark environments.



Figure 2: Dimensions of the US-G016 remote control. Length: 20cm (7.87in), Width: 4.3cm (1.69in), Thickness: 2cm (0.78in).

### Key Features:

- **8-in-1 Device Control:** Operates TVs, DVD/Blu-ray players, streaming media players, cable/satellite boxes, sound bars/audio systems, and home theater systems.
- **Backlit Design:** Buttons illuminate for easy visibility in dark rooms.
- **Wide Compatibility:** Compatible with all major TV brands and many other device types.
- **Ergonomic Design:** Comfortable to hold and use.
- **Durable Construction:** Made from high-quality ABS material with soft rubber buttons.
- **Quick Response:** Fast transmission response time of 0.3 seconds.

## SETUP AND PROGRAMMING

Follow these steps to program your universal remote control for your devices.



# Easy to Setup

1. Press and hold the "**SETUP**" button until the red light turns on and remains on.
2. Press the button for your device type tv dvd strm aux b-ray cbl sat amp. The red light will blink once and then stay on.
3. Locate the code for your device and enter it.
4. Use your remote control to operate your device!



**!** If the buttons do not operate the device, return to step 2 and use the next code you have for that device.

Figure 3: Visual guide for the setup process, showing the remote, battery compartment, and a simplified circuit board diagram. It highlights the "SETUP" button and device selection buttons.

### Step-by-Step Programming:

1. **Insert Batteries:** Open the battery compartment on the back of the remote and insert two AAA batteries (not included), ensuring correct polarity.
2. **Enter Setup Mode:** Press and hold the **SETUP** button until the red indicator light turns on and remains lit.
3. **Select Device Type:** Press and release the desired device button (e.g., **TV**, **DVD**, **STRM**, **AUX**, **B-RAY**, **CBL**, **SAT**, **AMP**). The red light will blink once and then stay on.
4. **Enter 4-Digit Code:** Locate the 4-digit code for your device brand from the provided code list (refer to the separate code list document, if applicable, or common codes provided below). Enter the first 4-digit code.
5. **Test Functionality:** Point the remote at your device and test its functions (e.g., Power, Volume, Channel).

6. **Repeat if Necessary:** If the remote does not control your device correctly, repeat steps 2-5 using the next code from the list for your device brand until all buttons function properly.

## Common Device Codes (Example - refer to full code list for comprehensive options):

Device Type	Brand	Example Codes
TV	Samsung	0001, 0002, 0003
TV	LG	0004, 0005, 0006
Streaming Media Player	Roku	0100, 0101
Cable Box	Xfinity	0200, 0201

*Note: A comprehensive list of codes is typically included with the product packaging or available on the manufacturer's website.*

## OPERATING INSTRUCTIONS

---

Once programmed, your universal remote control is ready for daily use.

### Basic Functions:

- **Power On/Off:** Press the **POWER** button to turn your selected device on or off.
- **Device Selection:** Press the corresponding device button (**TV**, **DVD**, **STRM**, etc.) to switch control to that device.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
- **Channel Control:** Use the **CH+** and **CH-** buttons to change channels.
- **Navigation:** Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and the **OK** button for menu navigation and selection.
- **Number Pad:** Use the number buttons (0-9) to directly enter channel numbers or other numerical inputs.

### Backlight Feature:

In the evening: Press the  and the backlit will turn on.  
In the daytime: Press the  turn off the backlit to save battery power.



Figure 4: Illustration of the remote's backlight feature. The light bulb icon button activates the blue backlight for use in dark environments. Pressing it again turns off the backlight to conserve battery power.

To activate the backlight, press the **Backlit** button (often indicated by a light bulb icon). The buttons will illuminate, making them visible in low-light conditions. Press the button again to turn off the backlight and conserve battery life.

## Advanced Functions:

- **Input Selection:** Use the **INPUT** button to cycle through available input sources on your TV or receiver.
- **Menu Access:** Press the **MENU** button to access the on-screen menu of your device.
- **App Buttons:** The remote includes dedicated buttons for common applications (**APP1**, **APP2**, **APP3**). These may be pre-programmed or programmable depending on your device and the remote's capabilities.
- **Transport Controls:** Use the **PLAY**, **PAUSE**, **STOP**, **REWIND**, **FAST FORWARD**, and **RECORD** buttons for media playback.

## MAINTENANCE

Proper care and maintenance will extend the life of your universal remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the indicator light does not illuminate properly. Always replace all batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While durable, avoid dropping the remote, as this can damage internal components.

## TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote does not work at all.	Dead or incorrectly inserted batteries.	Check battery polarity. Replace with fresh AAA batteries.
Remote controls some functions but not others.	Incorrect programming code.	Repeat the programming steps (Section: Setup and Programming) using the next code for your device brand.
Remote is sluggish or has delayed response.	Low batteries or interference.	Replace batteries. Ensure no obstructions between remote and device. Point directly at the device's IR receiver.
Backlight does not turn on.	Backlight feature is off or low batteries.	Press the Backlit button. Replace batteries if needed.
Cannot find a working code for my device.	Device not supported or code list incomplete.	Consult the full code list provided with the product or contact customer support for assistance.

## SPECIFICATIONS

---

Feature	Detail
Model Number	US-G016
Compatible Devices	TVs, DVD/Blu-ray Players, Streaming Media Players, Cable/Satellite Boxes, Sound Bars/Audio, Home Theatre
Max Number of Supported Devices	8
Power Source	2 x AAA Batteries (not included)
Material	ABS (body), Rubber (buttons)
Special Features	Backlit Buttons, Ergonomic Design, Quick Response (0.3s)
Dimensions (L x W x H)	8.11 x 2.36 x 1.18 inches (approx. 20.6 x 6 x 3 cm)
Item Weight	3.03 ounces (approx. 86 grams)

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your purchase or contact NJALNKHM customer service.

**Manufacturer:** NJALNKHM

**Customer Service:** Please visit the official NJALNKHM store on Amazon or their official website for contact details and further assistance. [NJALNKHM Amazon Store](#)

