

[manuals.plus](#) /

› [TONOR](#) /

› [TONOR SL4000 2.1 Soundbar with Subwoofer User Manual](#)

TONOR SL4000

TONOR SL4000 2.1 Soundbar with Subwoofer User Manual

Model: SL4000

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your TONOR SL4000 2.1 Soundbar with Subwoofer. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your audio experience.

The TONOR SL4000 2.1 Soundbar system delivers a maximum power of 160W with a frequency response of 55Hz to 20kHz, offering clear sound and powerful bass. It is designed for home cinema, gaming, and music, providing a versatile audio solution.

2. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- 1 x Soundbar Unit
- 1 x Subwoofer
- 1 x Power Adapter
- 1 x Remote Control
- 1 x HDMI Cable (ARC compatible)
- 1 x Digital Optical Cable
- 1 x 3.5mm Audio Cable
- Wall Mounting Kit

3. SETUP

3.1 Placement

The soundbar's elegant and slim design allows it to fit perfectly under your TV. The subwoofer can be

placed on the floor near the soundbar for optimal bass performance. A wall mounting kit is included for alternative installation.

3.2 Connecting the Soundbar and Subwoofer

Connect the subwoofer to the soundbar using the dedicated cable. Ensure a secure connection.

3.3 Power Connection

Connect the power adapter to the soundbar's DC IN port and then plug it into a power outlet.

3.4 Audio Connections

The soundbar offers versatile connectivity options. Choose the connection method that best suits your devices:

- **HDMI (ARC):** For optimal audio quality and control via your TV remote, connect the included HDMI cable from the soundbar's HDMI (ARC) port to your TV's HDMI (ARC/eARC) port.
- **Optical:** Connect the included optical cable from the soundbar's OPTICAL port to your TV's optical output.
- **AUX:** Use the included 3.5mm audio cable to connect the soundbar's AUX port to the audio output of your device (e.g., TV headphone jack, PC).
- **USB:** Insert a USB drive into the USB port for direct MP3 playback.
- **Bluetooth 5.3:** For wireless connection with smartphones, tablets, or other Bluetooth-enabled devices.

Image: Steps for connecting the soundbar via HDMI ARC. Step 1: Connect the cable to the TV's ARC port. Step 2: Connect the other end to the soundbar's ARC port. Step 3: Press the HDMI ARC button on the remote control.

Connectivité polyvalente Profitez du son à votre manière !



Image: Rear panel of the soundbar displaying HDMI (ARC), USB, Optical, and AUX input ports.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the power button on the soundbar or the remote control to turn the unit on or off.

4.2 Input Selection

Use the 'Input' button on the remote control to cycle through available input sources: HDMI (ARC), Optical, AUX, USB, and Bluetooth.

4.3 Volume Control

Use the 'VOL+' and 'VOL-' buttons on the remote control to adjust the master volume. The subwoofer's bass levels can also be adjusted independently.

4.4 Equalizer Modes

The soundbar features an advanced DSP chip with three preset equalization modes to optimize your audio experience:

- **Cinema Mode:** Provides an immersive sound experience, ideal for movies.
- **Music Mode:** Ensures clear and rich sound reproduction for music.
- **Game Mode:** Enhances your gaming experience with optimized audio.

Switch between these modes using the dedicated buttons on the remote control.



Image: Remote control with clearly labeled buttons for 'Game', 'Films' (Cinema), and 'Music' sound modes.

4.5 Bluetooth Pairing

To connect via Bluetooth:

1. Select Bluetooth input on the soundbar. The indicator light will flash.
2. Enable Bluetooth on your device (smartphone, tablet).
3. Search for "TONOR SL4000" in your device's Bluetooth settings and select it to pair.
4. Once connected, the indicator light will be solid.

Diffusez votre musique préférée sans effort

Bluetooth 5.3

✓ résistant aux interférences

✓ Vitesse de transmission plus élevée



Image: A smartphone screen showing a successful Bluetooth connection to the TONOR soundbar, with the soundbar visible in the background.

4.6 USB Playback

Insert a USB drive containing MP3 audio files into the USB port. The soundbar will automatically switch to USB input and begin playback. Use the remote control for play/pause, next track, and previous track functions.

5. MAINTENANCE

To ensure the longevity and optimal performance of your TONOR SL4000 soundbar and subwoofer, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the soundbar and subwoofer. Do not use liquid cleaners or abrasive materials, as they may damage the finish.
- **Ventilation:** Ensure that the soundbar and subwoofer have adequate ventilation. Do not block any ventilation openings.
- **Environment:** Avoid exposing the unit to extreme temperatures, humidity, or direct sunlight. Keep it away from sources of heat and moisture.
- **Storage:** If storing the unit for an extended period, disconnect it from the power supply and store it in a

cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your TONOR SL4000 soundbar, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working	Ensure power cable is securely connected. Try a different power outlet.
No sound	Incorrect input selected; Volume too low; Cables not connected properly	Select the correct input source. Increase volume. Check all audio cables are securely connected. Ensure TV audio output is set correctly.
Bluetooth connection issues	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in Bluetooth pairing mode. Move device closer to the soundbar. Avoid strong interference sources.
Remote control not working	Batteries depleted; Obstruction between remote and soundbar	Replace remote control batteries. Remove any obstructions. Ensure remote is pointed at the soundbar's sensor.
Distorted sound at high volumes	Volume too high; Poor audio source quality	Reduce the volume. Try a different audio source to check if the issue persists.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	TONOR
Model Name	TNS2100
Item Model Number	SL4000
Speaker Type	Surround Sound, Subwoofer
Surround Sound Channel Configuration	2.1
Connectivity Technology	Auxiliary, Bluetooth, HDMI, Optical, USB
Wireless Communication Technology	Bluetooth 5.3

Feature	Detail
Maximum Speaker Output Power	80 Watts (Total system power up to 160W peak)
Frequency Response	55Hz - 20KHz
Speaker Size	5.25 Inches (Subwoofer)
Special Features	3D Surround Sound, Built-in DSP, 3 EQ Modes
Compatible Devices	Smart TV, Smartphone, Tablet, Desktop Computer, Laptop
Recommended Product Uses	For game console, For music player, For computer, For smartphone or tablet, For ambient sound system, For television
Control Method	Remote Control
Color	Black
Material	Plastic
Product Dimensions (L x W x H)	48 x 23 x 35.5 cm
Item Weight	4500 Grams
Power Source	Electric Cable
Waterproof	False

8. WARRANTY INFORMATION

This product comes with a Limited Warranty. Please refer to the warranty card included in your package for specific terms and conditions. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact TONOR customer support. Contact information can typically be found on the official TONOR website or on the product packaging.