

Manuals.plus /

› Aeitto /

› Aeitto Juice Extractor Cold Pressed Light Grey User Manual

Aeitto HSJ1908

Aeitto Juice Extractor Cold Pressed User Manual

Model: HSJ1908

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Always follow basic safety precautions when using electrical appliances.

- **Electrical Safety:** Ensure the voltage rating on the appliance matches your local power supply. Do not immerse the motor base in water or other liquids.
- **Child Safety:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Operation Safety:** Never push food with your fingers or other utensils into the feed chute. Always use the provided food pusher. Ensure all parts are correctly assembled before operation.
- **Maintenance:** Unplug the juicer from the power outlet before cleaning or disassembling. Do not attempt to repair the appliance yourself; contact customer support for assistance.
- **Overload Protection:** The juicer is equipped with an automatic shut-off feature to prevent overheating. If the motor stops, turn off the appliance, unplug it, and allow it to cool down for at least 30 minutes before resuming use.

2. PRODUCT OVERVIEW AND PARTS

Familiarize yourself with the components of your Aeitto Cold Pressed Juice Extractor.



This image displays the Aeitto Cold Pressed Juice Extractor in light grey, alongside a glass filled with freshly extracted green juice and a separate container for pulp. The juicer features a large feed chute and a control dial for operation.

Parts List:

1. Food Pusher
2. Hopper Cover with 4.9" Large Feed Chute
3. Auger (Squeezing Screw)
4. Filter/Strainer
5. Juice Bowl

6. Motor Base with Control Dial (ON/OFF/REV)
7. Juice Cup
8. Pulp Container
9. Cleaning Brush

3. SETUP

Before first use, wash all detachable parts thoroughly with warm soapy water. Rinse and dry completely.

1. Place the motor base on a stable, flat, and dry surface.
2. Align the juice bowl with the motor base and rotate it clockwise until it locks into place.
3. Insert the filter/strainer into the juice bowl, ensuring it is seated firmly.
4. Place the auger (squeezing screw) into the center of the filter/strainer.
5. Attach the hopper cover by aligning it with the juice bowl and rotating it clockwise until it clicks securely into place. The juicer will not operate if the cover is not properly locked.
6. Place the juice cup under the juice outlet and the pulp container under the pulp outlet.

4. OPERATING INSTRUCTIONS

Preparation of Ingredients:

- Wash all fruits and vegetables thoroughly.
- Remove large seeds (e.g., from peaches, mangoes) and hard pits.
- For citrus fruits, peel the skin before juicing.
- The 4.9-inch large feed chute accommodates whole fruits and vegetables like apples and carrots, reducing preparation time. For very fibrous or hard ingredients (e.g., ginger, celery), it is recommended to cut them into smaller pieces to prevent clogging and ensure optimal juicing.

Juicing Process:

1. Plug the power cord into a suitable electrical outlet.
2. Turn the control dial to the "ON" position. The juicer will begin operating.
3. Slowly feed the prepared ingredients into the feed chute. Use the food pusher to gently guide the ingredients down. Do not force ingredients.
4. The juicer will automatically separate juice into the juice cup and pulp into the pulp container.
5. Once juicing is complete, turn the control dial to the "OFF" position and unplug the appliance.

Reverse Function:

If ingredients become jammed or the juicer stops during operation, use the reverse function:

1. Turn the control dial to the "OFF" position.
2. Turn the control dial to the "REV" (Reverse) position and hold for a few seconds. This will help dislodge any stuck ingredients.
3. Release the dial to the "OFF" position, then return to "ON" to resume juicing. Repeat if necessary.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your juicer.

Disassembly:

1. Ensure the juicer is turned off and unplugged.
2. Rotate the hopper cover counter-clockwise to unlock and remove it.
3. Lift out the auger, filter/straining basket, and juice bowl from the motor base.
4. Empty the pulp container and juice cup.

Cleaning:

- Rinse all detachable parts (hopper cover, auger, filter, juice bowl, juice cup, pulp container) under running water immediately after use to prevent pulp from drying.
- Use the provided cleaning brush to remove any stubborn pulp from the filter mesh.
- Wash parts with warm, soapy water. Rinse thoroughly.
- Dry all parts completely before reassembling or storing.
- Wipe the motor base with a damp cloth. **Never immerse the motor base in water.**

6. TROUBLESHOOTING

Refer to this table for common issues and their solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; parts not assembled correctly; safety lock not engaged.	Ensure power cord is securely plugged in. Check that the hopper cover is fully locked into place.
Juicer stops during operation or gets jammed.	Too much food inserted at once; hard or fibrous ingredients causing blockage.	Turn to "OFF", then use the "REV" (Reverse) function for a few seconds to clear blockage. Cut hard/fibrous ingredients into smaller pieces. Feed ingredients slowly.
Low juice yield or excessive pulp.	Ingredients not suitable for juicing; filter clogged.	Ensure ingredients are fresh. Clean the filter thoroughly. Some fruits naturally produce more pulp. For smoother juice, strain manually after juicing.
Difficulty disassembling for cleaning.	Pulp residue has dried and stuck parts; parts are misaligned.	Disassemble immediately after use. If stuck, try gently wiggling parts or running warm water over the connections. Ensure parts are aligned correctly during assembly to prevent sticking.
Loud noise during operation.	Normal for hard ingredients; parts not assembled correctly.	Some noise is normal, especially with harder fruits/vegetables. Ensure all parts are securely assembled. If noise is excessive or unusual, discontinue use and contact support.

7. SPECIFICATIONS

- **Model Name:** HSJ1908
- **Product Dimensions:** 8 x 7 x 16 inches
- **Item Weight:** 8 pounds
- **Color:** Light Grey
- **Feed Chute Size:** 4.9 inches
- **Technology:** Cold Pressed Masticating Juicer with Upgraded Blade Pre-cutting Technology

8. WARRANTY AND SUPPORT

Aeitto is committed to providing high-quality products and excellent customer service.

- **Warranty:** This product comes with 12 months of repair and replacement services from the date of purchase.
- **Customer Support:** For any questions, concerns, or assistance with your juicer, please contact our customer service team. We offer 7*24 hours online consultation services.

- **Contact Information:** Please refer to the contact details provided on the product packaging or the official Aeito website for support.