

## ROBOTIME RBT-O-WCF41

# ROBOTIME Play Kitchen Toy Fridge Instruction Manual

Model: RBT-O-WCF41 | Brand: ROBOTIME

## 1. INTRODUCTION

### 1.1 Product Overview

The ROBOTIME Play Kitchen Toy Fridge is a wooden toy refrigerator designed to enhance imaginative play for children aged 3 and up. It features a creamy rustic style, functional compartments, and comes with various play food accessories. This manual provides essential information for assembly, safe operation, and maintenance of your toy fridge.

### 1.2 Safety Information

**WARNING: CHOKING HAZARD - Small Parts. Not suitable for children under 3 years.**

- Adult assembly is required.
- Keep all packaging materials away from children to avoid suffocation.
- Regularly inspect the toy for any damage or loose parts. Discontinue use if damage is found.
- Ensure the toy is placed on a stable, flat surface to prevent tipping.

## 2. PRODUCT FEATURES

- **Creamy Wooden Design:** Features a soft color palette and charming rustic design, adding a cozy aesthetic to any play area.
- **Interactive Accessories:** Includes play items such as milk cartons, soda cans, and eggs for realistic play scenarios.
- **Durable & Safe Construction:** Made from high-quality natural wood with smooth, rounded edges and non-toxic paint, meeting safety standards.
- **Educational Play:** Encourages imaginative role-play, helps develop fine motor skills, coordination, and problem-solving abilities through organizing and storing play food.
- **Ample Storage:** Designed with multiple shelves and compartments to store various play food items.

## 3. PARTS LIST

---

Please ensure all parts are present and undamaged before beginning assembly. Refer to the detailed parts diagram included in your product packaging for specific identification.

### 3.1 Main Components

- Wooden refrigerator panels (sides, top, bottom, back, shelves)
- Refrigerator doors (upper and lower)
- Swivel handles
- Hinges and screws
- Egg shelf
- Beverage shelf
- Clear plastic tray (for bottom compartment)

### 3.2 Included Accessories

- Play milk cartons
- Play juice cartons
- Play butter box
- Play soda cans
- Play eggs
- Other assorted play food items (may vary)

## 4. SETUP AND ASSEMBLY INSTRUCTIONS

---

Follow these general steps for assembling your ROBOTIME Play Kitchen Toy Fridge. For detailed, step-by-step diagrams and specific screw types, please refer to the instruction manual provided in the product packaging.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them against the parts list in your physical manual to ensure everything is present and undamaged.
2. **Assemble the Main Frame:** Connect the side panels to the bottom and back panels using the provided screws. Ensure all connections are secure.
3. **Install Shelves:** Insert the internal shelves into their designated slots or attach them with screws as indicated in the manual.
4. **Attach Doors and Handles:** Secure the upper and lower refrigerator doors to the main frame using the hinges. Attach the swivel handles to the doors. Ensure doors open and close smoothly.
5. **Add Internal Accessories:** Install the egg shelf and beverage shelf inside the doors or main compartments as shown in the diagrams. Place the clear plastic tray in the bottom section.
6. **Final Check:** Once assembled, gently shake the fridge to ensure stability. Check all screws for tightness.

# MATERIAL: SOLID WOOD AND MDF

Recommended Age: 3+



Image: Assembled ROBOTIME Play Kitchen Toy Fridge with dimensions (78.3cm H x 35.5cm W x 30.5cm D).

# DETAILS SHOWS



Egg shelf



Beverage shelf



Swivel handle

Image: Detailed view of the toy fridge's egg shelf, beverage shelf, and swivel handles.

## 5. OPERATING INSTRUCTIONS

The ROBOTIME Play Kitchen Toy Fridge is designed for interactive pretend play. Here's how to use its features:

- **Opening and Closing Doors:** Use the swivel handles to open and close the upper freezer and lower refrigerator doors.
- **Organizing Play Food:** Utilize the various shelves and compartments inside the fridge and on the doors (egg shelf, beverage shelf) to store the included play food accessories.

- **Interactive Play:** Encourage children to sort, organize, and role-play scenarios like grocery shopping, cooking, and serving meals.

# FUNCTIONAL PARTITIONS

Helping kids learn to sort and organize



Image: Interior view of the toy fridge showcasing functional partitions and various play food items.

# SUPER LARGE STORAGE SPACE

Store All the Toys



Image: The toy fridge's spacious interior, demonstrating its capacity for storing numerous play food items.

## 5.1 Product Video Demonstration

Your browser does not support the video tag.

Video: Official ROBOTIME Creamy Toy Fridge demonstration, showing features and interactive play.

## 6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the toy fridge and accessories with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.

- **Storage:** Store the toy in a dry place away from direct sunlight and extreme temperatures to prevent warping or fading.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten any loose screws as needed.

## 7. TROUBLESHOOTING

If you encounter any issues with your ROBOTIME Play Kitchen Toy Fridge, please refer to the following common solutions:

- **Doors Not Closing Properly:** Ensure all hinges are correctly aligned and securely fastened. Check that the magnetic closures (if applicable) are properly installed and functioning. Sometimes, leveling the fridge on an even surface can resolve door alignment issues.
- **Loose or Wobbly Parts:** Re-tighten any loose screws. If a part repeatedly becomes loose, ensure the correct screw size was used during assembly and that the wood is not stripped.
- **Missing or Damaged Parts:** If any parts were missing or damaged upon arrival, please contact ROBOTIME customer support immediately for assistance.

## 8. SPECIFICATIONS

<b>Brand Name</b>	ROBOTIME
<b>Model Number</b>	RBT-O-WCF41
<b>UPC / GTIN</b>	730688420882
<b>Age Range Description</b>	Kid (Manufacturer Minimum Age: 36 Months)
<b>Material Type</b>	Wood
<b>Color</b>	Creamy
<b>Style</b>	Toy Fridge
<b>Item Dimensions (D x W x H)</b>	16.9"D x 4.33"W x 25.7"H (4.33 x 16.9 x 25.7 inches)
<b>Item Weight</b>	10.89 Kilograms
<b>Included Components</b>	Toy fridge, various play food accessories (milk cartons, soda cans, eggs, etc.)

## 9. WARRANTY AND CUSTOMER SUPPORT

ROBOTIME is committed to providing high-quality products. For any questions, concerns, or warranty claims regarding your Play Kitchen Toy Fridge, please contact ROBOTIME customer support through the retailer where the product was purchased or visit the official ROBOTIME website for contact information. Please retain your proof of purchase for any warranty-related inquiries.

