

[Manuals.plus](#) /

› [ROBOTIME](#) /

› ROBOTIME Outdoor Wooden Mud Kitchen with Insect Observation Box and Planter - Model RBT-6-WH001

ROBOTIME RBT-6-WH001

ROBOTIME Outdoor Wooden Mud Kitchen

Model: RBT-6-WH001

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your ROBOTIME Outdoor Wooden Mud Kitchen, Model RBT-6-WH001. Please read these instructions carefully before assembly and use to ensure proper function and safety for your child.



Figure 1: ROBOTIME Outdoor Mud Kitchen in use. This image illustrates a child engaging with the mud kitchen, highlighting its multi-functional design for creative outdoor play.

Safety Warning: Choking Hazard - Small parts. Not suitable for children under 3 years without adult supervision.

PRODUCT FEATURES

- **Creative Outdoor Play:** Designed for imaginative outdoor play, featuring a removable sink and faucet for "washing" ingredients or mixing "mud recipes."
- **Insect Observation Box:** A secure and engaging way for children to observe insects, fostering curiosity about nature.
- **Functional Planter:** Encourages gardening skills by allowing children to plant flowers, herbs, or vegetables.
- **Realistic Kitchen Accessories:** Includes cups, a water reservoir with a real faucet, a removable sink, stainless steel basins, pots, and cooking utensils (spatula, whisk, ladle).
- **Durable Construction:** Made from high-quality, eco-friendly wood, ensuring a smooth, sturdy, and long-lasting play experience.



Figure 2: Solid Wood Construction. This image highlights the quality craftsmanship of the mud kitchen, showcasing its smooth edges, stable legs, and natural wood texture, ensuring durability and safety.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Mud Kitchen wooden components
- 1 x Removable Sink
- 1 x Water Reservoir with Real Faucet
- 3 x Cups
- 2 x Stainless Steel Basins
- 2 x Pots
- 3 x Cookware Utensils (Spatula, Whisk, Ladle)
- Assembly hardware (screws, bolts, etc.)
- Instruction Manual (this document)

Rich Accessories



Figure 3: Included Accessories. This image displays the complete set of accessories that come with the mud kitchen, including the removable sink, water reservoir with a functional faucet, three cups, two stainless steel basins, two pots, and three cooking utensils (spatula, whisk, and ladle).

ASSEMBLY INSTRUCTIONS

Assembly requires adult supervision. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present against the package contents list.
2. **Assemble Main Frame:** Connect the main wooden panels and legs using the provided hardware. Ensure all connections are secure but do not overtighten.
3. **Install Sink and Faucet:** Place the removable sink into its designated opening. Attach the water reservoir and faucet according to the diagrams. Ensure the faucet is securely attached and can be operated.
4. **Attach Insect Observation Box and Planter:** Secure the insect observation box to the left side and the planter to the right side of the main structure using the appropriate hardware.
5. **Add Shelves and Hooks:** Install any internal shelves and hooks for hanging utensils.
6. **Final Check:** Once assembled, gently shake the mud kitchen to ensure stability. Tighten any loose

screws if necessary.



Figure 4: Assembled Mud Kitchen Overview. This image illustrates the fully assembled mud kitchen, providing a visual reference for its structure and overall appearance.

OPERATING INSTRUCTIONS

The ROBOTIME Mud Kitchen is designed for interactive and imaginative play. Here's how to use its main features:

- **Water Play:** Fill the water reservoir with water. The faucet can be turned to allow water to flow into the removable sink, simulating real kitchen activities. Ensure the sink is properly placed to catch water.
- **Mud & Sand Play:** Encourage children to use natural elements like mud, sand, leaves, and water in the sink and pots for creative "cooking."
- **Insect Observation:** Place small, harmless insects into the observation box for children to safely view and learn about. Remember to release them gently after observation.
- **Gardening:** Use the planter box for real or pretend gardening. Children can plant seeds, small plants, or simply use soil and gardening tools.

- **Accessory Use:** The included cups, basins, pots, and utensils are designed for use with water, mud, and other play materials.



Washing Vegetables



Pretend Cooking



Rotatable Knob

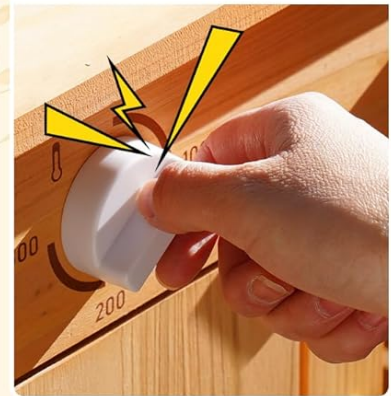 


Figure 5: Real Water Flow for Role Play. This image highlights the functional faucet and sink, demonstrating how water flows for realistic washing and cooking role-play with toy food items.

Planting Vegetables or Flowers Using Planter Box



Exploring the Relationship Between Food & Nature

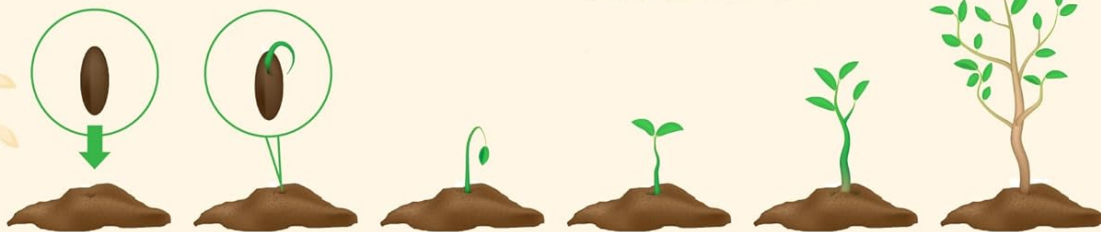 


Figure 6: Planting and Observation Features. This image displays the planter box feature, encouraging children to engage in gardening activities, and the insect observation box for learning about nature.

Mud Kitchen Size



Figure 7: Children Engaging with the Mud Kitchen. This image shows two children actively playing with the mud kitchen, demonstrating its interactive and collaborative play potential in an outdoor environment.

MAINTENANCE

- **Cleaning:** After each use, especially with mud or water, clean all surfaces with a damp cloth. The removable sink and basins can be washed with mild soap and water.
- **Drying:** Ensure all wooden parts are thoroughly dried after cleaning to prevent mold or warping. Do not leave the mud kitchen exposed to prolonged rain or extreme weather conditions.
- **Storage:** When not in use for extended periods, store the mud kitchen in a dry, covered area to protect the wood.
- **Inspection:** Regularly inspect all screws and connections for tightness. Tighten as needed. Check for any signs of wear or damage to wooden parts and address them promptly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaks from faucet/sink area.	Faucet not properly sealed or sink not seated correctly.	Ensure faucet connections are tight. Check that the removable sink is fully inserted into its opening.
Mud kitchen feels unstable after assembly.	Screws or bolts are loose.	Re-check all assembly points and tighten all hardware securely.
Missing parts during assembly.	Packaging error or parts misplaced.	Refer to the "Package Contents" section. Contact ROBOTIME customer support with your model number and a description of the missing part.

SPECIFICATIONS

Attribute	Detail
Brand	ROBOTIME
Model Number	RBT-6-WH001
Material	Wood
Dimensions (L x W x H)	105.9 x 14.5 x 45.5 cm (41.7 x 5.7 x 17.9 inches)
Recommended Age	36 months and up
UPC	730688420905

Solid Wood Construction Sturdy & Durable

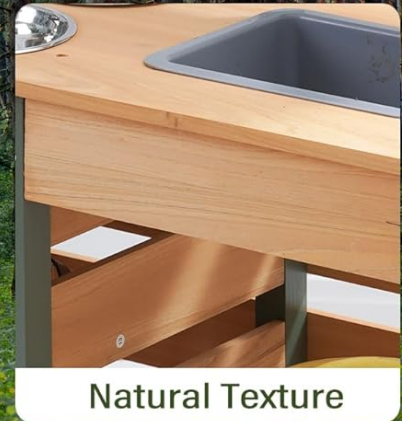 


Figure 8: Detailed Dimensions. This image provides a visual representation of the mud kitchen's dimensions, including height, width, and depth, for accurate spatial planning.

SAFETY INFORMATION

- **Adult Supervision:** Always supervise children during play with the mud kitchen, especially when water and small parts are involved.
- **Choking Hazard:** This product contains small parts which may pose a choking hazard for children under 3 years of age. Keep small parts away from young children.
- **Outdoor Use Only:** Designed for outdoor use. Do not use indoors to prevent water damage or mess.
- **Stable Placement:** Place the mud kitchen on a flat, stable surface to prevent tipping.
- **Material Safety:** The wood is eco-friendly and non-toxic. However, avoid allowing children to chew on or ingest parts of the kitchen.
- **Water Safety:** Ensure water used in the kitchen is clean. Empty the water reservoir and sink after each play session.

WARRANTY AND SUPPORT

ROBOTIME products are manufactured with quality and durability in mind. For warranty information, missing parts, or technical support, please contact ROBOTIME customer service through their official website or the retailer where the product was purchased.

Please have your model number (RBT-6-WH001) and proof of purchase ready when contacting support.