

Romicta HD Satellite Receiver (Model B0DPHNKY4S)

Romicta HD Satellite Receiver

INSTRUCTION MANUAL

Model: B0DPHNKY4S

Sections:

[Introduction](#) [Safety](#) [Contents](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [V](#)
[& Support](#)

1. Introduction

Thank you for choosing the Romicta HD Satellite Receiver. This device is designed to provide high-definition satellite television reception, offering a wide range of features including DVB-S/S2 compatibility, PVR (Personal Video Recorder) functionality, EPG (Electronic Program Guide), USB media playback, and internet connectivity for services like YouTube and weather updates. This manual provides essential information for the safe and efficient use of your new satellite receiver. Please read it thoroughly before installation and operation.

2. Safety Information

Please observe the following safety precautions to prevent damage to the device and ensure your safety:

- **Power Supply:** Use only the specified power adapter. Ensure the voltage matches the requirements of your region.
- **Ventilation:** Do not block ventilation openings. Place the receiver in a well-ventilated area to prevent overheating.
- **Water and Moisture:** Do not expose the device to rain, moisture, or liquids. Do not place objects filled with liquids, such as vases, on the receiver.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel. Opening the casing may expose you to dangerous voltage or other hazards.
- **Placement:** Place the receiver on a stable, flat surface. Avoid placing it near heat sources or in direct sunlight.
- **Lightning:** During a lightning storm or when unused for long periods, unplug the receiver from the power outlet and disconnect the antenna cable.

3. Package Contents

Please check the package for the following items:

- Romicta HD Satellite Receiver Unit
- Remote Control
- Power Adapter
- HDMI Cable
- User Manual (this document)
- *Note: Batteries for the remote control are typically not included and must be purchased separately.*

4. Product Overview

This section describes the main components and ports of your Romicta HD Satellite Receiver.

Front Panel

The front panel typically includes:

- **Power Button:** To turn the unit on/off or put it into standby.
- **Channel Up/Down Buttons:** For changing channels.
- **Volume Up/Down Buttons:** For adjusting volume.
- **LED Display:** Shows channel number or time.
- **USB Port:** For connecting USB storage devices for PVR or media playback.

Image of Front Panel: No image URL was provided for this product. Please refer to the physical device for visual reference.

Rear Panel

The rear panel typically includes the following connection ports:

- **LNB IN:** Connects to your satellite dish LNB.
- **HDMI OUT:** Connects to your TV or display for high-definition video and audio.
- **SCART:** Connects to older TVs or VCRs for standard definition video and audio.
- **USB Port:** Additional USB port for storage or Wi-Fi dongle (if supported).
- **Ethernet Port (LAN):** For wired internet connection.
- **DC IN:** Connects to the power adapter.
- **Coaxial/SPDIF:** Digital audio output.

Image of Rear Panel Ports: No image URL was provided for this product. Please refer to the physical device for visual reference.

5. Setup

5.1 Connecting the Receiver

1. **Connect Satellite Cable:** Connect the satellite cable from your LNB (on the dish) to the 'LNB IN' port on the back of the receiver.
2. **Connect to TV:**
 - For HD quality, connect an HDMI cable from the 'HDMI OUT' port on the receiver to an available HDMI input on your TV.
 - For standard definition, connect a SCART cable from the 'SCART' port on the receiver to the

SCART input on your TV.

3. Connect to Internet (Optional):

- For wired connection, connect an Ethernet cable from your router to the 'LAN' port on the receiver.
 - For wireless connection, insert a compatible USB Wi-Fi dongle (not included) into a USB port.
4. **Connect Power:** Connect the power adapter to the 'DC IN' port on the receiver, then plug the adapter into a power outlet.

5.2 First-Time Installation and Channel Scan

Upon first power-on, the receiver will typically guide you through an initial setup wizard.

1. **Language Selection:** Select your preferred language using the remote control.
2. **Antenna Setup:** Navigate to the 'Antenna Setup' or 'Satellite Setup' menu.
3. **Satellite Selection:** Select the satellite(s) you wish to receive (e.g., Hot Bird, Astra). Ensure your dish is correctly aligned to these satellites.
4. **LNB Settings:** Configure LNB type (Universal, Single, etc.) and LNB frequency according to your LNB specifications.
5. **DiSEqC Settings (if applicable):** If you have multiple LNBs or a motor, configure DiSEqC settings.
6. **Channel Scan:** Select 'Scan' or 'Blind Scan' to search for available channels. This process may take several minutes.
7. **Save Channels:** Once the scan is complete, save the found channels.

Video: First-Time Setup Guide. No video URL was provided for this product. Please refer to the on-screen instructions during setup.

6. Operating Instructions

6.1 Basic Functions

- **Power On/Off:** Press the **POWER** button on the remote control.
- **Channel Change:** Use the **CH+/CH-** buttons or enter the channel number directly.
- **Volume Control:** Use the **VOL+/VOL-** buttons.
- **Mute:** Press the **MUTE** button to silence the audio.
- **EPG (Electronic Program Guide):** Press the **EPG** button to view program schedules.
- **Info:** Press the **INFO** button to display current channel information.

6.2 Advanced Features

- **PVR (Personal Video Recorder):** Connect a USB storage device (USB stick or external HDD) to a USB port. Press the **REC** button to start recording the current program. Press **STOP** to end recording. Recordings can be accessed via the 'PVR Manager' or 'Media Center' menu.
- **Timeshift:** While watching a program, press the **PAUSE** button to activate Timeshift. You can then pause live TV and resume playback later.
- **USB Media Playback:** Insert a USB storage device containing media files (videos, music, photos). Navigate to the 'Media Center' or 'USB' menu to browse and play your files. Supported formats typically include MP3, JPEG, AVI, MKV.
- **YouTube & Weather:** If connected to the internet, access these applications from the main menu. Ensure your internet connection is stable for optimal performance.
- **Channel Editing:** Access the 'Channel Manager' menu to move, delete, lock, or rename channels.

6.3 Menu Navigation

Use the **MENU** button to access the main menu. Use the **ARROW** buttons to navigate through options and **OK** to confirm. Use **EXIT** or **BACK** to return to the previous screen or exit the menu.

7. Maintenance

7.1 Cleaning

To clean the receiver, first disconnect it from the power supply. Use a soft, dry, lint-free cloth to wipe the exterior. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid spraying liquids directly onto the unit.

7.2 Software Updates

Periodically, new software versions may be released to improve performance or add features. Check the manufacturer's website for available updates. Updates can typically be performed via USB (download the firmware to a USB stick and follow on-screen instructions) or sometimes directly over the internet (OTA - Over-The-Air) if the feature is supported and enabled.

Image: USB Update Process. No image URL was provided for this product. Refer to the software update section in the receiver's on-screen menu.

8. Troubleshooting

If you encounter issues with your receiver, please consult the following table before contacting support.

Problem	Possible Cause	Solution
No power	Power cable loose; Power outlet faulty; Power adapter faulty.	Check power cable connection; Try a different outlet; Contact support if adapter is faulty.
No signal / No picture	Satellite cable loose/damaged; Incorrect LNB settings; Dish misalignment; Incorrect input on TV.	Check satellite cable connection; Verify LNB settings in menu; Re-align dish if necessary; Select correct HDMI/SCART input on TV.
Remote control not working	Batteries dead/incorrectly inserted; Obstruction between remote and receiver; Remote sensor blocked.	Replace batteries; Ensure line of sight to receiver; Clear any obstructions.
No sound	Volume muted/low; Audio cable loose; Incorrect audio settings.	Unmute/increase volume; Check HDMI/SCART audio connections; Verify audio output settings in menu.
Internet features not working	No internet connection; Incorrect network settings; USB Wi-Fi dongle not compatible.	Check network cable/Wi-Fi connection; Verify network settings (IP, DNS); Ensure Wi-Fi dongle is compatible.

9. Specifications

Please note that specifications are subject to change without prior notice.

- **Model:** Romicta HD Satellite Receiver (B0DPHKNKY4S)
- **Tuner:** DVB-S/S2
- **Video Decoding:** MPEG-2, MPEG-4/H.264, H.265 (HEVC) (check specific model for H.265 support)
- **Audio Decoding:** MPEG-1 Layer I/II, Dolby Digital (AC3)
- **Resolution:** Up to 1080p

- **Connectivity:** HDMI, SCART, USB (x2), LNB IN, Ethernet (LAN), Coaxial/SPDIF
 - **Features:** PVR, Timeshift, EPG, USB Media Player, YouTube, Weather
 - **Power Supply:** DC 12V (via external adapter)
 - **Dimensions:** (Typical, exact dimensions may vary) Approx. 168mm x 100mm x 35mm
 - **Weight:** (Typical, exact weight may vary) Approx. 0.5 kg
-

10. Warranty and Support

Romicta products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your package or visit the official Romicta website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Romicta customer service through the contact information provided on the official website or your purchase platform. When contacting support, please have your product model number (B0DPHMKY4S) and proof of purchase ready.

Note: Specific warranty periods and support channels may vary by region and retailer.

© 2024 Romicta. All rights reserved.

This manual is for informational purposes only. Romicta reserves the right to make changes to product specifications and features without prior notice.