

Manuals.plus /
> Fanbulous /
> Fanbulous 62 Inch Ceiling Fan Instruction Manual

Fanbulous F-YW62BK-1D02

Fanbulous 62 Inch Ceiling Fan Instruction Manual

Model: F-YW62BK-1D02 | Brand: Fanbulous

Safety Information

Components

Setup &
Installation

Operating
Instructions
Warranty &
Support

Maintenance

Troubleshooting

Specifications

1. SAFETY INFORMATION

Read all instructions carefully before installation and use. Retain this manual for future reference.

- Ensure power is disconnected at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes.
- Consult a qualified electrician if you are unsure about wiring procedures.
- Mounting structure must be capable of supporting the fan's weight (approximately 22.5 lbs).
- Keep hands, clothing, and other objects clear of fan blades during operation.
- Do not operate the fan if any part is damaged.
- This fan is suitable for indoor or covered outdoor use. Do not expose to direct water spray.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation.



Image: Overview of the Fanbulous 62 Inch Ceiling Fan components. This includes the main motor housing, eight dual-finish fan blades (black and walnut), three different length downrods (5", 10", 15"), and the remote control with its wall mounting bracket.

List of Components:

- Motor Housing Assembly
- Fan Blades (8x, dual-finish: Black/Walnut)
- Downrods (3x: 5-inch, 10-inch, 15-inch)
- Mounting Bracket
- Canopy
- Remote Control
- Remote Control Wall Bracket
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

3. SETUP & INSTALLATION

Follow these steps for proper installation. Professional installation is recommended if you are not familiar with electrical wiring.

3.1 Choose Downrod Length

Select the appropriate downrod (5", 10", or 15") based on your ceiling height and desired fan clearance. The fan can also be installed on sloped ceilings up to 15 degrees.

Adjustable Three Downrods

Improved sensation of wind speed and air circulation



Image: This diagram illustrates the use of three different downrod lengths (5", 10", 15") for various ceiling types: low ceilings, high ceilings, and slanted ceilings (up to 15 degrees). The image shows how the fan appears with each downrod option.

3.2 Mounting the Fan

1. **Turn off Power:** Ensure the power supply to the installation location is completely off at the circuit breaker.
2. **Install Mounting Bracket:** Secure the mounting bracket to the ceiling junction box. The junction box must be listed for fan support.
3. **Assemble Downrod:** Feed the fan wires through the chosen downrod. Secure the downrod to the motor housing.
4. **Hang Fan:** Carefully lift the fan assembly and hang it on the mounting bracket.
5. **Wire Connections:** Connect the fan's electrical wires to the household wiring according to local codes. Use the provided wire nuts.
6. **Secure Canopy:** Slide the canopy up to the ceiling and secure it to the mounting bracket, covering the wiring.
7. **Attach Blades:** Attach the eight fan blades to the motor housing. Ensure they are securely fastened. Note the dual-finish blades (black and walnut) allow for aesthetic customization.



Image: A close-up view of one of the fan blades, highlighting its dual-sided design with a black finish on one side and a

walnut finish on the other. This allows users to choose their preferred aesthetic during installation.

4. OPERATING INSTRUCTIONS

This ceiling fan is operated using the included remote control.

4.1 Remote Control Functions



Image: This image displays the remote control for the Fanbulous ceiling fan, with labels pointing to each button and describing its function. Functions include Fan ON/OFF, Reverse mode, Remote Controller Mute, Forward mode, Fan Stop, 1-6 Fan Speed settings, and 1/2/4 Hour Timer settings. The remote can also be mounted on a wall using the included bracket.

- **Fan ON/OFF:** Press to turn the fan on or off.
- **Speed Control (1-6):** Adjust fan speed from 1 (lowest) to 6 (highest).
- **Reverse Mode:** Changes the direction of blade rotation.
 - *Summer Forward Mode:* Blades rotate counter-clockwise to push cool air down.
 - *Winter Reverse Mode:* Blades rotate clockwise to pull warm air up, circulating it throughout the room.
- **Timer (1H/2H/4H):** Set the fan to automatically turn off after 1, 2, or 4 hours.
- **Mute:** Silences remote control beeps.

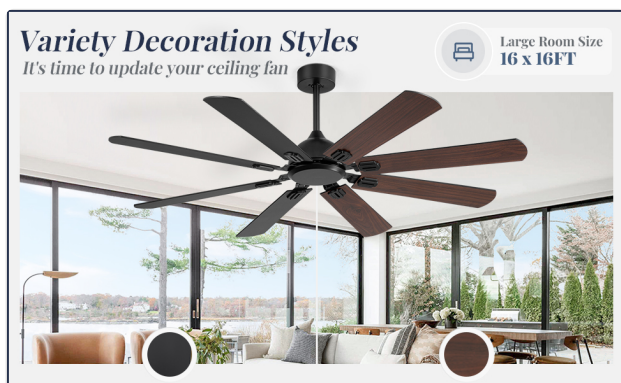


Image: This graphic demonstrates the reversible DC motor feature. It shows air flow patterns for "Summer Forward" mode (delivering cool air downwards) and "Winter Reverse" mode (circulating warm air upwards), with corresponding visual cues of snowflakes and flames.



Image: This image illustrates the fan's 6-speed settings and 1/2/4 hour timer options. It suggests optimal speed ranges for different activities: 1-2 speed for sleeping, 3-4 speed for working, and 5-6 speed for sports or higher air circulation needs.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tight and that blades are not bent or damaged. A balancing kit (not included) may be used if necessary.
- **Tighten Fasteners:** Annually check all screws and fasteners for tightness.
- **No Lubrication Required:** The DC motor is permanently lubricated and does not require oiling.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Fan does not start	<ul style="list-style-type: none">◦ No power to the fan.◦ Loose wire connections.◦ Remote control battery low or dead.	<ul style="list-style-type: none">◦ Check circuit breaker and wall switch.◦ Verify all wire connections are secure (ensure power is off first).◦ Replace remote control batteries.
Fan wobbles	<ul style="list-style-type: none">◦ Loose blade screws.◦ Improperly balanced blades.◦ Loose mounting bracket.	<ul style="list-style-type: none">◦ Tighten all blade screws.◦ Use a blade balancing kit (not included).◦ Ensure mounting bracket is securely fastened to the ceiling.
Remote control not working	<ul style="list-style-type: none">◦ Low or dead batteries.◦ Incorrect pairing.◦ Obstruction between remote and receiver.	<ul style="list-style-type: none">◦ Replace batteries.◦ Refer to remote pairing instructions in the full manual (if applicable).◦ Ensure clear line of sight.

Problem	Possible Cause	Solution
Fan makes excessive noise	<ul style="list-style-type: none">◦ Loose screws.◦ Blades hitting an obstruction.◦ Motor issue (rare).	<ul style="list-style-type: none">◦ Check and tighten all screws.◦ Ensure nothing is obstructing the blades.◦ Contact customer support if noise persists after checking other causes.

7. SPECIFICATIONS

Feature	Detail
Brand	Fanbulous
Model Name	F-YW62BK-1D02
Size	62 Inch
Color	Black (Dual-finish blades: Black/Walnut)
Electric Fan Design	Ceiling Fan
Power Source	DC Motor
Voltage	120 Volts (DC)
Control Method	Remote Control
Number of Power Levels	6 Speeds
Special Feature	Reversible DC Motor, Timer (1/2/4H)
Indoor/Outdoor Usage	Indoor or Covered Outdoor
Item Weight	22.5 pounds
Product Dimensions	25.12"D x 11.7"W x 9.37"H (packaging dimensions, fan diameter is 62")
Sloped Ceiling Compatibility	Up to 15 degrees

8. WARRANTY & SUPPORT

Fanbulous provides a 2-year after-sales support for this product.

For technical assistance, troubleshooting, or warranty claims, please contact Fanbulous customer support through the retailer where the product was purchased or visit the official Fanbulous store page:

[Visit the Fanbulous Store on Amazon](#)

Please have your model number (F-YW62BK-1D02) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPHQ8JT1>

More documents and user manuals: <https://manuals.plus/>