

AiBaoQi T8

AiBaoQi HAMTOD T8 4G Volte Flip Phone User Manual

Model: T8

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your AiBaoQi HAMTOD T8 4G Volte Flip Phone. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. The HAMTOD T8 is designed for ease of use, featuring a classic flip design, dual screens, and essential communication functions.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- HAMTOD T8 Mobile Phone (1 unit)
- USB Data Cable (1 unit)
- Charger (1 unit)
- Rechargeable Battery (1 unit)
- Instruction Manual (1 unit)
- Packaging Box (1 unit)

3. PRODUCT OVERVIEW

The HAMTOD T8 features a compact flip design with dual displays and an intuitive button layout.



Figure 3.1: HAMTOD T8 Flip Phone (Closed View)

The phone, when closed, displays an external 1.77-inch colorful HD screen for quick access to time, date, and notifications. The rear features a prominent SOS button for emergency situations.



Figure 3.2: Key Features Overview

Internally, the phone is equipped with a 1500mAh battery, 4G VoLTE connectivity, an RTOS operating system, and a T107 Quad-core 1.0GHz processor.



Figure 3.3: HAMTOD T8 Flip Phone (Open View)

When opened, the main 2.8-inch HD display provides a clear interface for navigation and interaction. The large buttons and simple menu are designed for user convenience.

4. SETUP

4.1 Battery Installation

1. Remove the back cover of the phone by gently prying it open from the designated notch.
2. Insert the 1500mAh Li-ion battery into the battery compartment, ensuring the gold contacts align with the phone's terminals.
3. Replace the back cover, pressing firmly until it clicks into place.

4.2 SIM Card and TF Card Installation

The HAMTOD T8 supports dual Micro SIM cards and one TF (MicroSD) card up to 64GB.

1. With the battery removed, locate the SIM card slots (SIM1 and SIM2) and the TF card slot.
2. Carefully insert your Micro SIM cards into the respective slots with the gold contacts facing down.
3. If desired, insert a TF card into its dedicated slot.
4. Reinstall the battery and back cover.

4.3 Initial Charging

Before first use, fully charge the phone's battery.

1. Connect the USB data cable to the phone's USB Type C port.
2. Connect the other end of the USB data cable to the provided charger.
3. Plug the charger into a power outlet.
4. The charging indicator will appear on the screen. Allow the phone to charge until the battery icon shows full.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call button, then select 'Power Off' from the options.

5.2 Making and Receiving Calls

- **Making a Call:** Open the flip, dial the number using the keypad, and press the Green Call button.
- **Receiving a Call:** Open the flip to answer an incoming call, or press the Green Call button. Press the Red End Call button to reject or end a call.
- **Handsfree:** During a call, you can activate the handsfree speaker function.

5.3 SOS Emergency Button



Figure 5.1: SOS Button Detail

The dedicated SOS button is located on the back of the phone. In an emergency:

1. Press and hold the SOS button for a few seconds.
2. The phone will automatically dial up to 5 pre-set emergency contacts sequentially until one answers.
3. An emergency SMS message will also be sent to these contacts.

To set up SOS contacts, navigate to the 'SOS Settings' menu in the phone's settings.

5.4 Messaging

Access the 'Messages' menu to compose, send, and read SMS messages.

5.5 Contacts

Store and manage your contacts in the 'Phonebook' or 'Contacts' menu. You can save numbers to the phone's memory or to the SIM card.

5.6 Multimedia and Applications

The HAMTOD T8 includes various multimedia features and supports basic applications:

- **Music Player:** Play audio files stored on your TF card.
- **Video Player:** View video files.
- **FM Radio:** Listen to local radio stations.
- **Sound Recorder:** Record audio memos.

- **Video Recorder:** Capture short videos.
- **Whatsapp/Facebook:** Access these applications (requires data connection).

5.7 Display and Navigation

The phone features a 2.8-inch HD main display and a 1.77-inch external colorful HD screen. Both displays support large fonts and icons for improved readability. Navigation is done through a simple, list-based menu system using the directional keys and central selection button.

6. MAINTENANCE

- Keep the phone dry. Moisture can damage electronic circuits.
- Do not expose the phone to extreme temperatures.
- Clean the phone with a soft, dry cloth. Avoid using harsh chemicals or cleaning agents.
- Handle the phone gently. Avoid dropping or subjecting it to strong impacts.
- Use only approved batteries, chargers, and accessories.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on	Low battery; Battery not installed correctly	Charge the battery; Reinstall the battery, ensuring proper contact.
Cannot make or receive calls	No SIM card; SIM card not installed correctly; No network signal	Install SIM card; Reinstall SIM card; Move to an area with better network coverage.
Poor call quality	Weak network signal; Obstructions	Move to an area with better signal; Avoid using in enclosed spaces.
Battery drains quickly	Excessive usage; Many background applications	Reduce screen brightness; Close unused applications; Limit continuous usage.
SOS button not working	SOS contacts not set up; Incorrect numbers	Ensure SOS contacts are correctly configured in settings.

8. SPECIFICATIONS

Feature	Specification
Brand	AiBaoQi
Model	T8
Main Display	2.8 inch HD LCD
External Display	1.77 inch Colorful HD
Processor	T107 Quad-core, 1.0GHz
Operating System	RTOS
Cellular Technology	4G VoLTE

Feature	Specification
SIM Card Slots	Dual Micro SIM
Expandable Storage	Supports up to 64GB TF card
Internal Flash Memory	48 MB
Battery Capacity	1500mAh Lithium Ion
Standby Time	Up to 2 weeks
Charging Port	USB Type C
Form Factor	Foldable Case (Flip Phone)
Special Features	SOS Button, Big Buttons, Loud Speaker, Simple Menu, Whatsapp, Facebook



Figure 8.1: Battery Life Overview

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPHY2YWV>

More documents and user manuals: <https://manuals.plus/>