

Philips STH5030/20

Philips STH 5030/20 Handheld Garment Steamer User Manual

Model: STH5030/20

1. SAFETY INFORMATION

Please read this user manual carefully before using the appliance and save it for future reference. Incorrect use may result in electric shock, fire, or injury.

- Always ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance in water or any other liquid.
- Keep the appliance and its cord out of reach of children.
- The steam is hot. Never direct steam at people or pets.
- Do not touch the hot steam plate during or immediately after use.
- Unplug the appliance during filling and cleaning, and when not in use.
- Use only distilled or demineralized water to prevent limescale buildup.
- Do not use the appliance if the plug, main cord, or the appliance itself shows visible damage.

2. PRODUCT OVERVIEW

The Philips STH 5030/20 Handheld Garment Steamer is designed for quick and efficient wrinkle removal from various fabrics. Its compact design makes it suitable for both home use and travel.

2.1 Components

- Handheld Garment Steamer unit
- Detachable Water Tank (200ml)
- Additional Water Tank (120ml)
- Glove Pouch (2-in-1)
- Style Mat



Image 1: Philips STH 5030/20 Handheld Garment Steamer with its included accessories: the main steamer unit, two water tanks, a protective glove, and a style mat.



Image 2: Overview of key features including 200ml detachable water tank, 1400W power, 35-second heat-up time, 99% bacteria and dustmite kill rate, 24 g/min steam rate, and horizontal/vertical steaming capability.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all listed accessories are present.

3.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Remove the water tank from the steamer unit.
3. Open the rubber cap on the water tank.
4. Fill the water tank with distilled or demineralized water up to the MAX indication. Do not overfill.
5. Close the rubber cap securely and reattach the water tank to the steamer unit.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Heating

1. Plug the appliance into a suitable power outlet.
2. The steamer will heat up in approximately 35 seconds. The indicator light will stop flashing when ready for use.

4.2 Selecting Steam Mode

The steamer offers two steam settings:

- **Eco Mode:** For lighter fabrics and energy saving.
- **Max Mode:** For tougher wrinkles and thicker fabrics, providing up to 24 g/min continuous steam.

Press the steam mode button to toggle between Eco and Max settings.

4.3 Steaming Garments

The steamer features an adjustable head and a pointed tip for precision, allowing for both horizontal and vertical steaming.

1. Hang the garment on a hanger or lay it flat on the style mat.
2. Hold the steamer upright for vertical steaming or adjust the head for horizontal steaming.
3. Press and hold the steam trigger to release steam.
4. Gently press the heated steam plate against the fabric and move it downwards slowly.
5. For delicate fabrics, use the included glove pouch for protection.
6. The Active Heated Steam Plate ensures no burns on all ironable fabrics.



24 g/min continuous steam for quick de-wrinkling

Image 3: A user demonstrating vertical steaming on a red shirt, showcasing the continuous steam output.



Smooth horizontal & vertical steaming

Image 4: Illustration of both horizontal steaming on a flat surface and vertical steaming on a hanging garment, highlighting the versatility of the steamer.

Safe on
all fabrics



Image 5: The steamer resting on a red knitted fabric, emphasizing its safety for all ironable fabrics with a 'No Burns Guaranteed' feature.

5. MAINTENANCE

5.1 Cleaning

1. Always unplug the appliance and allow it to cool down completely before cleaning.
2. Wipe the outer casing of the steamer with a soft, damp cloth.
3. Clean the steam plate with a damp cloth. Do not use abrasive cleaning agents or scourers.
4. Empty the water tank after each use to prevent water stagnation and mineral buildup.

5.2 Descaling

To maintain optimal performance and extend the lifespan of your steamer, regular descaling is recommended, especially in areas with hard water. Refer to the full instruction manual for detailed descaling procedures.

5.3 Storage

Store the appliance in a dry, cool place, away from direct sunlight and moisture. Ensure the water tank is empty before storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam is coming out.	Water tank is empty or not properly inserted. Appliance is not heated up.	Fill the water tank and ensure it is correctly inserted. Wait for the indicator light to stop flashing.
Water leakage from the steam plate.	Appliance not hot enough. Overfilling the water tank.	Wait until the indicator light stops flashing before steaming. Do not fill water above the MAX line.
Steamer is not heating up.	Appliance not plugged in correctly. Power outlet issue.	Check if the plug is fully inserted into the outlet. Test the outlet with another appliance.

7. SPECIFICATIONS

Feature	Specification
Model Number	STH5030/20
Wattage	1400 Watts
Voltage	240 Volts
Heat Time	35 Seconds
Water Tank Capacity	200 Milliliters (main), 120 Milliliters (additional)
Continuous Steam Output	Up to 24 g/min
Product Dimensions (L x W x H)	11.3L x 35W x 15H Centimeters
Item Weight	1.2 Kilograms
Country of Origin	China

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Philips appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase.

8.2 Customer Support

For further assistance, product registration, or to find answers to frequently asked questions, please visit the official Philips support website or contact your local Philips customer service center. Contact details can typically be found in the warranty booklet or on the Philips brand website.

Manufacturer: DAP B.V. Tussendiepen 4 a, 9206AD Drachten, The Netherlands, Versuni Home Solutions,

China B.V

Importer: Versuni India Home Solutions Limited (Formerly known as Philips Domestic Appliances India Ltd.), DLF IT Park, 3rd Floor, Tower A, 08 Block AF, Major Arterial Road, New Town, Rajarhat, Kolkata, West Bengal 700156, India.