

Manuals.plus /

- › [Effireli](#) /
- › EN2BB27H Replacement Remote for Hisense TV H50AE6030 H43AE6030 H32AE5500 H39AE5500 H43AE5500 H43AE6000 H50AE6000 H55AE6000 H65AE6000 EN2BB27H T225284 H65AE6030 H55AE6030 H50AE6000 User Manual

Effireli YK-EN2BB27H

EN2BB27H Replacement Remote Control User Manual

For Hisense TV Models: H50AE6030, H43AE6030, H32AE5500, H39AE5500, H43AE5500, H43AE6000, H50AE6000, H55AE6000, H65AE6000, EN2BB27H, T225284, H65AE6030, H55AE6030, H50AE6000

1. PRODUCT OVERVIEW

This manual provides instructions for the Effireli EN2BB27H Replacement Remote Control, designed for various Hisense TV models. This remote is engineered for immediate use without the need for complex programming or setup procedures. Simply insert batteries and begin operation.



Image 1: Front view of the EN2BB27H Replacement Remote Control. The remote is dark gray with white button labels. Key buttons visible include Power (red), Input, number pad (0-9), navigation cluster with OK button, Volume and Channel controls, playback buttons, and dedicated app buttons for Netflix and YouTube.

1.1 Key Features

- **No Programming Required:** Ready to use out of the box.
- **Direct Operation:** Point and operate with ease.
- **Infrared Connectivity:** Standard IR signal for reliable control.
- **Wide Compatibility:** Compatible with a range of Hisense TV models.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

2.2 Initial Use

Once batteries are installed, the remote is ready for immediate use. No pairing or programming steps are necessary. Point the remote directly at your Hisense TV and press the desired button.

3. OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your replacement remote control.

Button	Function
Power (Red)	Turns the TV on or off.
INPUT	Selects the input source (HDMI, AV, etc.).
0-9 (Number Buttons)	Directly selects TV channels.
GUIDE	Displays the electronic program guide.
Subtitle	Activates or deactivates subtitles.
Navigation (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections in menus.
BACK	Returns to the previous screen or menu.
Home (House icon)	Accesses the TV's home screen or smart TV portal.
EXIT	Exits the current menu or application.

Button	Function
VOL +/-	Adjusts the volume level.
CH.List	Displays the channel list.
CH +/-	Changes the TV channel up or down.
Mute (Speaker with X)	Mutes or unmutes the TV audio.
Playback Controls (Rewind, Play/Pause, Fast Forward, Stop)	Controls media playback (e.g., USB, streaming apps).
Netflix	Direct access to the Netflix application.
YouTube	Direct access to the YouTube application.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting liquids inside the remote.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not responding.	◦ Batteries: Check if batteries are inserted correctly (+/-). Replace with fresh AAA batteries. ◦ Line of Sight: Ensure there are no obstructions between the remote and the TV's IR sensor. ◦ Distance: Make sure you are within the effective range of the remote.
Some buttons are not working.	◦ Compatibility: While this remote is widely compatible, some specific TV models or functions might behave differently. Refer to your TV's original manual for specific button functions. ◦ Damage: Inspect the remote for any physical damage or stuck buttons.
Remote works intermittently.	◦ Low Batteries: Replace batteries. ◦ Interference: Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR sensor.

Important Note: If your TV model number is not explicitly listed in the "Compatible Models" section or if your original remote looks significantly different, please contact the seller directly to confirm compatibility before assuming a defect.

6. SPECIFICATIONS

- **Model Number:** YK-EN2BB27H
- **Brand:** Effireli
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1 (Television)
- **Special Feature:** No Programming Required
- **Power Source:** 2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a **30-day money-back guarantee** from the date of purchase. Additionally, a **12-month warranty** is provided, covering manufacturing defects. Returns and exchanges are accepted within this warranty period for eligible issues.

7.2 Customer Support

For any questions, concerns, or warranty claims, please contact the seller or manufacturer through the platform where the product was purchased. Provide your order details and a clear description of the issue for prompt assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPJ99TH8>

More documents and user manuals: <https://manuals.plus/>