

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BRINKS](#) /

› **BRINKS 79mm Outdoor Lock Box Instruction Manual, Model AB5-93201**

BRINKS AB5-93201

BRINKS 79mm Outdoor Lock Box Instruction Manual

Model: AB5-93201

INTRODUCTION

This manual provides detailed instructions for the BRINKS 79mm Outdoor Lock Box, a secure solution for storing keys and key cards. Designed for both indoor and outdoor use, this lock box features a durable aluminum body, a 4-dial resettable combination mechanism, and a hardened steel shackle for enhanced security. It is ideal for granting access to authorized individuals such as family members, service providers, or realtors.

The BRINKS lock box is built to withstand various environmental conditions, ensuring reliable performance and protection for your valuables.



Image: The BRINKS 79mm Outdoor Lock Box shown from the front and with its compartment open, revealing the combination dials.



Image: Diagram highlighting key features: 79mm body, 2,500lb cut resistant steel shackle, capacity for up to 10 keys or key cards, and a 4-dial resettable combination.

SETUP

Initial Combination

The lock box is factory preset to open at **0-0-0-0**. Even if the dials appear to be set to other numbers, this is the default combination.

How to Reset Your Combination

1. Open the lock box using the preset combination 0-0-0-0.
2. Locate the reset lever inside the lock box. Push the reset lever from its original 'A' position to the 'B' position.
3. Set the dials to your desired new 4-digit combination.
4. Push the reset lever back from position 'B' to position 'A'.
5. Your new combination is now set. It is crucial to write down and store your new combination in a secure, memorable location.



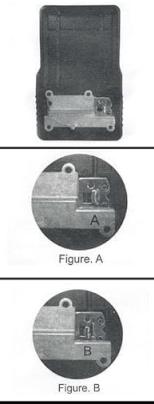
 	<p>How To Open: Turn the dials to preset combination 0-0-0-0 and pull down from the top of the door to open. (The lock is preset to open at 0-0-0-0. Even though the dials may appear in other numbers.)</p> <p>How To Close: Turn the dials to preset combination 0-0-0-0 and push up to close. Scramble combination.</p>	<p>Comment ouvrir : Tourner les molettes jusqu'à la combinaison préconfigurée 0-0-0-0 et tirer vers le bas à partir du haut de la porte pour ouvrir. (Le cadenas est pré-configuré pour s'ouvrir sur 0-0-0-0. Même si les molettes paraissent être sur d'autres chiffres.)</p> <p>Comment fermer : Tourner les molettes jusqu'à la combinaison 0-0-0-0 et pousser vers le haut pour fermer. Brouiller la combinaison.</p>	<p>Cómo abrir: Gire los diales a la combinación preestablecida 0-0-0-0 y tire hacia abajo en la parte superior de la puerta para abrir. (El candado ha sido preestablecido para abrirse en la combinación 0-0-0-0, aunque los diales podrían aparecer en otros números.)</p> <p>Cómo cerrar: Gire los diales a la combinación preestablecida 0-0-0-0 y empuje hacia arriba para cerrar. Gire los diales al azar para ocultar la combinación.</p>
 Figure. A Figure. B	<p>How To Reset Combination: 1. Open the lock at preset number 0-0-0-0. 2. Push the reset lever from original A (see Fig. A) to B (see Fig. B) position. 3. Set the dial to new combination. 4. Push back the reset lever from position B to position A. 5. The new combination is now set. Write down and save your combination in a secure place.</p>	<p>Reconfiguration de la combinaison : 1. Ouvrir le cadenas à la combinaison pré-configurée 0-0-0-0. 2. Pousser le levier de remise à zéro à partir de sa position d'origine A (voir Fig. A) jusqu'à B (voir Fig. B). 3. Régler les molettes sur la nouvelle combinaison. 4. Repousser en arrière le levier de remise à zéro, de la position B à la position A. 5. La nouvelle combinaison est alors configurée. Incrire le numéro et le conserver en lieu sûr.</p>	<p>Cómo cambiar la combinación: 1. Abra el candado en el número preestablecido 0-0-0-0. 2. Empuje la palanca de reposición de la A original (vea la Fig. A) a la posición B (vea la Fig. B). 3. Establezca la nueva combinación en los diales. 4. Empuje otra vez la palanca de reposición de la posición B a la posición A. 5. La nueva combinación ha quedado establecida. Escríbala y guárdela en un lugar seguro.</p>
 Release Lever	<p>Opening the Shackle: 1. Open the lock box. 2. Slide the release lever in direction of the arrow. 3. Pull up on the shackle. 4. Affix to suitable anchor.</p> <p>Closing the Shackle: 1. Open the lock box. 2. Push down until it latches. 3. Then release the release lever.</p>	<p>Ouverture de l'anse: 1. Ouvrir le boîtier de sécurité. 2. Faire glisser le levier de libération dans le sens de la flèche. 3. Tirer sur l'anse vers le haut. 4. Attacher sur un point d'ancre fixe.</p> <p>Fermeture de l'anse: 1. Ouvrir le boîtier de sécurité 2. Appuyer sur l'anse vers le bas jusqu'à ce qu'elle s'enclenche. 3. Relâcher le levier de libération.</p>	<p>Cómo abrir el grillete: 1. Abra la caja de combinación. 2. Deslice la palanca de desenganche en la dirección de la flecha. 3. Tire del grillete hacia arriba. 4. Coloque sobre un anclaje adecuado.</p> <p>Cómo cerrar el grillete: 1. Abra la caja de combinación. 2. Empuje el grillete hacia abajo hasta que se enganche. 3. Suelte luego la palanca de desenganche.</p>

Image: Official instruction sheet detailing how to open, close, and reset the combination, as well as how to operate the shackle.

OPERATING THE LOCK BOX

How to Open the Lock Box

1. Turn the combination dials to your set 4-digit code.
2. Pull down on the front door of the lock box to open it.

How to Close the Lock Box

1. Align the front door with the main body and push it up until it securely latches.
2. Scramble the combination dials to secure the lock box.

Opening the Shackle

1. First, open the lock box by entering the correct combination.
2. Inside the lock box, locate and slide the shackle release lever in the direction of the arrow.
3. Pull the shackle upwards to detach it from the lock box.
4. Affix the lock box to a suitable anchor point, such as a doorknob or railing.

Closing the Shackle

1. Ensure the lock box is open.
2. Insert the shackle ends into their respective slots and push down firmly until it latches into place.
3. Release the shackle release lever.



Image: The BRINKS lock box shown installed on both a front door handle and a backdoor handle, illustrating typical usage scenarios.

MAINTENANCE

To ensure the longevity and reliable operation of your BRINKS lock box, consider the following maintenance tips:

- **Cleaning:** Periodically wipe down the exterior of the lock box with a soft, damp cloth to remove dirt and debris. Avoid abrasive cleaners that could damage the finish.
- **Lubrication:** For optimal performance, especially in outdoor environments, occasionally apply a silicone-based lubricant to the shackle mechanism and combination dials. This helps prevent rust and ensures smooth operation.
- **Weather Resistance:** While designed for outdoor use, placing the lock box in a sheltered location (e.g., under an awning or porch) can further protect it from extreme weather conditions, extending its lifespan.

- **Inspection:** Regularly inspect the shackle and body for any signs of wear, damage, or corrosion. Address any issues promptly to maintain security.

TROUBLESHOOTING

Lock Box Will Not Open

- **Incorrect Combination:** Double-check that you are entering the correct 4-digit combination. Ensure each dial is precisely aligned with the indicator marks.
- **Dials Stuck:** If the lock box has been exposed to extreme temperatures or moisture, the dials might become stiff or jammed. Try gently wiggling the dials while entering the combination. Applying a small amount of lubricant (as per maintenance section) may help.
- **Internal Mechanism Issues:** In rare cases, internal components might corrode or malfunction, especially if exposed to harsh elements without proper maintenance. Regular cleaning and lubrication can mitigate this.

Shackle Difficult to Open/Close

- **Obstruction:** Ensure there is no debris or foreign material obstructing the shackle mechanism or the release lever.
- **Lubrication:** Apply lubricant to the shackle and its locking points to ensure smooth movement.
- **Proper Alignment:** When closing the shackle, ensure it is perfectly aligned with the slots before pushing down firmly.

SPECIFICATIONS

Feature	Detail
Brand	BRINKS
Model Name	BRINKS - 79mm Outdoor Lock Box
Model Number	AB5-93201
Lock Type	4-Dial Resettable Combination Lock
Material	Aluminum body, Hardened Steel Shackle
Item Dimensions (L x W x H)	1.69 x 3.16 x 7 inches
Item Weight	2.66 pounds
Color	Black
Special Features	Resettable, Weather Resistant
Shackle Cut Resistance	Up to 2500 lbs
Key Capacity	Up to 10 keys or key cards

WARRANTY AND SUPPORT

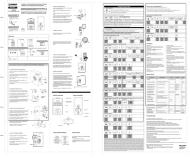
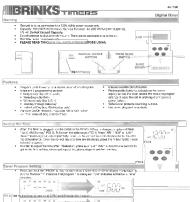
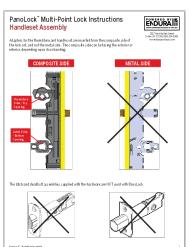
The BRINKS 79mm Outdoor Lock Box includes a **Lifetime Warranty**, reflecting our commitment to quality and durability. For warranty claims, technical assistance, or any questions regarding your product, please

contact BRINKS customer support through the official BRINKS website or your retailer's support channels.

For additional information and support, please visit the official [BRINKS Store on Amazon](#).

© 2025 BRINKS. All rights reserved.

Related Documents - AB5-93201

	<p>Brinks 44-1051 Outdoor Programmable Timer: Instructions and Setup Guide</p> <p>Detailed instructions for setting up and programming the Brinks 44-1051 outdoor digital timer. Learn how to set current time, create up to 6 daily on/off schedules, and use manual override and random functions.</p>
	<p>Brinks 999-70027 Fingerprint and Touchpad Electronic Deadbolt Installation Guide</p> <p>Detailed installation and programming instructions for the Brinks 999-70027 electronic deadbolt lock. Learn how to set up fingerprint and touchpad access, manage user codes, and troubleshoot common issues for enhanced home security.</p>
	<p>Brinks 44-1030 Digital Timer: Setting Instructions and Warranty Information</p> <p>User guide for the Brinks 44-1030 digital timer, covering time setting, program scheduling, and warranty details. Learn how to set your timer for optimal use.</p>
	<p>Brinks Padlocks and Portable Security Limited Lifetime Warranty Guide</p> <p>Official warranty information for Brinks Padlocks and Portable Security products, detailing coverage, limitations, and claim procedures from Hampton Products International.</p>
	<p>PanoLock Multi-Point Lock Handleset Assembly Instructions</p> <p>Comprehensive instructions for assembling the PanoLock™ Multi-Point Lock Handleset by Endura. This guide details adapter selection and installation steps for various lock brands and styles, ensuring proper fit and function.</p>