



Manuals.plus /

› Hipicute /

› Hipicute Licensed Audi 12V Kids Ride-On Car User Manual

Hipicute WsEdQJAS_L3wsG5KEIMJpA6d

Hipicute Licensed Audi 12V Kids Ride-On Car User Manual

Model: WsEdQJAS_L3wsG5KEIMJpA6d

1. IMPORTANT SAFETY INFORMATION

WARNING: Adult supervision is required at all times when the vehicle is in use.

- Read all instructions before operating the vehicle.
- Keep children away from moving parts.
- Ensure all assembly steps are completed correctly before first use.
- Do not operate near roads, steep inclines, or swimming pools.
- Always wear appropriate safety gear, such as a helmet.
- Only one rider at a time.
- Maximum weight capacity: 60 lbs.
- Recommended age: 3 years and up.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- 1x Audi 12V Kids Ride-On Car (main unit)
- 1x Remote Control
- 1x Charger
- 1x User Manual
- Assembly hardware (screws, washers, etc.)



Image 1: The Hipicute Licensed Audi 12V Kids Ride-On Car.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your ride-on car.

1. **Wheel Installation:** Attach all four wheels securely using the provided hardware. Ensure they rotate freely.
2. **Steering Wheel Assembly:** Connect the steering column to the vehicle body and secure the steering wheel. Ensure all electrical connections are properly seated.
3. **Seat Installation:** Place the seat onto the vehicle and fasten it according to the instructions.
4. **Battery Connection:** Connect the 12V battery. Refer to the battery compartment for specific connection points. Ensure a secure connection.
5. **Initial Charge:** Before first use, fully charge the battery for 8-12 hours. Do not overcharge.



Image 2: Rear view of the ride-on car with doors open, illustrating assembly points.

4. OPERATING INSTRUCTIONS

4.1 Vehicle Controls

- **Power Button:** Press to turn the vehicle on/off.
- **Forward/Reverse Switch:** Select driving direction.
- **Foot Pedal:** Press to accelerate. Release to brake.
- **Steering Wheel:** Turn left or right to steer.
- **Music/Horn Buttons:** Located on the steering wheel for sound effects.
- **LED Headlights:** Automatically illuminate when the vehicle is on.



Image 3: Steering wheel and dashboard controls, including multimedia functions.

4.2 Remote Control Operation

The 2.4G Bluetooth remote control allows parents to safely guide the vehicle.

- **Pairing:** Turn on the vehicle. Hold the pairing button on the remote until the indicator light flashes, then release. The light will become solid when paired.
- **Forward/Backward:** Use the joystick or directional buttons to move the car.
- **Left/Right:** Use the joystick or directional buttons to steer.
- **Speed Selection:** Adjust speed settings (low, medium, high) using the dedicated button on the remote.
- **Emergency Stop:** Press the 'P' button on the remote to immediately stop the vehicle.

5. MAINTENANCE

- **Battery Care:**
 - Recharge the battery after each use.

- If storing for extended periods, charge the battery once a month to prolong its lifespan.
- Do not allow the battery to fully discharge.
- Only use the provided charger.
- **Cleaning:** Wipe the vehicle with a soft, damp cloth. Do not use abrasive cleaners or solvents. Avoid spraying water directly onto electrical components.
- **Storage:** Store the vehicle in a dry, cool place away from direct sunlight and moisture.
- **Inspection:** Regularly check for loose screws, damaged wires, or worn parts. Replace any damaged components immediately.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not move.	Battery is low or disconnected. Power switch is off. Loose wire connection.	Charge the battery. Ensure battery is connected. Turn on power switch. Check all wire connections.
Remote control not working.	Remote batteries are dead. Remote not paired.	Replace remote batteries. Re-pair the remote control (refer to section 4.2).
Vehicle moves slowly.	Low battery charge. Overloaded vehicle. Operating on rough terrain.	Recharge battery. Ensure weight is within limits (60 lbs). Operate on smooth surfaces.
No sound from music/horn.	Volume is too low. Speaker connection issue.	Increase volume. Check speaker wire connections.

7. SPECIFICATIONS

- **Model:** WsEdQJAS_L3wsG5KEIMJpA6d
- **Brand:** Hipicute
- **Product Dimensions:** 39.37 x 23.11 x 17.44 inches (L x W x H)
- **Item Weight:** 31.6 pounds
- **Battery:** 12V (included)
- **Motor:** 25W x 2 (inferred from product image)
- **Speed:** 3-4 KM/HR (inferred from product image)
- **Load Capacity:** 60 lbs
- **Recommended Age:** 3 years and up (37-96 months)
- **Remote Control:** 2.4G Bluetooth (inferred from product image)

MULTIPLE FUNCTIONS

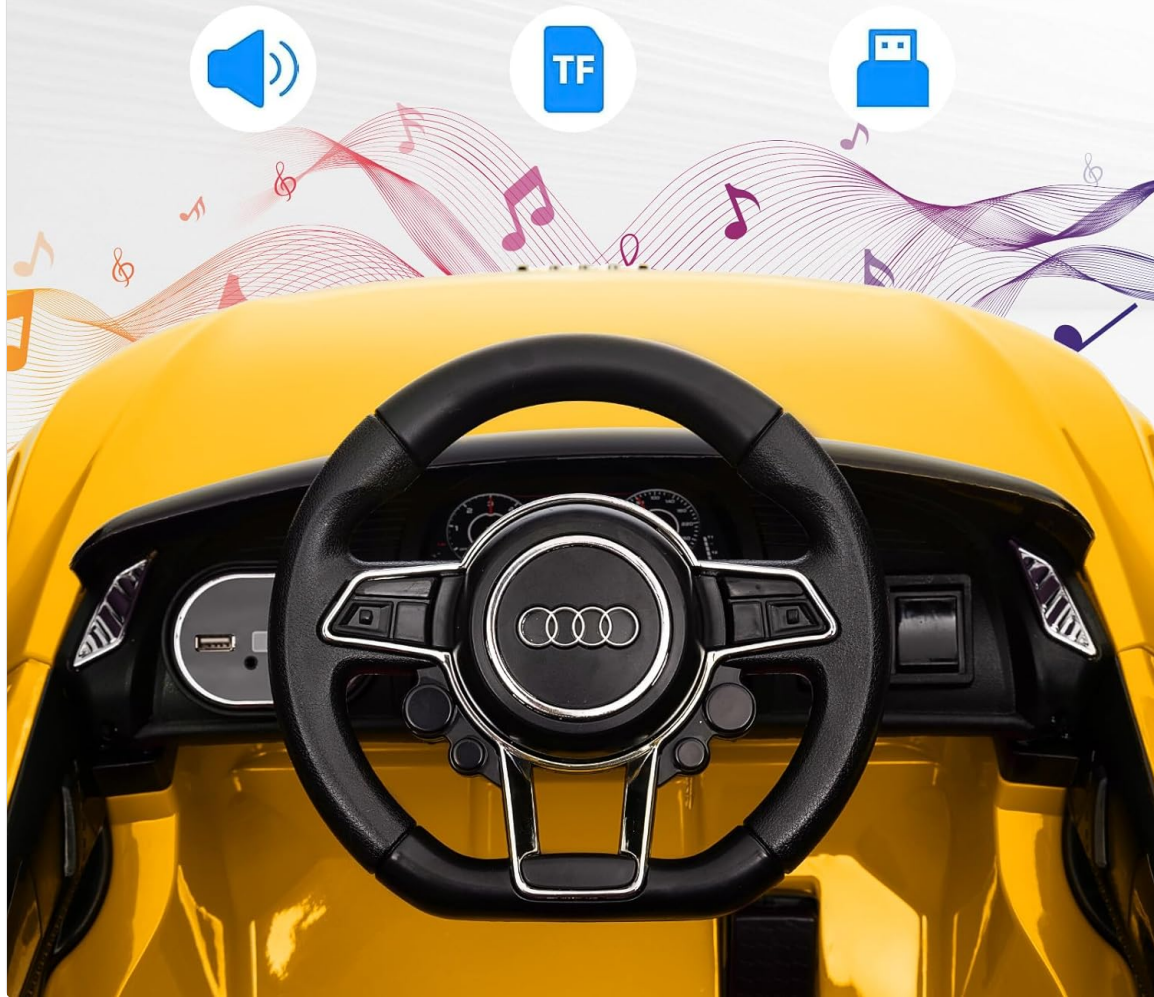


Image 4: Detailed product specifications and dimensions.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Hipicute customer service.

- **Manufacturer:** Hipicute
- **Contact Information:** Refer to the Hipicute official website or the contact details provided on the product packaging for the most up-to-date support information.
- **Product Registration:** Registering your product may provide additional warranty benefits and support.