

NKEB20245222374

User Manual for Generic Replacement Remote Control

Model: NKEB20245222374

INTRODUCTION

This manual provides essential information for the operation and maintenance of your Generic Replacement Remote Control, model NKEB20245222374. This remote is designed as a replacement for specific RCA 4K Smart LCD LED HDTV TV models, including RNSM4025 and RNSM4003-B.

Please note that as a replacement unit, some functions may differ or not be available compared to your original remote control. It is important to verify compatibility with your specific TV model. No programming or complex setup is required for this remote control.

Product Overview



Figure 1: Top-down view of the remote control, showing the full button layout including the number pad, navigation cluster, volume/channel controls, and dedicated app buttons.



Figure 2: Angled view of the remote control, highlighting the ergonomic design and button placement.

The remote control features a standard layout for ease of use, including a numeric keypad, channel and volume controls, navigation buttons, and dedicated buttons for popular streaming services like Netflix and YouTube, as well as USB and Audio input selection.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: This replacement remote control does not require any programming or pairing. It is ready for use once batteries are installed.

OPERATING INSTRUCTIONS

To operate your TV, point the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Pad (0-9):** Directly input channel numbers or other numerical selections.
- **Volume Up/Down (+/-):** Adjusts the audio volume.
- **Channel Up/Down (CH+/-):** Changes TV channels sequentially.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections on screen.
- **Back Button:** Returns to the previous menu or screen.

- **Exit Button:** Exits the current menu or application.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Dedicated App Buttons (Netflix, YouTube, USB, AUDIO):** Provide quick access to these specific applications or input sources.

Important: As a replacement remote, some advanced or specific functions of your original TV remote may not be supported. This is not indicative of a defect. For optimal functionality, ensure your TV model is listed as compatible.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity to prolong its lifespan.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the TV's sensor.
 - Point the remote directly at the TV.
- **Certain functions do not work:**
 - This is a replacement remote. Some advanced or specific functions of your original TV remote may not be supported. This is normal for universal or replacement remotes.
 - Verify that your TV model (RNSM4025, RNSM4003-B) is explicitly listed as compatible.
- **Remote works intermittently:**
 - Check battery level and replace if low.
 - Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR sensor.

If issues persist after following these steps, please contact the seller for further assistance. Providing your original remote part number or TV unit model can help in diagnosing compatibility issues.

SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Number	NKEB20245222374
Compatible Devices	RCA RNSM4025, RNSM4003-B 4K Smart LCD LED HDTV TV
Material	ABS/Plastic
Special Feature	Digital Display (referring to the TV it controls)
Number of Items	1 (Remote Control)
Color	Black Or White (as per product listing, actual color may vary)

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please contact the seller or manufacturer directly. Details for the manufacturer "REMOTE NKEB STORE" may be available through your purchase records.

When seeking support, it is helpful to provide the product's model number (NKEB20245222374) and, if possible, the original remote control's part number or your TV's exact model number.