

## Weavelife BL-001-6BK

# Weavelife Cordless Portable Immersion Blender 5-in-1 Set

Model: BL-001-6BK

[Introduction](#)   [Safety](#)   [Components](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty](#)  
& Support

## 1. INTRODUCTION

The Weavelife Cordless Portable Immersion Blender is a versatile 5-in-1 kitchen appliance designed for various food preparation tasks. This set includes a food blender, a 300ml chopper, a 600ml beaker, an egg whisk, and a milk frother. Its cordless design and powerful motor provide convenience and efficiency for blending, chopping, whisking, and frothing.



Image: The Weavelife Portable Hand Blender with its five multipurpose attachments, showcasing its versatility.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Do not immerse the motor unit in water or other liquids. Ensure hands are dry before handling the plug or operating the appliance.
- **Blade Safety:** Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning. Always ensure the appliance is unplugged before handling blades.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Usage:** Do not use the appliance for anything other than its intended purpose. Avoid blending hot liquids that may splash and cause

burns.

- **Maintenance:** Regularly inspect the appliance for any damage. Do not operate if the cord, plug, or any part of the appliance is damaged. Contact customer support for repairs.
- **Charging:** Use only the provided USB cable for charging. Do not attempt to charge with other cables or adapters.

### 3. COMPONENTS OVERVIEW

Your Weavelife 5-in-1 Immersion Blender set includes the following parts:

1. **Main Motor Unit:** The cordless handle with power and unlock buttons, and battery indicator lights.
2. **Immersion Blender Attachment:** For blending soups, sauces, smoothies, and baby food. Features a stainless steel blade.
3. **Chopper Attachment (300ml):** For chopping meat, onions, nuts, garlic, or vegetables.
4. **Egg Whisk Attachment:** For whipping cream, egg whites, or cake batter.
5. **Milk Frother Attachment:** For making delicious milk foam for coffee or drinks.
6. **Beaker (600ml):** A measuring cup for blending and mixing.
7. **USB Charging Cable:** For recharging the main motor unit.

## Cordless Power Immersion Blender



Cordless Power  
Handheld  
Blending



5-in-1 Blender  
Chopper,  
Milk frother  
and Whisk  
Attachments



Protected USB  
Charging Port



Dishwasher-Safe  
Parts



Stainless-Steel  
Blade



One-touch  
Control



Image: An overview of all components included in the 5-in-1 blender set, including the main unit, chopper, beaker, whisk, and milk frother.

## 4. SETUP AND CHARGING

---

### 4.1 Initial Charging

Before first use, fully charge the main motor unit. Connect the provided USB cable to the charging port on the blender and to a suitable USB power source. The indicator light will flash during charging and remain solid when fully charged.

### 4.2 Assembling Attachments

To attach any accessory, align the attachment with the main motor unit and twist until it locks securely into place. Ensure it is firmly attached before use.

Your browser does not support the video tag.

Video: Demonstrates the one-click installation of the immersion blender attachment to the main motor unit.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Powering On and Off

To activate the blender, **long-press the unlock button for 3 seconds** until the light flashes. Then, press the power button to start blending. The blender operates at a robust 13,000 RPM. It can run for up to 20 minutes continuously on a full charge.



Image: Visual guide for powering on the blender, showing the unlock and power buttons and indicator lights.

### 5.2 Battery Indicator

The indicator lights on the main unit provide battery status:

- **Constant Blue:** Full battery.
- **Flashing Yellow:** Low battery.
- **Constant Red:** Nearly empty, requires charging.

# Rotation speed of motor: 13000RPM $\pm$ 12%

## During the working

- Constant blue: Full
- Flashing yellow: Low
- Constant red: Nearly empty



Image: Close-up of the blender's main unit showing the battery indicator lights and their meanings.

### 5.3 Using the Immersion Blender

Attach the immersion blender shaft to the main unit. Submerge the blade guard into your ingredients (e.g., soups, sauces, smoothies, baby food) in the 600ml beaker or another suitable container. Press the power button to blend. Move the blender up and down gently for even processing.

## Immersion Blender

Making soups, Sauce, Smoothies or Baby food



Image: The immersion blender attachment being used to blend ingredients in a beaker.

### 5.4 Using the Chopper Attachment

Place ingredients like meat, onions, nuts, or vegetables into the 300ml chopper bowl. Secure the chopper lid with the main motor unit attached. Press the power button in short pulses until desired consistency is achieved.

## Food Chopper

Chopping Meat, Onions, Nuts, Garlic or Vegetables



Image: The chopper attachment processing vegetables, demonstrating its use for food preparation.

### 5.5 Using the Egg Whisk Attachment

Attach the egg whisk to the main unit. Place the whisk into ingredients such as eggs, cream, or cake batter. Press the power button to whisk until the desired texture is reached.

## Egg Whisk

Whipping Cream, Egg Whites or Cake Batter



Image: The egg whisk attachment being used to whisk eggs and cream, illustrating its function.

### 5.6 Using the Milk Frother Attachment

Attach the milk frother to the main unit. Submerge the frother head into milk or other beverages. Press the power button to create foam. Move the frother gently to achieve desired frothiness.

## Milk Frother

Making the delicious milk foam for your coffee or drinks



Image: The milk frother attachment creating foam in a cup of milk, demonstrating its use for beverages.

## 6. MAINTENANCE AND CLEANING

The Weavelife Immersion Blender features a detachable design for easy cleaning.

- **Detaching Attachments:** To detach an attachment, twist it counter-clockwise from the main motor unit and pull apart.
- **Cleaning Blades and Whisk:** The immersion blender blade, chopper blade, egg whisk, and milk frother are dishwasher-safe or can be rinsed directly under running water. Ensure all food residue is removed.
- **Cleaning Main Motor Unit:** The main motor unit should **not** be immersed in water. Wipe it clean with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Drying:** Ensure all parts are completely dry before reassembling or storing.

## Easy to use and clean

Easily detach and replace the attachments  
Friendly clean with rinse or dishwasher



Image: Demonstrates the ease of cleaning the detachable attachments, showing them being rinsed under water and placed in a dishwasher.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is low or depleted. Unlock button not pressed for 3 seconds. Attachment not securely connected.	Charge the battery fully. Long-press the unlock button for 3 seconds until the light flashes, then press the power button. Ensure the attachment is twisted and locked into place.
Blender stops during operation.	Overload protection activated. Battery is low.	Reduce the amount of ingredients or cut them into smaller pieces. Allow the motor to cool down before restarting. Charge the battery.
Ingredients are not blending evenly.	Too many ingredients. Ingredients are too large.	Process smaller batches. Cut ingredients into smaller, uniform pieces. Move the immersion blender up and down for better circulation.
Chopper attachment not chopping effectively.	Ingredients are too large or too hard. Chopper blade not properly installed.	Cut ingredients into smaller pieces. Ensure the chopper blade is correctly placed on the central shaft.

## 8. PRODUCT SPECIFICATIONS

**Brand:** Weavelife

**Model Number:** BL-001-6BK

**Color:** Black

**Power Source:** Battery Powered (Cordless, USB Rechargeable)

**Motor Speed:** 13,000 RPM

**Continuous Blending Time:** Up to 20 minutes

**Immersion Blender Blade Material:** Stainless Steel

**Beaker Capacity:** 600 Milliliters

**Chopper Capacity:** 300 Milliliters

**Product Dimensions:** 2.36"D x 16.54"W x 2.36"H

**Dishwasher Safe Parts:** Yes (Blades, Whisk, Frother, Beaker, Chopper Bowl)

**Included Components:** Main Motor Unit, Immersion Blender Attachment, 300ml Chopper, 600ml Beaker, Egg Whisk, Milk Frother, USB

## Dishwasher-Safe Accessories for All Kinds of Cooking



Image: A visual representation of the blender and its accessories with their respective dimensions.

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

This Weavelife product comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, unauthorized repair, or commercial use.

### 9.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your Weavelife Cordless Portable Immersion Blender, please contact our customer support team. Refer to the contact information provided on the product packaging or our official website.

