



Manuals.plus /

› TOMPROAD /

› TOMPROAD K30 Portable Bluetooth Speaker Instruction Manual

TOMPROAD K30

TOMPROAD K30 Portable Bluetooth Speaker Instruction Manual

Model: K30

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the TOMPROAD K30 Portable Bluetooth Speaker. Keep this manual for future reference.

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from sources of heat, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only the charging cable provided or a certified equivalent.
- Do not attempt to disassemble, repair, or modify the speaker. This will void the warranty.
- The speaker has an IPX6 waterproof rating, meaning it is protected against high-pressure water jets from any direction. It is resistant to splashes and rain but should not be submerged in water. Ensure all port covers are securely closed before exposure to water.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x K30 Bluetooth Speaker
- 1 x USB Charging Cable
- 1 x AUX Audio Cable
- 1 x User Manual



Packing box



The instructions



Charging line



Audio line



K30 Speaker

Image: The package includes the TOMPROAD K30 speaker, a USB charging cable, an AUX audio cable, and the user manual.

PRODUCT OVERVIEW

The TOMPROAD K30 is a portable Bluetooth speaker designed for high-fidelity audio output. It features a 120W peak power (80W RMS) system with dual 3.5-inch full-range drivers and a bass diaphragm for enhanced deep bass. An integrated DSP chip optimizes audio clarity and balance. The speaker supports True Wireless Stereo (TWS) pairing for an immersive sound experience.

120W Peak 80W RMS Booming Bass



Bass Diaphragm

**60W Peak (40W RMS)
Full-Range Speaker**

Image: A cutaway view of the TOMPROAD K30 speaker illustrates its internal components, including the bass diaphragm and 3.5-inch full-range speakers, highlighting its 120W peak power and DSP sound processing.

CONTROLS AND PORTS

The speaker features intuitive controls and versatile connectivity options located on the top panel, protected by a rubber cover.

Top Panel Controls:

- **M (Mode) Button:** Press to switch between Bluetooth, AUX, TF Card, and USB playback modes.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Down (-) Button:** Press to decrease volume.
- **Volume Up (+) Button:** Press to increase volume.
- **Power Button:** Press and hold to power the speaker on or off.

Connectivity Ports (under rubber cover):

- **AUX Input:** 3.5mm audio jack for wired connection to external devices.
- **TF Card Slot:** For playing music directly from a TF (MicroSD) card.
- **USB Port:** For playing music directly from a USB drive.
- **DC Input:** USB-C port for charging the speaker.

IPX6 Waterproof Dustproof & Shockproof



Image: The top panel of the TOMPROAD K30 speaker displays the control buttons (Mode, Play/Pause, Volume, Power) and a rubber flap covering the AUX, TF, USB, and DC input ports.

Video: An official TOMPROAD video demonstrating the features and functionality of the 80W Portable Wireless Hi-Fi Loud IPX6 Waterproof Speaker, including its various input options and robust design.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. The built-in 8000mAh rechargeable battery provides 3.5 to 24 hours of playtime depending on volume. A full charge typically takes approximately 5 hours.

1. Open the rubber cover on the top panel to access the DC input port.
2. Connect the provided USB charging cable to the DC input port on the speaker.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
4. The indicator light will turn RED during charging and turn off when fully charged.

Long Battery Life

Built-in 8000mAh rechargeable battery,
Let you enjoy the music feast anytime and anywhere

3.5-24H

Playing time

5H

Charging time

The indicator light will turn
RED during charging



Image: The TOMPROAD K30 speaker is shown with an indicator light, illustrating its long battery life (3.5-24 hours playtime) and approximate 5-hour charging time. The indicator light turns red during charging.

Powering On/Off

1. To power on, press and hold the Power button on the top panel until you hear an audible prompt.
2. To power off, press and hold the Power button again until you hear an audible prompt.

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue light). If not, press the 'M' (Mode) button to switch to Bluetooth mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'K30' from the list of available devices.
4. Once connected, you will hear an audible confirmation, and the blue indicator light will stop flashing and remain solid.

OPERATING INSTRUCTIONS

Playing Music

The K30 speaker supports multiple playback sources:

- **Bluetooth:** Connect your device wirelessly as described in the 'Bluetooth Pairing' section.

- **AUX Input:** Connect an external audio device using the provided 3.5mm AUX cable. Press the 'M' button to switch to AUX mode.
- **TF Card:** Insert a TF (MicroSD) card with music files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback.
- **USB Drive:** Insert a USB drive with music files into the USB port. The speaker will automatically switch to USB mode and begin playback.

True Wireless Stereo (TWS) Pairing

For a more powerful and immersive stereo sound, you can pair two K30 speakers together:

1. Ensure both K30 speakers are powered on and not connected to any Bluetooth device.
2. Select one speaker as the main speaker. Quickly double-click the Play/Pause button on the main speaker to enter TWS pairing mode. The blue light on the main speaker will flash rapidly, accompanied by a 'dun dun dun dun dun' sound.
3. The second speaker (sub-speaker) will automatically search and connect to the main speaker.
4. Once connected, both speakers will emit a 'ding' tone, and the blue lights will stop flashing.
5. Now, connect your mobile device to the main speaker via Bluetooth. Music will play through both speakers in stereo.
6. To disconnect TWS, double-click the Play/Pause button on either speaker. You will hear 'ding dong ding ding'.



Image: Two TOMPROAD K30 speakers are shown wirelessly paired, demonstrating the True Wireless Stereo (TWS) feature for a combined 240W peak powerful loud surround stereo sound.

Adjusting Volume

- Press the '+' button to increase the volume.
- Press the '-' button to decrease the volume.

Changing Tracks

- In Bluetooth, TF Card, or USB mode, press and hold the '+' button to skip to the next track.
- Press and hold the '-' button to go to the previous track.

MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your K30 speaker.

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Waterproof (IPX6):** The speaker is IPX6 rated, meaning it can withstand powerful water jets. It is suitable for outdoor use in rain or near splashes. However, it is not designed for submersion. Always ensure the rubber cover for the ports is securely closed when exposed to water.
- **Storage:** Store the speaker in a cool, dry place when not in use. Avoid storing in areas with extreme temperatures or high humidity.



Image: The TOMPROAD K30 speaker is shown being splashed with water next to a swimming pool, demonstrating its IPX6 waterproof, dustproof, and shockproof capabilities for outdoor use.

TROUBLESHOOTING

If you encounter any issues with your K30 speaker, please refer to the following common solutions:

- **Speaker not powering on:** Ensure the battery is charged. Connect the speaker to a power source using the USB charging cable.
- **No sound:** Check the volume level on both the speaker and your connected device. Ensure the speaker is in the correct mode (Bluetooth, AUX, TF, USB) for your audio source.
- **Bluetooth not connecting:** Make sure the speaker is in Bluetooth pairing mode (flashing blue light). Turn off and on Bluetooth on your device, then try re-pairing. Ensure your device is within the 100ft Bluetooth range.
- **TWS pairing issues:** Ensure both speakers are fully charged and not connected to any other Bluetooth devices

before initiating TWS pairing.

If the problem persists, please contact customer support for further assistance.

SPECIFICATIONS

Brand	TOMPROAD
Model Name	K30
Speaker Type	Portable Bluetooth Speaker
Connectivity Technology	Bluetooth, Wireless
Bluetooth Version	5.3
Maximum Output Power	120W Peak / 80W RMS
Speaker Size	2 x 3.5 Inches Full-Range
Frequency Response	60Hz-20KHz
Battery Capacity	8000mAh
Playing Time	3.5 - 24 hours (depends on volume)
Charging Time	Approx. 5 hours
Water Resistance Level	IPX6 Waterproof
Product Dimensions	13.9"D x 6.1"W x 5.2"H
Item Weight	8.8 pounds (4 Kilograms)
Material	Acrylonitrile Butadiene Styrene (ABS), Metal

WARRANTY AND SUPPORT

The TOMPROAD K30 Portable Bluetooth Speaker comes with a limited warranty. For detailed warranty information, please refer to the documentation included with your purchase.

If you have any questions, require technical support, or need assistance with your product, please contact us. Our customer service team is available to provide support within 7-24 hours.