

- [Manuals.plus](#) /
- › [Effireli](#) /
 - › Effireli CT-8054 Replacement Remote Control User Manual

Effireli YK-CT-8054

Effireli CT-8054 Replacement Remote Control User Manual

Your guide to setting up and operating your replacement remote control.

PRODUCT OVERVIEW



The Effireli CT-8054 is a direct replacement remote control designed for various Toshiba TV models. It features a standard layout with

dedicated buttons for common functions and streaming services like Netflix.

The CT-8054 remote control is engineered to provide seamless operation for compatible Toshiba televisions without the need for complex programming or setup. Its intuitive design ensures a user-friendly experience, allowing you to quickly access all essential TV functions.

SETUP INSTRUCTIONS

This replacement remote control requires no programming or pairing. Simply insert batteries, and it is ready for use with your compatible Toshiba TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely.

Once batteries are installed, the remote is ready to operate your Toshiba TV.

OPERATING INSTRUCTIONS

Familiarize yourself with the functions of each button on your CT-8054 replacement remote control:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **QUICK:** Access quick settings or a quick menu.
- **GUIDE:** Displays the electronic program guide (EPG).
- **Volume Up (+) / Down (-):** Adjusts the sound volume.
- **Mute (crossed speaker icon):** Mutes or unmutes the TV sound.
- **Channel Up (^) / Down (v):** Changes TV channels.
- **i+ (Information):** Displays information about the current program.
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **OK:** Confirms selections in menus.
- **Home (House icon):** Returns to the TV's home screen or smart portal.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Search (Magnifying glass):** Opens the search function.
- **NETFLIX:** Direct access button for the Netflix streaming service.
- **Star/Gear icon:** Likely for settings or favorites.

- **TEXT**: Toggles teletext display.
- **Color Buttons (R, G, Y, B)**: Red, Green, Yellow, Blue buttons for specific functions within menus or applications.
- **3D**: Activates or deactivates 3D mode (if supported by TV).
- **SUBTITLE**: Toggles subtitles on or off.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record)**: Control media playback.

COMPATIBLE TV MODELS

This remote control is compatible with a wide range of Toshiba TV models, including but not limited to:

- 40L3433
- 40L3441
- 40L3443
- 40L3448
- 40L4331
- 40L5435
- 40L5435DG
- 40L5441
- 40L5443DG
- 40L5445
- 40L5453DB
- 40D3453DB
- 40L3541DG
- 48L3441
- 48L3443
- 48L3448
- 48L5441
- 48L5445
- 48L5445DG
- 48L5463DN
- 48L3453R
- 48U7653DB
- 48S3653DB
- 32L3433DG
- 32W3453DN
- 32L3543DG
- 32W3433
- 32W3543DG
- 32W3454DB
- 32L3441DG
- 32D3454DB

Note: If your specific TV model number is not listed above or if your original remote control has a significantly different appearance, please contact the manufacturer or seller directly to confirm compatibility before purchase.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
 - Make sure the TV is powered on and not in standby mode.
- **Intermittent Functionality:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the remote's infrared signal.
- **Specific Buttons Not Working:**
 - Verify that the button is intended for your TV model's functions. Some buttons may be specific to certain TV features not present on all compatible models.
 - Clean the remote control, especially around the unresponsive button, to remove any dirt or debris that might be obstructing it.

If the problem persists after trying these steps, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Effireli
Model	YK-CT-8054
Compatible Devices	Television (Various Toshiba models)
Special Features	No Programming Required
Number of Items	1
Batteries Required	Yes (AAA, not included)
Connector Type	Infrared
Item Weight	80 Grams
Package Dimensions	22 x 4.5 x 1.5 cm
Country/Region of Origin	China

WARRANTY AND SUPPORT

Your Effireli CT-8054 Replacement Remote Control comes with the following assurances:

- 30-Day Money-Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- 12-Month Warranty:** A 12-month warranty is provided covering manufacturing defects. Returns and exchanges are accepted within this warranty period for issues arising from defects in materials or workmanship.

For any questions, technical support, or warranty claims, please contact the seller directly through the platform where the product was purchased. Please have your order details and product model number (CT-8054) ready for faster assistance.

© 2024 Effireli. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPL96N4B>

More documents and user manuals: <https://manuals.plus/>