

[Manuals.plus](#) /

› [Anker](#) /

› Anker Nano Charger (45W) User Manual

Anker B2692

Anker Nano Charger (45W) User Manual

Model: B2692

1. PRODUCT OVERVIEW

The Anker Nano Charger (45W) is a compact and powerful USB-C wall charger designed for rapid charging of a wide range of devices. It features a foldable plug for enhanced portability and includes a USB-C to USB-C cable, making it ready for immediate use with your USB-C compatible devices.

Key features include:

- **Maximum 45W Output:** Delivers high-speed charging for smartphones, tablets, and even some laptops.
- **Ultra-Compact Design:** Approximately 33% smaller than conventional 45W chargers, with a foldable plug for easy transport.
- **ActiveShield™ 3.0 Safety System:** Continuously monitors temperature to ensure safe and stable charging for your devices.
- **Wide Compatibility:** Supports fast charging for Apple devices (iPhone, iPad, MacBook Air) and various Android smartphones (Galaxy, etc.).



Figure 1: Anker Nano Charger (45W) and included USB-C to USB-C cable.



手軽に持ち運べる コンパクトサイズ

折りたたみ式プラグ搭載



一般的な45W出力の充電器と
比較して約**33%**小型化

Figure 2: The compact design and foldable plug make the charger easy to carry.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Anker Nano Charger (45W)
- USB-C to USB-C Cable (1.8m)

- Instruction Manual (this document)
- Customer Service Card

USB-C & USB-C ケーブル同梱

USB-C & USB-C ケーブル同梱のため、
お使いのUSB-Cポート搭載製品に
ご購入後すぐに充電が可能です



Figure 3: The included 1.8m USB-C to USB-C cable.

3. SETUP

Follow these steps to set up your Anker Nano Charger:

1. **Unfold the Plug:** Gently unfold the AC prongs from the charger body until they lock into place.
2. **Connect the Cable:** Insert one end of the included USB-C to USB-C cable into the USB-C port on the Anker Nano Charger.
3. **Connect to Device:** Insert the other end of the USB-C cable into the charging port of your compatible device (smartphone, tablet, laptop, etc.).
4. **Plug into Power Outlet:** Insert the charger's unfolded plug into a standard AC power outlet.

Your device should begin charging automatically. Ensure the power outlet is easily accessible.

iPhone 17シリーズに 急速充電が可能

最大45W出力に対応しているため
iPhone 17シリーズへの急速充電に加えて、
ノートPCにも充電が可能です





最大 **45W**


50% 約**20分**
iPhone 17を急速充電

※充電速度はAnker調べ
※使用条件によって充電速度が異なる場合があります

Figure 4: Connecting the Anker Nano Charger to a device and power outlet.

4. OPERATING INSTRUCTIONS

The Anker Nano Charger is designed for simple plug-and-play operation. Once connected as described in the "Setup" section, it will automatically detect your device's charging requirements and deliver the optimal power output up to 45W.

- **Fast Charging:** For devices that support USB Power Delivery (PD), the charger will provide rapid charging. This includes many modern smartphones (e.g., iPhone 17 series, Galaxy S series), tablets, and USB-C laptops.
- **Device Compatibility:** Use the included USB-C to USB-C cable for devices with a USB-C charging port. For devices with other port types (e.g., Lightning), you will need a compatible cable (not included).
- **Safety Features:** The ActiveShield™ 3.0 system continuously monitors the charger's temperature to prevent overheating and ensure safe operation for both the charger and your connected devices.

幅広い対応機種

最大45W出力で、iPhoneやiPadなどのApple製品からGalaxyなどのAndroidスマートフォンまで、幅広い機器に急速充電が可能です

Apple 製品





 
iPhone 17 / 16 / 15
シリーズ



iPhone 14 / 13 / 12
シリーズ



MacBook Pro / Air



iPad Pro
2020 - 2024



iPad Air 3 / 2



AirPods Pro 2



AirPods 3 / 2 / 1
Pro 1



Apple Watch 9 / 8 / 7
シリーズ

※本製品にはUSB-C & USB-Cケーブルが付属しております。その他のポートを搭載した製品には別途対応したケーブルをご用意ください

Galaxy 製品



Galaxy S25 / S24
S23 / S22 シリーズ



Galaxy A73
A53 / A13



Galaxy Z Fold
6 / 5 / 4



Galaxy Z Flip
6 / 5 / 4



Galaxy Tab
S9+ / S8 シリーズ



Galaxy Watch
7 / 6 / 5 / 4 シリーズ



Galaxy Buds
2Pro / 2 / Live

その他 製品



Google Pixel
8 / 9 シリーズ



Sony Xperia 1
IV / V



Microsoft
Surface Pro 9



HP Chromebook 14
Spectre x360



Dell XPS 13 9315
Inspiron 16 Plus 7620



ASUS Detachable
CM3




Lenovo 10インチ
Chromebook Duet



Soundcore
Liberty 4

Figure 5: Examples of compatible devices for the Anker Nano Charger.

ActiveShield™ 3.0による温度制御

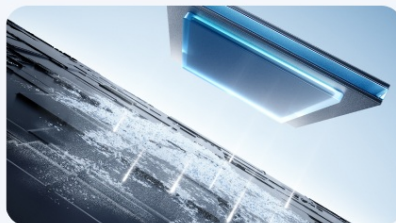

過熱を防ぎ、長持ち



低温時の充電効率が15%向上



常時温度監視システム

※1 本製品とActiveShield 3.0非搭載の充電器を比較したデータです

※2 1秒あたり約80回

Figure 6: ActiveShield™ 3.0 temperature control system for enhanced safety.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Anker Nano Charger, please follow these maintenance guidelines:

- **Cleaning:** Disconnect the charger from the power outlet and all devices before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the charger in a cool, dry place. Fold the AC prongs to protect them and save space.
- **Handling:** Avoid dropping the charger or subjecting it to strong impacts. Do not expose it to extreme temperatures, humidity, or direct sunlight.
- **Cable Care:** Do not bend or pull the cable excessively. Store the cable neatly to prevent tangling and damage.

6. TROUBLESHOOTING

If you encounter issues with your Anker Nano Charger, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not charging.	<ul style="list-style-type: none">◦ Loose connection.◦ Faulty cable.◦ Power outlet issue.◦ Incompatible device.	<ul style="list-style-type: none">◦ Ensure all connections are secure.◦ Try a different USB-C cable.◦ Test the charger in a different power outlet.◦ Verify your device is compatible with USB-C charging.
Slow charging.	<ul style="list-style-type: none">◦ Device does not support fast charging.◦ Cable is not rated for high power.	<ul style="list-style-type: none">◦ Confirm your device supports USB PD fast charging.◦ Use the included Anker USB-C to USB-C cable or another high-quality, PD-compatible cable.
Charger feels warm.	<ul style="list-style-type: none">◦ Normal operation during high-power charging.◦ Poor ventilation.	<ul style="list-style-type: none">◦ This is normal. The ActiveShield™ 3.0 system manages temperature.◦ Ensure the charger is in a well-ventilated area. If it becomes excessively hot, disconnect it and contact customer support.

If the problem persists after trying these solutions, please contact Anker customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Anker
Model Number	B2692
Color	Black
Input Voltage	110 Volts
Output Power	45W Max
Output Current	3 Amperes (Max)
Output Voltage	5 Volts (Standard PD profiles, up to 20V for 45W)

Feature	Detail
Plug Type	Foldable AC Prongs
Cable Included	USB-C to USB-C (1.8m)
Country of Origin	China
UPC	194644228002

8. WARRANTY AND SUPPORT

Anker provides comprehensive support for its products. Your Anker Nano Charger (45W) comes with the following warranty and support options:

- **Standard Warranty:** An 18-month warranty covers manufacturing defects and issues that arise under normal use from the date of purchase.
- **Extended Warranty:** Register as an Anker member to automatically extend your warranty by an additional 6 months, totaling 24 months of coverage.
- **Customer Support:** For any inquiries, troubleshooting assistance, or warranty claims, please contact Anker customer service. Support is available in Japanese.

For the most up-to-date warranty information and contact details, please visit the official Anker website or refer to the customer service card included in your package.

最大
24ヶ月

18ヶ月
製品保証

+

会員限定
6ヶ月
延長保証

ご注文日から18ヶ月の間、不具合と思われる事象が生じた場合、同一製品との交換、又は修理対応等当社にて適切と判断する対応を承ります。加えて、Ankerで会員登録いただくと24ヶ月保証へ自動延長します。

日本語カスタマーサポート
製品・配送に関するご質問は
カスタマーサポートまでお気軽にご連絡ください。

日本語カスタマーサポート
製品・配送に関するご質問は
カスタマーサポートまでお気軽にご連絡ください。

日本語カスタマーサポート
製品・配送に関するご質問は
カスタマーサポートまでお気軽にご連絡ください。

日本語カスタマーサポート
製品・配送に関するご質問は
カスタマーサポートまでお気軽にご連絡ください。

Figure 7: Warranty and customer support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPL9W68V>

More documents and user manuals: <https://manuals.plus/>