

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli ERF6E64H Infrared Replacement Remote Control User Manual

Effireli YK-ERF6E64H

Effireli ERF6E64H Infrared Replacement Remote Control User Manual

Model: YK-ERF6E64H

1. INTRODUCTION

This manual provides instructions for the Effireli ERF6E64H Infrared Replacement Remote Control. This remote is designed as a direct replacement for specific Hisense TV models, offering seamless operation without the need for complex programming or setup. It functions as an infrared remote control and does not include voice control capabilities.

2. SETUP

2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

2.2. Initial Use

The Effireli ERF6E64H remote control requires no programming. Once batteries are installed, it is ready for immediate use with compatible Hisense TV models. Simply point the remote towards your television and begin operation.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your Effireli ERF6E64H remote control. Below is a diagram and description of each button's function.



Figure 1: Effireli ERF6E64H Remote Control Layout. This image displays the full layout of the remote control, showing all buttons from

power to app shortcuts.

Power Button (): Turns the television on or off.

TEXT Button: Accesses teletext services if available on your television.

INPUT Button: Cycles through available input sources (e.g., HDMI 1, HDMI 2, AV).

Number Pad (0-9): Directly enters channel numbers or other numerical inputs.

CH.LIST Button: Displays the channel list.

Color Buttons (Red, Green, Yellow, Blue): These buttons provide specific functions depending on the current TV menu or application.

Menu Button (≡): Opens the main menu of the television.

Playback Controls (): Play/Pause button for media playback.

Navigation Pad (Up, Down, Left, Right): Navigates through menus and options.

OK Button: Confirms selections or enters sub-menus.

Back Button (↶): Returns to the previous screen or menu.

EXIT Button: Exits the current menu or application.

Volume Up/Down (+VOL / -VOL): Adjusts the television's volume level.

Mute Button (): Mutes or unmutes the television's audio.

Home Button (△): Returns to the television's home screen or smart TV interface.

Channel Up/Down (+CH / -CH): Changes the television channel.

FREE Button: Likely accesses a free content or service platform.

GUIDE Button: Opens the electronic program guide (EPG).

Kc yo Button: Dedicated shortcut button for a specific application or service (e.g., Kayo Sports).

NETFLIX Button: Direct access to the Netflix application.

pr me v deo Button: Direct access to the Prime Video application.

YouTube Button: Direct access to the YouTube application.

S an. Button: Dedicated shortcut button for a specific application or service (e.g., Stan).

4. COMPATIBLE MODELS

This replacement remote control is compatible with the following Hisense TV models:

- **U8G Series:** 75U8G, 65U8G, 85U8G, 55U8G
- **U9G Series:** 75U9G, 65U9G
- 55U62FAVT

If your specific TV model is not listed above, or if your original remote control has a significantly different appearance, please contact customer support to confirm compatibility before use.

5. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Make sure there are no obstructions between the remote control and the TV's infrared sensor.
 - Point the remote directly at the TV's sensor.
- **Specific Buttons Not Working:**
 - Check if the remote is compatible with your TV model (refer to Section 4).
 - Some functions may be specific to certain TV models or software versions.
- **No Programming Required:**
 - This remote is designed to work out-of-the-box for compatible models. If it does not work, double-check compatibility and battery installation.

6. SPECIFICATIONS

Brand:	Effireli
Model Number:	YK-ERF6E64H
Connectivity Technology:	Infrared
Special Feature:	No Programming Required
Max Number of Supported Devices:	1 (Television)
Compatible Devices:	Television

7. WARRANTY AND SUPPORT

7.1. Warranty Information

This product comes with a **30-day money-back guarantee** and a **12-month warranty** covering manufacturing defects. Returns and exchanges are accepted within the warranty period for eligible issues.

7.2. Customer Support

For any questions regarding compatibility, troubleshooting, or warranty claims, please contact our customer support. Refer to your purchase documentation for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPLB8WW4>

More documents and user manuals: <https://manuals.plus/>