

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli EN-32959HS Replacement Remote Control User Manual for Hisense TVs

Effireli EN-32959HS

Effireli EN-32959HS Replacement Remote Control User Manual

For Hisense TV Models: HL50K610PZLN3D, HL55K610PZLN3D, HL39K610PZLN3D, LTDN50K610XWAU3D, K316, K360

INTRODUCTION

This manual provides instructions for the Effireli EN-32959HS Replacement Remote Control. This remote is designed to operate specific Hisense TV models without the need for programming or complex setup. Simply insert batteries and begin use.



Image: Effireli EN-32959HS Replacement Remote Control. This image displays the full remote control. It is black with various white

and colored buttons. The top features a red power button and a 'Source' button. Number keys 0-9 are centrally located, along with navigation and media control buttons. Special function buttons like 'HiSmart', 'HiMedia', 'PVR', 'Subtitle', and 'Zoom' are also present. The model number 'EN-32959HS' is printed at the bottom.

Setup

The Effireli EN-32959HS remote control requires no programming. To begin using your remote, follow these simple steps:

- Battery Installation:** Open the battery compartment cover on the back of the remote control.
- Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
- Close the battery compartment cover securely.
- The remote is now ready for use. Point it towards your Hisense TV and operate.

Operating Instructions

This section details the functions of the buttons on your Effireli EN-32959HS remote control.

Remote Control Button Functions

Button	Function
Power (Red button)	Turns the TV on or off.
Source	Selects the input source (e.g., HDMI, AV).
Picture	Adjusts picture settings.
Sound	Adjusts sound settings.
Sleep	Sets the sleep timer.
3D	Activates or deactivates 3D mode (if supported by TV).
0-9 (Number buttons)	Direct channel selection.
Last	Returns to the previously viewed channel.
EPG	Displays the Electronic Program Guide.
Red, Green, Yellow, Blue (Colored buttons)	Function varies depending on the TV menu or application.
Menu	Opens the main TV menu.
Info	Displays information about the current program or input.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections in menus.
Return	Goes back to the previous menu or screen.

Button	Function
Exit	Exits the current menu or application.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel.
Fav	Accesses favorite channels list.
Mute	Mutes or unmutes the TV sound.
HiSmart	Accesses Hisense Smart TV features.
HiMedia	Accesses Hisense Media Center.
Media Control Buttons (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next)	Controls media playback (e.g., USB, streaming apps).
PVR	Activates Personal Video Recorder function.
T.shift	Activates Time Shift function.
Text Size	Adjusts text size (e.g., for teletext).
Mix	Mixes video and teletext.
Subtitle	Toggles subtitles on or off.
Audio I/II	Selects audio language or mode.
Zoom	Zooms in on the screen.
Still	Pauses the current image on screen.

COMPATIBLE MODELS

This remote control is compatible with the following Hisense TV models:

- HL50K610PZLN3D
- HL55K610PZLN3D
- HL39K610PZLN3D
- LTDN50K610XWAU3D
- K316
- K360

Note: If your specific TV model number is not listed above, or if your original remote control appears significantly different, please contact customer support to confirm compatibility before use.

TROUBLESHOOTING

If your remote control is not functioning as expected, consider the following common issues and solutions:

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones. Weak batteries are a common cause of remote control issues.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm you are within the effective range of the TV's IR receiver.
- **Specific buttons not working:**
 - Check for any physical damage or debris under the button.
 - Try replacing batteries, as low power can sometimes affect specific functions.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

SPECIFICATIONS

Feature	Detail
Model Number	EN-32959HS (YK-EN-32959HS)
Brand	Effireli
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Specific Hisense models)
Special Feature	No Programming Required
Max Number of Supported Devices	1
Item Weight	3.66 ounces
Package Dimensions	10.16 x 2.56 x 1.57 inches

WARRANTY AND SUPPORT

Your Effireli EN-32959HS Replacement Remote Control comes with the following assurances:

- **Money-Back Guarantee:** Enjoy a 30-day money-back guarantee from the date of purchase.
- **Warranty:** A 12-month warranty covers manufacturing defects. Returns and exchanges are accepted within this warranty period.
- **Customer Support:** For any questions regarding compatibility, troubleshooting, or warranty claims, please contact the seller directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPLBRH7S>

More documents and user manuals: <https://manuals.plus/>