

[Manuals.plus](#) /

- › [Tommy Hilfiger](#) /
- › Tommy Hilfiger Men's Chronograph Watch Model 1792169 Instruction Manual

Tommy Hilfiger 1792169

TOMMY  HILFIGER

Tommy Hilfiger Men's Chronograph Watch Model 1792169 Instruction Manual

Comprehensive guide for setting, operating, and maintaining your Tommy Hilfiger Men's Chronograph Watch, Model 1792169.

1. PRODUCT OVERVIEW

This manual provides instructions for the Tommy Hilfiger Men's Chronograph Watch, Model 1792169. This timepiece features a racing-inspired design with a blue silicone strap, a blue dial, and chronograph functionality. It is designed for everyday wear and recreational swimming.



Front view of the Tommy Hilfiger Men's Chronograph Watch, showcasing the blue dial, sub-dials, and silicone strap.



Side view of the watch, highlighting the crown and pushers for time and chronograph adjustments.

2. SETUP AND INITIAL ADJUSTMENT

Before using your watch, please familiarize yourself with its components and initial setup procedures.

HOW TO USE YOUR WATCH: A COMPLETE GUIDE



SETTING THE STOPWATCH HANDS TO ZERO

1. Pull the Crown to the 1st click position.
2. Press Button A or B to move the stopwatch hands to the "0" position.
 - Note: The stopwatch minute hand and second hand are linked.
3. Continue Pressing to quickly adjust the hands.
4. Push the Crown back to the normal position.

HOW TO SET THE TIME

1. Pull the Crown to the 1st click.
 - If the stopwatch is running, it resets to "0."
2. Turn the Crown to set hour and minute hands (AM/PM considered).
 - 24-hour hand adjusts with the hour hand.
 - Ensure the 24-hour hand is correct.
3. Push the Crown back to the normal position.

USING THE STOPWATCH FUNCTION

- Maximum Measurement: 29 minutes and 59 seconds (1-second increments).
- Automatic Stop: After 30 minutes.

MEASUREMENT TYPES

- Standard Measurement: Track elapsed time.
- Accumulated Elapsed Time: Continuous tracking.
- Split Time Measurement: Time individual segments.
- Two Competitors Measurement: Compare times of two events.

Important Note

- Ensure the crown is in the normal position before using the stopwatch and that the hands are set to "0."

Detailed diagram illustrating the watch components (Hour hand, Minute hand, Button A, Crown, 24hr hand, Button B, Second hand, Stopwatch Second Hand, Stopwatch minute hand) and instructions for setting time and zeroing the stopwatch.

2.1 Setting the Time

1. Pull the Crown to the 1st click position.
2. Turn the Crown to set hour and minute hands (AM/PM considered).
 - The 24-hour hand adjusts with the hour hand.
 - Ensure the 24-hour hand is correct.
3. Push the Crown back to the normal position.

2.2 Setting the Stopwatch Hands to Zero

1. Pull the Crown to the 1st click position.
2. Press Button A or B to move the stopwatch hands to the "0" position.
 - The stopwatch minute hand and second hand are linked.
3. Continue pressing to quickly adjust the hands.
4. Push the Crown back to the normal position.

Important Note:

- Ensure the crown is in the normal position before using the stopwatch and that the hands are set to "0."

3. OPERATING THE CHRONOGRAPH FUNCTION

The chronograph allows for precise timing of events.

- **Maximum Measurement:** 29 minutes and 59 seconds (1-second increments).
- **Automatic Stop:** After 30 minutes.

3.1 Measurement Types

- **Standard Measurement:** Track elapsed time.
- **Accumulated Elapsed Time:** Continuous tracking.
- **Split Time Measurement:** Time individual segments.
- **Two Competitors Measurement:** Compare times of two events.

4. MAINTENANCE AND CARE

Proper care will ensure the longevity and performance of your Tommy Hilfiger watch.

4.1 General Care

- Your Tommy Hilfiger watch has been developed with meticulous attention to quality, function, and detail.
- A maintenance interval of 3 to 5 years is recommended, in addition to any required battery replacement.
- Never attempt to open the watch yourself.
- Clean the watch case and strap regularly with a soft, damp cloth. Avoid harsh chemicals.

4.2 Water Resistance

- This watch is water resistant up to 50 meters (165 feet), or 5 ATM.
- It is suitable for short periods of recreational swimming and showering.
- It is **not** suitable for diving or snorkeling.
- Ensure the crown is fully pushed in before any contact with water.

4.3 Battery Information

- The watch requires 1 LR44 battery (included).
- Battery replacement should be performed by a qualified watch technician to maintain water resistance and ensure proper function.

5. TROUBLESHOOTING

If you encounter issues with your watch, consider the following common solutions:

- **Watch not running:** Check if the crown is fully pushed in. If the watch has stopped completely, the battery may need replacement.

- **Time is incorrect:** Follow the 'Setting the Time' instructions in Section 2.1.
- **Chronograph hands not resetting to zero:** Follow the 'Setting the Stopwatch Hands to Zero' instructions in Section 2.2. If the issue persists, professional service may be required.
- **Water ingress:** If moisture appears inside the watch, seek professional service immediately to prevent damage.

For issues not resolved by these steps, please contact Tommy Hilfiger customer support or an authorized service center.

6. SPECIFICATIONS

Feature	Detail
Model Number	1792169
Movement	Quartz Chronograph
Case Material	Ionic Plated Blue Steel & Blue Aluminum
Strap Material	Silicone
Dial Color	Blue
Water Resistance	5 ATM (50 meters / 165 feet)
Battery Type	1 LR44 (included)
Package Dimensions	4.17 x 3.66 x 3.11 inches
Item Weight	7.05 ounces

7. WARRANTY AND SUPPORT

Your Tommy Hilfiger watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and service procedures. For further assistance, technical support, or warranty claims, please contact Tommy Hilfiger customer service or visit their official website. Do not attempt repairs yourself, as this may void your warranty.