

WHATOOK HL008

WHATOOK HL008 Small Desk Fan User Manual

Model: HL008

1. INTRODUCTION

Thank you for choosing the WHATOOK HL008 Small Desk Fan. This portable and rechargeable fan is designed to provide personal cooling in various environments, from office desks to outdoor activities. Featuring 100 adjustable wind speeds and a long-lasting battery, it offers quiet and efficient airflow. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. PRODUCT OVERVIEW

The WHATOOK HL008 Desk Fan is a compact and versatile cooling device. Its key features include:

- **100 Adjustable Wind Speeds:** Allows for precise control over airflow, from a gentle breeze (levels 1-20) suitable for quiet environments like offices or bedrooms, to a powerful airflow (levels 50-100) for outdoor cooling.
- **Long-Lasting Battery:** Equipped with a 5000mAh battery, providing up to 25 hours of operation. A 2000mAh option offers up to 10 hours.
- **LED Display:** Clearly shows the current wind speed level and remaining battery percentage.
- **Pure ABS Material:** Constructed from high-quality, odor-free ABS material for durability and safety.
- **Enhanced Safety:** Designed with smaller, denser gaps in the fan grille to prevent accidental finger insertion.
- **180-Degree Adjustable Angle:** The fan head can be manually adjusted 180 degrees to direct airflow precisely where needed.
- **Quiet Operation:** Operates at a low noise level of 28 Decibels, ensuring minimal disturbance.
- **Portable Design:** Lightweight and compact, making it ideal for travel and easy to carry.



Figure 2.1: The WHATOOK HL008 Desk Fan providing personal cooling in an office environment.

Soothing Comfort

Low gear soft wind



20dB

Breathing



32dB

WhaTook Fan

50dB

Library

65dB

Talking

Figure 2.2: The fan's quiet operation is ideal for bedroom use, ensuring undisturbed sleep.

3. PACKAGE CONTENTS

Please check the package for the following items:

- WHATOOK HL008 Small Desk Fan
- USB Charging Cable (Type-C)
- User Manual (this document)

4. SETUP

1. **Unpack:** Carefully remove the fan and all accessories from the packaging.
2. **Positioning:** Place the fan on a stable, flat surface. Ensure the fan grille is not obstructed.
3. **Adjust Angle:** The fan features a 180-degree adjustable stand. Gently pivot the fan to your desired angle for optimal airflow. The stand can also be folded flat for compact storage or used to hang the fan.



Safety 0.24in Small Pitch

Deep anti-touch protection



180° Adjustable

Cool your summer in any directions

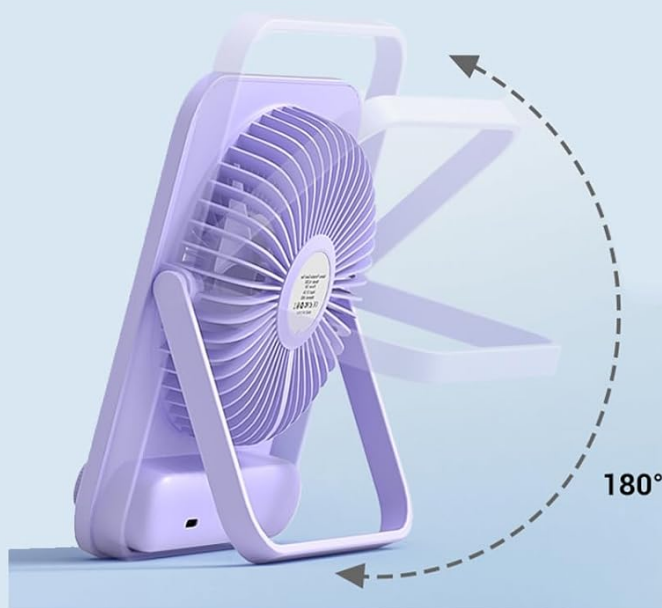


Figure 4.1: The fan's adjustable stand allows for versatile positioning, and its fine grille ensures safety.

5. OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the rotary knob on the front of the fan. Turn the knob clockwise from the "OFF" position to power on the fan. Turn it counter-clockwise back to "OFF" to power off.
2. **Adjusting Wind Speed:** Once powered on, continue turning the rotary knob clockwise to increase the wind speed. The fan offers 100 levels of speed adjustment. Turn the knob counter-clockwise to decrease the speed.

3. **LED Display:** The integrated LED display will show the current wind speed level (e.g., "01" for level 1, "100" for level 100). It will also periodically display the remaining battery percentage.



Figure 5.1: The fan features a rotary knob for 100-speed adjustment and an LED display for speed and battery.

Your browser does not support the video tag.

Video 5.1: Demonstration of the fan's speed adjustment and quiet operation, showing the LED display changing from low to high speeds.

6. CHARGING

The WHATOOK HL008 Desk Fan is equipped with a rechargeable battery.

- **Charging Port:** The fan uses a USB-C charging port, located on the side of the base.
- **Connect:** Use the provided USB charging cable to connect the fan to a compatible USB power source (e.g., computer, wall adapter, power bank).
- **Charging Indicator:** The LED display will show the battery percentage while charging.
- **Use While Charging:** The fan can be used while it is connected to a power source and charging.

Your browser does not support the video tag.

Video 6.1 : A user demonstrates plugging in the USB-C charging cable to the fan and highlights the battery display.

7. SAFETY PRECAUTIONS

To ensure safe operation and prevent damage, please observe the following:

- Do not insert fingers or any objects into the fan grille while it is operating.
- Keep the fan away from water or other liquids.
- Do not disassemble or attempt to repair the fan yourself. Contact customer support if needed.
- Use only the provided charging cable or a certified USB-C cable.
- Keep out of reach of small children.
- Avoid placing the fan in extremely hot or humid environments.

8. MAINTENANCE

Regular maintenance helps prolong the life of your fan:

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. For the fan blades, use a cotton swab or a soft brush to gently remove dust through the grille.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place. The foldable stand allows for compact storage.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Low battery or no power.	Charge the fan using the provided USB-C cable. Ensure the power source is active.
Weak airflow	Low speed setting or obstructed grille.	Increase the wind speed using the rotary knob. Check and clean the fan grille for any obstructions.
Unusual noise during operation	Dust accumulation or foreign object.	Turn off and unplug the fan. Carefully inspect and clean the fan blades and grille.
Battery not charging	Faulty cable or power source.	Try a different USB-C cable or power adapter. Ensure the cable is securely connected.

10. SPECIFICATIONS

Feature	Detail
Brand	WHATOOK
Model Name	Desk Fan
Model Number	HL008
Color	Purple
Power Source	Battery Powered
Battery Capacity	5000 mAh (up to 25 hours) or 2000 mAh (up to 10 hours)
Number of Speeds	100
Noise Level	28 Decibels
Product Dimensions	1.5"D x 5.2"W x 6.5"H
Control Method	Touch (Rotary Knob)
Material	Pure ABS
Installation Type	Portable



Two battery capacity options

2000mAh or 5000mAh



	Level 1	Level 50	Level 100
2000mAh	10 Hours	6 Hours	3 Hours
5000mAh	25 Hours	12 Hours	6 Hours



Figure 10.1: Dimensions and battery options for the WHATOOK HL008 Desk Fan.

11. WARRANTY AND SUPPORT

WHATOOK is committed to providing quality products and services. We offer:

- **One-Year Replacement Warranty:** A rechargeable USB fan replacement is provided within one year of purchase for any manufacturing defects.
- **Customer Service:** For any questions, concerns, or support needs, please contact WHATOOK customer service for a rapid response.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question