



[Manuals.plus](#) /

› [Best Choice Products](#) /

› Best Choice Products Mid-Century Modern Dining Chairs (Set of 2, Walnut/Charcoal) - Model SKY7941 User Manual

Best Choice Products SKY7941

Best Choice Products Mid-Century Modern Dining Chairs (Set of 2, Walnut/Charcoal) - Model SKY7941

User Manual

INTRODUCTION

This manual provides essential information for the assembly, use, and maintenance of your Best Choice Products Mid-Century Modern Dining Chairs. Please read these instructions carefully before assembly and retain for future reference. Proper assembly and care will ensure the longevity and safety of your chairs.

SAFETY INFORMATION

For your safety and to prevent damage to the product, observe the following guidelines:

- Avoid overloading the chairs to prevent tip-over. The maximum weight capacity is 275 lbs.
- Do not expose the upholstered chairs to open flames or high heat sources.
- Use the chairs for their intended purpose as seating. Do not stand on them or use them as step stools.
- Ensure all connections are secure before each use.

PACKAGE CONTENTS

Before assembly, carefully unpack all components and verify that all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Chair Backrests (2)
- Seat Cushions (2)
- Front Legs (2 pairs)
- Back Legs (2 pairs)
- Hardware Pack (screws, washers, Allen wrench)
- Assembly Guide (this document)

ASSEMBLY INSTRUCTIONS

Assembly is required for these dining chairs. It is recommended to assemble on a soft, clean surface (such as a carpet or blanket) to prevent scratching the wood finish. Two people may be helpful for assembly.

1. **Step 1: Attach Front Legs to Seat Cushion.** Align the front legs with the pre-drilled holes on the underside of one seat cushion. Insert the provided screws with washers and hand-tighten them. Do not fully tighten yet.



Image: An assembled dining chair, illustrating the final product with its seat and leg structure.

2. **Step 2: Attach Back Legs to Seat Cushion.** Similarly, attach the back legs to the seat cushion, ensuring proper alignment with the remaining pre-drilled holes. Insert screws with washers and hand-tighten.



Image: Close-up view of the chair's solid wood legs, emphasizing their sturdy construction.

- Step 3: Attach Backrest to Legs.** Position the backrest between the back legs. Align the holes on the backrest with the corresponding holes on the back legs. Secure with the remaining screws and washers, hand-tightening them.



Image: A detailed view of the chair's curved, upholstered backrest.

- Step 4: Final Tightening.** Once all components are loosely assembled, place the chair upright on a flat, level surface. Apply gentle downward pressure to ensure all parts are properly seated and aligned. Then, use the provided Allen wrench to fully tighten all screws securely. Do not overtighten. Repeat the entire process for the second chair.



Curved backrests & cushioned seats

Image: A close-up of the upholstered seat cushion, highlighting its texture and padding.

For visual guidance, please refer to the official assembly video below:

Your browser does not support the video tag.

Video: Official assembly guide for the Best Choice Mid-Century Modern Chair Set, demonstrating the step-by-step assembly process.

OPERATING INSTRUCTIONS

These dining chairs are designed for indoor use as seating for dining tables, desks, or other appropriate surfaces.

- Ensure the chair is placed on a flat, stable surface before use to prevent tipping.
- Sit centrally on the seat cushion for optimal balance and comfort.
- Avoid sudden movements or excessive force when sitting down or getting up.

MAINTENANCE

Cleaning

- **Wood Frame:** Wipe clean with a soft, slightly damp cloth. Avoid using harsh chemicals, abrasive cleaners, or furniture polish that may damage the finish. Dry immediately with a clean, dry cloth.

- **Upholstery:** Spot clean with a mild detergent and a clean, damp cloth. Blot spills immediately to prevent staining. Do not rub vigorously or saturate the fabric. For stubborn stains or general cleaning, professional upholstery cleaning is recommended.

General Care

- Periodically check all screws and connections to ensure they remain tight. Retighten as necessary to maintain stability.
- Avoid prolonged direct sunlight exposure to prevent fading of the upholstery and wood finish.
- Keep chairs away from excessive moisture, humidity, or extreme temperature changes, which can cause wood to warp or upholstery to degrade.

TROUBLESHOOTING

- **Chair wobbles after assembly:**
 - Ensure all screws are tightened evenly. Loosen all screws slightly, sit on the chair to settle the components, then retighten all screws firmly.
 - Verify that the floor surface where the chair is placed is level.
- **Difficulty aligning screw holes during assembly:**
 - Do not fully tighten any screws until all components are loosely assembled. This allows for minor adjustments and proper alignment.
 - Confirm you are using the correct screws for each part as indicated in the assembly guide.
- **Upholstery appears wrinkled or creased:**
 - Minor creases may occur during shipping due to packaging. These often smooth out with regular use over time.
 - Gentle steaming may help to relax the fabric, but always test on an inconspicuous area first.

SPECIFICATIONS

Feature	Detail
Model Number	SKY7941
Dimensions (Overall)	20.5"(L) x 18.5"(W) x 33"(H)
Seat Height	17.5"
Backrest Height	15.5"
Weight Capacity	275 lbs.
Material	Rubberwood, Foam, Polyester Upholstery
Color	Walnut/Charcoal
Item Weight	23 Pounds (per chair)



Image: A diagram detailing the dimensions of the dining chair for reference.

WARRANTY INFORMATION

Best Choice Products offers a 60-day warranty from the date of delivery. All returns are shipped back to a Best Choice Products return center at the customer's expense within this 60-day period. However, a pre-paid return shipping label will be provided via email if the return is a direct result of our error (e.g., defective or incorrect item). Please note that it is at the company's discretion to decide if an item may be returned. Unauthorized returns may not be accepted. Once your claim is processed and approved, please allow 5-7 business days for the request to be completed. If a replacement unit or replacement parts are requested, please be aware that the fulfillment time-frame is based on product availability.

CUSTOMER SUPPORT

For any questions, concerns, missing parts, or to initiate a warranty claim, please contact Best Choice Products customer service directly.

- **Online Store:** Visit the official Best Choice Products Amazon Store for support resources and contact information: [Best Choice Products Amazon Store](#)

© 2026 Best Choice Products. All rights reserved.

Model: SKY7941