

MAGiC COM MCD001

MAGiC COM Rice Cooker Instruction Manual

Model: MCD001

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your MAGiC COM Rice Cooker. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage of your power outlet matches the voltage specified on the appliance.
- Do not immerse the main unit (base) in water or any other liquid. Only the inner pot, inner pot cover, and steam cap are washable.
- Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching hot surfaces. Use handles or knobs. Steam released during cooking is hot.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause injuries.
- Do not use outdoors. This appliance is for household use only.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.

2. PRODUCT OVERVIEW

The MAGiC COM Rice Cooker is designed for effortless and versatile cooking, featuring 15 pre-set menu modes and user-friendly controls.



The MAGIC COM Rice Cooker features a sleek design with a prominent digital display and intuitive control panel for easy operation.

Effortless Convenience

Automating cooking simplifies the preparation of large meals

- Auto Keep-Warm
- 24-Hour Delay Timer
- 11cups uncooked/ 22cups cooked
- 72-hour keep-warm
- Precision Technology
- Warmth & Cooking Time Screen Display



The cooker's interior reveals the non-stick inner pot and the detachable inner lid, designed for easy cleaning and efficient cooking.

Key Features:

- **Effortless Convenience:** Automates cooking for large meals (10 cups uncooked / 20 cups cooked).
- **Smart Functions:** Auto shut-off, 24-hour delay timer, and a maximum 72-hour keep-warm function.
- **Versatile Multi-Cook Functions:** 15 pre-set dishes including White Rice, Brown Rice, Sushi Rice, Mixed Rice, Softer, Harder, Porridge, Baby Food, Tteokbokki, Gyeran-jjim, Steam, Soup, Stew, Cake, Bread, Curry, Yogurt, Slow Cook, Auto Clean, and Reheat.
- **Digital Display:** Clear screen shows cooking time and warmth status.
- **Health Benefits:** Efficient steaming option for vegetables, preserving nutrients.
- **User-Friendly & Easy to Clean:** Non-stick inner pot (dishwasher-safe), detachable inner pot cover, and steam cap for simple cleaning.
- **One-Touch Operation:** Simplifies meal preparation.

Included Accessories:

Created with you in mind,
for a truly enjoyable experience

Measuring Cup

Scoop

Soup Spoon

Steamer Basket

ACCESSORIES

Detachable Cover



The rice cooker comes with essential accessories to enhance your cooking experience.

- Measuring Cup
- Rice Paddle (Scoop)
- Soup Spoon
- Steamer Basket

3. SETUP

1. **Unpack the Rice Cooker:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the inner pot, inner pot cover, steam cap, measuring cup, rice paddle, soup spoon, and steamer basket with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.

4. OPERATING INSTRUCTIONS

Your MAGiC COM Rice Cooker offers a variety of cooking modes for diverse culinary needs.



The rice cooker's versatile multi-cook functions allow for a wide range of dishes beyond just rice.

Basic Cooking Steps:

1. **Measure Ingredients:** Use the provided measuring cup to measure rice. Rinse rice thoroughly until water runs clear.

- Add to Inner Pot:** Place the rinsed rice into the non-stick inner pot. Add the appropriate amount of water according to the rice type and desired consistency. Refer to the water level markings inside the inner pot.
- Place Inner Pot:** Carefully place the inner pot into the main unit, ensuring it sits properly. Close the lid securely.
- Select Cooking Mode:** Press the **Menu** button repeatedly to cycle through the available cooking modes until your desired mode is selected. The selected mode will be highlighted on the digital display.
- Start Cooking:** Press the **Start** button. The cooker will begin the cooking process, and the display will show the remaining cooking time or a progress indicator.
- Keep Warm:** Once cooking is complete, the cooker will automatically switch to the "Keep Warm" mode. This function can keep food warm for up to 72 hours.

Using the Delay Timer:

The 24-hour delay timer allows you to set the cooker to start at a later time, so your meal is ready when you need it.

1. Prepare ingredients in the inner pot as usual.
2. Press the **Preset Timer** button.
3. Use the **Hr** and **Min** buttons to adjust the desired delay time (up to 24 hours).
4. Press the **Start** button to confirm. The display will show the countdown until cooking begins.

Special Functions:

- **Auto Clean:** This mode uses steam to help loosen food residue inside the cooker, making manual cleaning easier.
- **Reheat:** Use this function to warm up previously cooked food.
- **Softer/Harder:** For certain rice types, these options allow you to adjust the texture of the cooked rice.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your rice cooker.



The detachable components of the rice cooker are designed for easy removal and cleaning, including dishwasher compatibility for the inner pot.

- 1. Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
- 2. Inner Pot:** The non-stick inner pot is dishwasher-safe. For hand washing, use a soft sponge and mild dish soap. Avoid abrasive cleaners or metal scrubbers that could damage the non-stick coating.
- 3. Inner Pot Cover and Steam Cap:** These parts are detachable and can be easily removed and washed with water and mild soap. Ensure they are dry before reattaching.
- 4. Water Collector:** Empty and clean the water collector (condensation collector) located at the back or side of the unit after each use to prevent odors and buildup.
- 5. Main Unit Exterior:** Wipe the exterior of the rice cooker with a damp cloth. Do not use harsh chemicals or immerse the main unit in water.
- 6. Heating Plate:** If any food particles are stuck on the heating plate, gently wipe them off with a damp cloth. Do not use sharp objects to scrape the heating plate.

6. TROUBLESHOOTING

If you encounter any issues with your rice cooker, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Cooker does not turn on.	Power cord not properly plugged in; no power at outlet.	Ensure the power cord is securely plugged into both the cooker and a working electrical outlet. Check the circuit breaker.
Rice is too dry or hard.	Insufficient water; rice not soaked (if required for type); lid not properly closed.	Add slightly more water next time. Ensure the lid is fully closed during cooking. For some rice types, pre-soaking may be beneficial.
Rice is too wet or mushy.	Too much water; lid opened during cooking.	Reduce water slightly next time. Avoid opening the lid during the cooking cycle.
Food sticks to the inner pot.	Not enough water; inner pot not clean; non-stick coating damaged.	Ensure proper water-to-rice ratio. Clean the inner pot thoroughly. If coating is damaged, consider replacing the inner pot.
Steam leaks from the lid.	Lid not properly closed; steam cap or inner pot cover not installed correctly; seal damaged.	Ensure the lid is securely closed. Check that the steam cap and inner pot cover are correctly assembled. Inspect the lid seal for damage.
Display shows an error code.	Internal malfunction.	Unplug the cooker, wait a few minutes, then plug it back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the MAGiC COM Rice Cooker.

Specification	Value
Brand	MAGiC COM
Model Name	MCD001 MAGiC COM Rice Cooker 10 Cup
Capacity	10 Cups (Uncooked) / 20 Cups (Cooked)
Product Dimensions	9.3"D x 9.8"W x 8.5"H

Specification	Value
Power Source	Corded Electric
Voltage	120 Volts
Wattage	860 watts
Material	Ceramic, Metal, Plastic, Stainless Steel
Lid Material	Stainless Steel
Item Weight	9.02 pounds (4.1 Kilograms)
Special Features	Automatic Cooking, Automatic Keep Warm, Non-Stick, One-Touch Operation, Steam Vent
Manufacturer	Yongmausa inc

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact MAGiC COM customer service. Keep your purchase receipt as proof of purchase.

Customer Service: Refer to the contact information provided on the product packaging or the official MAGiC COM website for assistance.

We are committed to providing high-quality products and support to ensure your satisfaction.