

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Peektook](#) /

› [Peektook Mini Chainsaw Cordless 6-Inch User Manual](#)

Peektook sku002010

Peektook Mini Chainsaw Cordless 6-Inch User Manual

Model: sku002010

INTRODUCTION

This manual provides essential instructions for the safe operation, maintenance, and troubleshooting of your Peektook 6-inch cordless mini chainsaw. Please read this manual thoroughly before first use to ensure proper handling and to maximize the lifespan of your tool. Keep this manual for future reference.

SAFETY INFORMATION

WARNING: Always wear appropriate personal protective equipment (PPE) including safety goggles and gloves when operating the chainsaw.

Key Safety Features:

- **Security Lock:** Prevents accidental activation. The chainsaw requires two distinct buttons to be pressed to turn on, reducing the risk of unintended starts.
- **Blade Guard:** Designed to protect against injury during operation.
- **Handle Guard:** Separates your hand from the moving chain, enhancing user safety.
- **Protective Baffle:** Prevents sparks and dust from scattering during cutting operations.

Always ensure the safety lock is engaged when the tool is not in use or when performing maintenance.

ENHANCE YOUR EXPERIENCE WITH THE PEEKTOOK MINI CHAINSAW



Image: The Peektook mini chainsaw illustrating its safety features including the blade guard, handle guard, and safety switch.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking.

- 1 x Assembled 6-inch Mini Chainsaw
- 2 x 21V Lithium-Ion Batteries (2.0Ah each)
- 1 x Battery Charger
- 2 x Chains
- 1 x Safety Goggles
- 2 x Gloves
- 1 x Oil Bottle (empty, for user-supplied chain oil)
- 1 x Screwdriver

- 1 x User Manual (this document)



Image: All components included in the Peektoot mini chainsaw package, including the chainsaw, batteries, charger, chains, safety gear, and tools.

SETUP

1. Battery Charging

Before first use, fully charge both batteries. Connect the charger to a power outlet and insert the battery. The indicator light on the battery will show charging status. A full charge typically takes 1.5 to 2 hours per battery.

21V 4000MAH RECHARGEABLE HIGH-CAPACITY BATTERY

Dual Batteries With A Total Capacity Of 4000mah, Longer Use Time



Image: Illustration of the 21V 4000mAh battery, showing its charging time of 1.5-2 hours and working time of 60 minutes.

2. Chain Installation and Adjustment

The chainsaw comes pre-assembled, but it is important to understand how to adjust and replace the chain.

1. **Loosen the Cover Screw:** Use the provided screwdriver to loosen the screw securing the sprocket cover.
2. **Wrap the Chain:** Carefully wrap the chain around the guide bar and sprocket. Ensure the chain direction is correct (clockwise).
3. **Align the Sprocket Cover:** Place the sprocket cover back, ensuring it aligns properly.
4. **Adjust Chain Tension:** Pull the chain to check tension. The gap between the chain and the guide plate should be approximately 3-4mm. Adjust the tension screw until this gap is achieved.
5. **Tighten the Cover Screw:** Once the tension is correct, tighten the cover screw firmly to secure the guide bar and chain. Ensure it is tightened to the maximum extent possible without overtightening.

PEEKTOOK PORTABLE MINI MAKES CUTTING EASY AND SIMPLE

WHETHER IT'S FOR HOME OR PROFESSIONAL USE



Image: Step-by-step visual guide for installing and adjusting the chain on the Peektook mini chainsaw.

OPERATING INSTRUCTIONS

1. Powering On/Off

To turn on the chainsaw, simultaneously press the safety lock button and the trigger switch. Release the safety lock button once the chainsaw starts. To turn off, release the trigger switch.

2. Cutting Techniques

- Ensure a firm grip on the handle. The ergonomic thermoplastic rubber handle provides comfort and reduces fatigue.
- Position the chainsaw firmly against the material to be cut.
- Allow the chain to reach full speed before engaging the material.
- Apply steady, moderate pressure. Do not force the saw through the material. The 700W pure copper motor drives the chain at 34.5 ft/s, allowing for efficient cutting of branches up to 6 inches in diameter in approximately 8-10 seconds.
- Be aware of kickback. Always maintain a balanced stance.

**THE CHAIN CUTS AT A HIGH
SPEED OF 34.5 FT/S**



Image: The Peektook mini chainsaw demonstrating its cutting capability on a log, highlighting its 6-inch cutting diameter and fast cutting speed.

3. One-Handed Operation

The lightweight design (2.2 lbs) allows for comfortable one-handed operation, making it suitable for various pruning tasks and reducing user fatigue during extended use. However, for maximum control and safety, two-handed operation is recommended whenever possible.



Image: A user demonstrating the lightweight and one-handed operation of the Peektoot mini chainsaw for pruning small branches.

MAINTENANCE

1. Chain Lubrication

Regular lubrication of the chain is essential for optimal performance and longevity. Fill the provided oil bottle with appropriate chain lubricant (not included) and apply it periodically to the chain and guide bar during use, especially during prolonged cutting sessions.

2. Chain Tension Check

Check chain tension frequently, especially after initial use and during extended operation. A loose chain can derail and cause injury or damage. Refer to the "Chain Installation and Adjustment" section for instructions on how to adjust tension.

3. Chain Replacement

When the chain becomes dull or damaged, replace it with one of the spare chains provided or a compatible replacement. Follow the steps for chain installation. Phosphorized rust-resistant chainplates ensure durability.

4. Cleaning

After each use, remove the battery and clean the chainsaw. Use a brush or compressed air to remove sawdust, debris, and resin from the guide bar, chain, and motor vents. Ensure the heat dissipation device and LED light area are clear of obstructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged; Safety lock not disengaged; Battery not properly inserted.	Charge battery; Ensure both safety lock and trigger are pressed; Reinsert battery firmly.
Chain becomes loose frequently	Insufficient chain tension; Screw securing cover is loose.	Adjust chain tension as per instructions; Ensure cover screw is tightened firmly.
Reduced cutting performance	Dull chain; Insufficient chain lubrication; Overheating.	Replace chain; Lubricate chain; Allow tool to cool down.
Chainsaw stops during operation	Battery depleted; Overload protection activated (e.g., cutting too large/hard material); Overheat protection.	Replace with charged battery; Reduce cutting load; Allow tool to cool down.

SPECIFICATIONS

- **Model:** sku002010
- **Blade Length:** 6 inches
- **Motor Power:** 700W Pure Copper Motor
- **Chain Speed:** 34.5 ft/s
- **Battery Type:** 21V Lithium-Ion
- **Battery Capacity:** 2.0Ah (each, 2 included)
- **Charging Time:** 1.5 - 2 hours per battery
- **Working Time:** Approximately 30-45 minutes per battery (continuous use)

- **Item Weight:** 2.2 lbs (chainsaw only), 3.59 lbs (package weight)
- **Product Dimensions:** 8 x 15 x 2 inches
- **UPC:** 717331315597



High efficiency speed

Overheat protection

High cycle & long life

Heat resistant

PEEKTOOK HIGH POWER PURE COPPER MOTOR
More Torque and Higher efficiency

Image: An X-ray view of the Peektook mini chainsaw highlighting its high-power pure copper motor, designed for efficiency and durability.

WARRANTY AND SUPPORT

Peektook offers a 365-day product guarantee. If you encounter any quality problems within 12 months, a free replacement will be provided without the need to return the product.

Contacting Customer Service:

For any questions or support regarding your Peektook mini chainsaw, please contact us through your Amazon account:

1. Log in to your Amazon account.
2. Click on "Your orders".
3. Find the order ID for your chainsaw purchase.
4. Click on "Contact seller".