



Manuals.plus /

- › SEANCHEER /
- › SEANCHEER R1 TikTok Scrolling Remote Control Instruction Manual

## SEANCHEER R1

# SEANCHEER R1 TikTok Scrolling Remote Control Instruction Manual

Model: R1

## 1. INTRODUCTION

The SEANCHEER R1 is a versatile Bluetooth remote control designed to enhance your mobile experience. It allows for remote scrolling on social media platforms like TikTok, page turning in the Kindle App, and serves as a camera shutter controller for photos and videos on compatible smartphones. This manual provides detailed instructions for setup, operation, and troubleshooting.

# Smartphone TikTok Remote Scrolling Control

No More Manual Scrolling Up/Down



Image 1.1: User operating the SEANCHEER R1 remote control for TikTok scrolling.

## 2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- SEANCHEER R1 Remote Control
- USB-C Charging Cable
- User Manual (this document)

## 3. PRODUCT FEATURES AND CONTROLS

The SEANCHEER R1 remote control features intuitive buttons for various functions:



Image 3.1: Detailed view of the SEANCHEER R1 remote control buttons.

- **Up/Down Arrows:** Scroll up/down in apps like TikTok or turn pages in the Kindle App.
- **Left/Right Arrows:** Navigate between videos or content (functionality may vary by app).
- **OK Button:** Double-click to 'like' videos on TikTok, single-click for play/pause.
- **Camera Button:** Activates the camera shutter for photos and videos in your phone's built-in camera app.
- **Volume Buttons (V+/V-):** Adjust volume.
- **Power Switch:** Located on the side to turn the device on/off.

## 4. SETUP INSTRUCTIONS

### 4.1. Initial Charging

Before first use, fully charge the remote control for 3-5 hours. The front indicator light will flash red when the

battery is critically low. Use the provided USB-C cable for charging.

## 4.2. Bluetooth Pairing

1. Ensure the SEANCHEER R1 remote is charged.
2. Turn on the remote control using the side power switch. A blue indicator light will flash, indicating it's in pairing mode.
3. On your smartphone (iPhone or Android), go to **Settings > Bluetooth**.
4. Search for available devices and select "**Beauty-R1**" (or similar name starting with R1) to connect.
5. Confirm pairing if prompted. The blue indicator light on the remote will turn off once successfully connected.

## 4.3. iOS Specific Settings (for iPhone 11 with iOS 14+ and newer models)

For optimal functionality on iOS devices, especially for scrolling and page turning, you may need to enable AssistiveTouch:

1. Go to **Settings > Accessibility > Touch > AssistiveTouch**.
2. Toggle **AssistiveTouch** ON.
3. You may need to adjust custom actions within AssistiveTouch for specific app behaviors (e.g., single tap for scrolling).

Video 4.1: Official SEANCHEER R1 TikTok Bluetooth Remote Control setup and usage demonstration.

---

# 5. OPERATING INSTRUCTIONS

## 5.1. TikTok Scrolling

Once paired, open the TikTok app:

- Use the **Up/Down Arrows** to scroll through videos.
- Double-click the **OK Button** to 'like' a video.
- Single-click the **OK Button** to play or pause a video.
- Use **V+/V-** buttons to adjust video volume.

## 5.2. Kindle App Page Turner

Open the Kindle App on your iPhone or Android phone:

- Use the **Up/Down Arrows** to turn pages forward or backward.

**Note: This remote is compatible with the Kindle App on smartphones only. It does NOT support Kindle devices, iPads, or other tablets, nor is it compatible with audiobooks in the Kindle App.**

# Smartphone Kindle App Page Turner

NOT for Kindle Devices or Any Other ebook Apps



Image 5.1: Using the SEANCHEER R1 remote to turn pages in the Kindle App on a smartphone.

## 5.3. Camera Shutter Controller

Open your smartphone's built-in camera app:

- Press the **Camera Button** to capture photos or start/stop video recording.

**Note: This function only works with your phone's built-in camera app and does not support third-party camera applications.**



Image 5.2: The SEANCHEER R1 remote control functioning as a camera shutter for a smartphone.

## 6. CHARGING AND BATTERY INFORMATION

The SEANCHEER R1 features a 150mAh high-capacity battery, providing over 7 days of use on a single charge.

- **Charging:** Connect the remote to a power source using the provided USB-C cable.
- **Low Battery Warning:** The front indicator light will flash red when the battery is critically low. Please charge the device promptly.

## 7. COMPATIBILITY

The SEANCHEER R1 is compatible with:

- iPhone 11 (iOS 14+) and newer models.
- Android Phones running Android 7.0+ (excluding foldable phones).

### Incompatible Devices/Apps:

- Kindle devices, iPads, or other tablets.
- All music apps.
- All audiobook apps.
- All video apps except TikTok.
- Swiping through all web pages.



Image 7.1: Visual representation of compatible iOS and Android phones, and incompatible foldable phones.

# Incompatible Apps



- ✘ All Music Apps
- ✘ All Audiobook Apps
- ✘ All Video Apps Except TikTok
- ✘ Swipe Through All Web Pages



Image 7.2: Apps that are not compatible with the SEANCHEER R1 remote control.

## 8. TROUBLESHOOTING

- **Difficulty Connecting:** If the remote has difficulty connecting, try turning it off and on again. Ensure Bluetooth is enabled on your phone and the remote is within range. Re-pair the device if necessary.
- **Functions Not Working on iOS:** Ensure AssistiveTouch is enabled in your iPhone's Accessibility settings.
- **Incompatible Devices/Apps:** The remote is designed for specific apps and phone types. Refer to the Compatibility section (Section 7) to ensure your device and app are supported. For example, it does not support Kindle devices, only the Kindle App on compatible smartphones.
- **Buttons Not Responding:** Check the battery level. If the indicator light is flashing red, recharge the device.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	R1
Brand	SEANCHEER
Item Weight	1.44 ounces
Package Dimensions	4.06 x 2.76 x 0.87 inches
Batteries	1 Lithium Ion battery (included)
Special Feature	Rechargeable
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Smartphone (iPhone 11/iOS 14+ and newer, Android 7.0+ excluding foldable phones)

---

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact SEANCHEER customer service through the retailer's platform or visit the official SEANCHEER store online. Please retain your proof of purchase for warranty claims.

---