

- Manuals.plus /
- > ECONTROLLY /
- > ECONTROLLY DR-HTF003 Replacement Remote Control User Manual for Dreo Fans

ECONTROLLY RCEC-DR-HTF003

ECONTROLLY DR-HTF003 Replacement Remote Control User Manual for Dreo Fans

Model: RCEC-DR-HTF003

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY DR-HTF003 replacement remote control. This remote is designed to be compatible with Dreo DR-HTF003 fans, offering a convenient way to operate your fan from a distance. Please read this manual carefully to ensure proper setup and operation.





Image 1.1: Front view of the ECONTROLLY DR-HTF003 replacement remote control. This image displays the remote's buttons, including power, mute, fan speed, auto mode, oscillation, and timer functions.

2. SETUP

2.1 Battery Installation

The ECONTROLLY DR-HTF003 remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.



Image 2.1: View of the remote control with the battery compartment open, showing where to insert two AAA batteries.

3. OPERATING INSTRUCTIONS

The remote control provides various functions to manage your Dreco DR-HTF003 fan. Point the remote directly at the fan's receiver for optimal performance. The transmitting distance is approximately 10 meters (33 feet).

3.1 Button Functions

- **Power Button** (⏻): Turns the fan On or Off.
- **Mute Button** (🔊): Mutes or unmutes fan sounds/beeps.
- **Fan Speed Button** (⬆️⬆️): Adjusts the fan speed settings. Press repeatedly to cycle through available speeds.
- **Auto Mode Button** (🌀 **AUTO**): Activates or deactivates the automatic fan mode, which adjusts speed based on ambient conditions.
- **Oscillation Button** (↺️↻️): Starts or stops the fan's oscillation function, allowing it to rotate and distribute air across a wider area.
- **Timer Button** (🕒): Sets a timer for the fan to automatically turn off after a specified duration.



Image 3.1: An angled view of the remote control, highlighting the layout and symbols of each function button.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

If the remote control's range decreases or it becomes unresponsive, the batteries may need to be replaced. Refer to Section 2.1 for battery installation instructions. Always replace both batteries at the same time with new alkaline batteries of the correct type (AAA).

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries from the remote control to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the fan's receiver.
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote and the fan.
- **Reduced operating range:**
 - Batteries may be low; replace them.
 - Ensure there are no strong light sources or electronic devices interfering with the signal.

6. SPECIFICATIONS

Model Number	RCEC-DR-HTF003
Brand	ECONTROLLY
Compatible Devices	Dreo DR-HTF003 Fans
Material	ABS Material
Color	Black
Transmitting Distance	Up to 10 meters (33 feet)
Batteries Required	2 x AAA (not included)
Product Dimensions	5 x 1 x 0.25 inches (12.7 x 2.54 x 0.64 cm)
Item Weight	2 ounces (56.7 grams)



Image 6.1: Diagram showing the approximate dimensions of the remote control: 4.5 cm (1.77 in) width and 11 cm (4.33 in) length.

7. COMPATIBILITY

This ECONTROLLY remote control is specifically designed as a replacement for the original Dreo DR-HTF003 fan

remote. It offers direct compatibility without the need for complex programming or setup procedures.

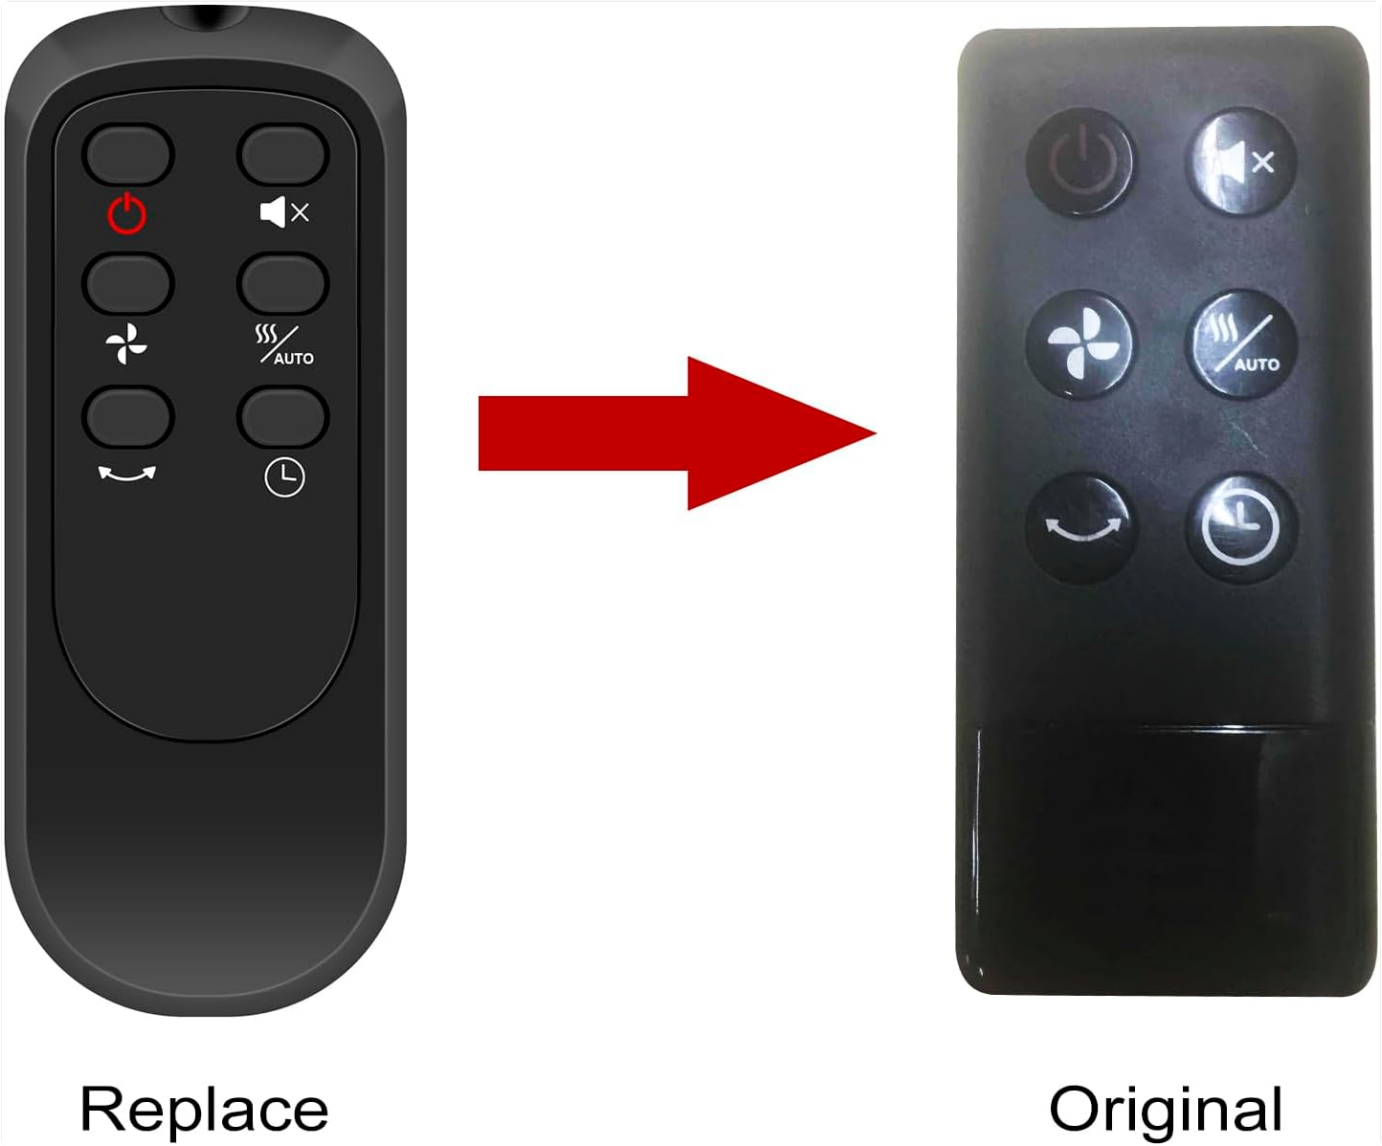


Image 7.1: A visual comparison showing the ECONTROLLY replacement remote alongside the original Dreo remote, indicating their similar design and button layout.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPM8CK1F>

More documents and user manuals: <https://manuals.plus/>