

ALLIMITY A-TV2 URC-1234ALB

User Manual: ALLIMITY A-TV2 URC-1234ALB Universal Replacement Remote

Model: A-TV2 URC-1234ALB

INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY A-TV2 URC-1234ALB Universal Replacement Remote Control. Designed for compatibility with a wide range of television brands, this remote offers a straightforward solution for controlling your TV with large, easy-to-use buttons. Please read this manual thoroughly to ensure proper setup and operation of your new remote control.

PRODUCT OVERVIEW

The ALLIMITY A-TV2 URC-1234ALB remote is engineered for simplicity and broad compatibility. Its design focuses on essential TV functions with clearly labeled, large buttons for ease of use.

Key Features:

- Universal compatibility with almost all TV brands.
- Large, clearly labeled buttons for enhanced visibility and usability.
- Durable plastic construction.
- Ergonomic design for comfortable handling.

Remote Control Layout:





Figure 1: Front view of the ALLIMITY A-TV2 URC-1234ALB Universal Replacement Remote Control. This image displays the full button layout, including the red power button at the top, volume and channel controls in the middle, and the numeric keypad at the bottom, along with input and previous channel buttons.

PRODUCT SIZE

7.48 in / 19 cm

1.85 in / 4.7 cm



Figure 2: Dimensions of the ALLIMITY A-TV2 URC-1234ALB remote control. The image highlights the remote's length as 7.48 inches (19 cm) and width as 1.85 inches (4.7 cm), providing a clear understanding of its physical size.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.





Figure 3: Rear view of the remote control with the battery compartment open. This image illustrates where to insert the batteries and the orientation required for proper function.

Initial Use:

Once batteries are installed, the remote is ready for use. No complex programming is typically required for this universal replacement remote.

- Point the remote control directly towards the infrared (IR) sensor on your television.
- Ensure there are no obstacles between the remote and the TV's sensor that could block the signal.

OPERATING INSTRUCTIONS

The ALLIMITY A-TV2 URC-1234ALB remote provides intuitive control over your television's primary functions. Refer to the button layout in Figure 1 for visual guidance.

- **Power Button ():** Press to turn your TV on or off.
- **Volume Up/Down (VOL +/-):** Press **+** to increase volume, **-** to decrease volume.
- **Channel Up/Down (CH ^/~):** Press **^** to go to the next channel, **~** to go to the previous channel.
- **Input/AV:** Press to cycle through available input sources (e.g., HDMI 1, HDMI 2, AV).
- **Prev. CH:** Press to quickly switch back to the previously viewed channel.
- **Mute ():** Press to mute or unmute the TV's audio.
- **Number Buttons (0-9, +100):** Use to directly enter channel numbers. The "+100" button may be used for channels above 99 or specific functions depending on your TV model.
- **SET:** This button is typically used for advanced setup or programming on some universal remotes. For this replacement remote, it is generally not required for basic operation.



Figure 4: User operating the remote control. This image demonstrates the typical usage scenario, showing a person comfortably using the remote to control their television.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV sensor.	Replace batteries, ensuring correct polarity. Remove any objects blocking the signal path. Ensure remote is pointed directly at the TV's IR sensor.
Some buttons not working.	Dirt or debris under buttons. Remote malfunction.	Clean the remote surface. If problem persists, contact customer support.
Remote works intermittently.	Low battery power. Weak signal due to distance or angle.	Replace batteries. Move closer to the TV and ensure a direct line of sight to the IR sensor.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please refer to the "Warranty and Support" section for assistance.

SPECIFICATIONS

- Model Number:** A-TV2 URC-1234ALB
- Brand:** ALLIMITY
- Product Dimensions:** 5 x 2 x 0.6 inches (12.7 x 5.08 x 1.52 cm)
- Item Weight:** 1 ounce (28.35 grams)
- Product Material:** Plastic
- Color:** BLACK
- Compatible Devices:** Television
- Max Number of Supported Devices:** 1
- Special Feature:** Ergonomic

WARRANTY AND SUPPORT

ALLIMITY is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, we offer support for our products.

If the product you received cannot work well, or if you have any questions or require assistance with your ALLIMITY A-TV2 URC-1234ALB Universal Replacement Remote, please do not hesitate to contact our customer support team. We are dedicated to helping you find a solution.

For support, please refer to the contact information provided with your purchase or visit the official ALLIMITY support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Is the ALLIMITY A-TV2 URC-1234ALB Universal Replacement Remote compatible with a Ruko TV?

The ALLIMITY A-TV2 URC-1234ALB Universal Replacement Remote is designed for compatibility with a wide range of television brands, stating "Universal compatibility with almost all TV brands." However, the provided manual and product information do...

[Read full answer](#)