

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› Instruction Manual for ECONTROLLY Replacement TV Remote Control

ECONTROLLY Replacement TV Remote Control

Instruction Manual for ECONTROLLY Replacement TV Remote Control

Compatible with various RCA TV Models

1. PRODUCT OVERVIEW

This ECONTROLLY replacement remote control is designed to be compatible with a wide range of RCA TV models. It functions as an infrared remote control and does not require any programming, offering straightforward operation right out of the box.

Key Features:

- Pre-programmed for immediate use with compatible RCA TVs.
- Infrared technology for reliable signal transmission.
- Ergonomic design for comfortable handling.





Figure 1: Front view of the ECONTROLLY replacement TV remote control, displaying its full button layout.

2. SETUP AND BATTERY INSTALLATION

The remote control requires two AA ALKALINE batteries for operation. Batteries are not included with the product.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AA ALKALINE batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important Note:

- Do not use rechargeable batteries with this remote control.

- Ensure batteries are inserted with correct polarity to prevent damage to the remote.
- Remove batteries if the remote will not be used for an extended period.



Figure 2: Angled view of the remote control, showcasing its form factor.

3. OPERATING INSTRUCTIONS

This remote control is pre-programmed and ready to use with compatible RCA TV models. No additional programming or setup is

required after battery installation.

Compatibility:

This remote is compatible with the following RCA TV models:

- RLDED4633A-C
- RLC3273A-B
- RLDED3955A
- RLED4010A
- RLDED3258A-C
- RLED4778A
- RLC3708A
- RLED1530
- RLED3219A
- RLED3216A
- RLCD4692A
- RLED2243A
- RLDED5078A-D
- RLC4688A
- RLC4686A-B
- RLED1530-WHITE
- RLDED2845A
- RLD5515A-C
- RLC3708A-B
- RLC4062A
- RLED1526A
- RLC4686
- RLC4688A-B
- RLC4688A
- RLC3255A-B
- RLDED4016A

Important Compatibility Notice:

All compatible TV models listed with a hyphen (e.g., RLDED4633A-C, RLDED3258A-C) are specific single TV models, not combined models. Please ensure your TV model is exactly the same as the model listed. For example, if your TV model is RLDED4633A, RLDED4633B, or RLDED4633C, this remote will not work for it. It is designed to work specifically for TV model RLDED4633A-C.

To operate your TV, simply point the remote control directly at the TV's infrared receiver and press the desired button. Ensure there are no obstructions between the remote and the TV.





Figure 3: Demonstration of the remote control in use, pointing towards a television.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA ALKALINE batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AA ALKALINE batteries, ensuring correct polarity.
Remote only works sometimes.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure clear line of sight to the TV's IR receiver.
Remote does not control TV.	TV model is not compatible.	Verify your TV model against the compatibility list in Section 3. This remote is designed for specific RCA TV models only.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote surface with a soft, dry cloth. Avoid liquid cleaners.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.76 ounces
Power Source	2 x AA ALKALINE Batteries (not included)
Color	Black
Special Feature	Pre Programmed
Max Number of Supported Devices	1 (Television)
Compatible Devices	Specific RCA TV models (refer to Section 3 for full list)
Manufacturer	Shengxingwang Factory
Country of Origin	China



Figure 4: Dimensions of the remote control.

7. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any product-related inquiries, technical support, or warranty claims, please contact the seller directly through the platform where the purchase was made.

Seller: shenzhenshichengxingwangdianzishangwuyouxiangongsi

Please retain your purchase receipt or order details as proof of purchase for any support requests.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question