

[Manuals.plus](#) /

› [INFANS](#) /

› INFANS Wagon Stroller for 2 Kids Instruction Manual, Model 111915c7-4cae-451e-959d-62d3355e6340

INFANS 111915c7-4cae-451e-959d-62d3355e6340

INFANS Wagon Stroller for 2 Kids Instruction Manual

Model: 111915c7-4cae-451e-959d-62d3355e6340

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your INFANS Wagon Stroller. Please read this manual thoroughly before first use and retain it for future reference. This stroller is designed for transporting two children, offering versatility and comfort.



Image: The INFANS Wagon Stroller shown in multiple configurations, including fully assembled, folded, and with the canopy removed.

SAFETY INFORMATION

Your INFANS Wagon Stroller is designed with safety in mind and complies with ASTM and CPSIA standards. Adhere to the following safety guidelines:

- Always secure children with the 3-point harness system.
- Ensure the stroller is fully locked in its open position before placing children inside.
- Do not exceed the maximum weight capacity of 33 lbs (15 kg) per seat.
- Recommended age for use is 6 months and older.
- Never leave children unattended in the stroller.
- Engage the one-step brake when the stroller is stationary.
- Avoid hanging bags or items on the handles that could cause the stroller to tip.

- Keep fingers and hands clear of moving parts during folding and unfolding.

SETUP AND ASSEMBLY

Unfolding the Stroller

1. Place the folded stroller on a flat surface.
2. Release any locking mechanisms that secure the stroller in its folded position.
3. Pull the frame upwards until it clicks into the fully open position. Ensure all locking mechanisms are engaged.

Attaching the Canopy

The stroller includes a removable and angle-adjustable UV protection canopy.

- Align the canopy attachment points with the corresponding slots on the stroller frame.
- Securely fasten the canopy. Adjust the angle as needed for sun protection.



Adjustable Dual Canopies for Different Needs

Image: The stroller with two adjustable canopies, demonstrating their independent movement for different needs.



Removable UV Protection Canopy



Image: A child seated in the stroller with the UV protection canopy extended, illustrating its protective function.

OPERATING INSTRUCTIONS

Adjusting the Handles

The stroller features both a push handle and a pull handle for versatile use.

- **Push Handle:** Adjust the 5-position push handle to a comfortable height for pushing.
- **Pull Handle:** The pull handle can be adjusted from 0-90° and has 2 height levels for pulling the stroller like a wagon.

PUSH & PULL

PUSH HANDLE

5-Position Adjustable
Push Handle



Image: Diagram showing the 5-position adjustable push handle and the 0-90° adjustable pull handle with two height levels.

Wheel Operation and Braking

- **Front Wheels:** The two front wheels can be set to either universal (swivel) or directional (fixed straight) mode. Adjust as needed for maneuverability or stability.
- **Rear Wheels:** The rear wheels are equipped with a one-click brake system. Press the brake pedal to engage and disengage.
- The wheels feature a spring suspension system for smoother travel over various terrains.

All-Terrain Wheels

ANTI-SHOCK

Heavy duty spring-damper
creates smooth ride

360° Rotatable

Going Straight



One-step Brake



Image: Close-up of the all-terrain wheel with anti-shock spring-damper system and the one-step brake pedal. An arrow indicates 360° rotatable or straight mode for the front wheel.

Seat and Footwell Configuration

The stroller offers flexible seating arrangements:

- The two face-to-face seats include a shared pull-down footwell for increased legroom.
- The footwell can be lifted to create a flat bed, suitable for a child to rest.
- Detachable upholstered seat backs provide additional comfort.

Lift the foot pad part, the bottom can become a flat plane



Wagon Mode

Image: Illustration showing how to lift the foot pad part to convert the bottom into a flat plane, enabling "Wagon Mode" for carrying items or a resting child.

Folding for Storage

To fold the stroller for transport or storage:

1. Ensure children and all items are removed from the stroller.
2. Press the folding buttons located on both sides of the stroller frame.
3. Collapse the stroller until it is fully folded and secure with the fixing buckle.

Easy Folding And Storage



Image: Visual guide demonstrating the easy folding process by pressing buttons on both sides, showing the stroller transforming from open to compact folded states, fitting into a car trunk.

STORAGE AND ACCESSORIES

The stroller is equipped with various storage options:

- **Cup Holders:** Two integrated cup holders are available.
- **Detachable Food Tray:** A removable food tray provides a surface for snacks.
- **Small Storage Bags:** Multiple small storage bags are included for personal items.
- **Large Detachable Zipper Bag:** A spacious zipper bag offers additional storage capacity.

Removable
Storage Bag



Small Storage Bag
& Cup Holder



Detachable Food Tray



Convenient Travel Storage Design

Image: Overview of the stroller's storage features, including a removable storage bag, small storage bags, cup holders, and a detachable food tray.

MAINTENANCE

- **Fabric Parts:** Fabric components can be machine washed. Refer to the care label for specific instructions.
- **Frame:** Wipe the metal frame with a damp cloth and mild soap. Dry thoroughly.
- **Wheels:** Regularly check wheels for debris and ensure they rotate freely. Clean as needed.
- **Storage:** Store the stroller in a dry place, away from direct sunlight, when not in use.

TROUBLESHOOTING

- **Stroller does not fold/unfold smoothly:** Ensure all locking mechanisms are disengaged before folding and fully engaged after unfolding. Check for any obstructions in the folding mechanism.

- **Wheels lock up or do not turn properly:** Verify that the front wheels are set to the desired mode (universal or directional). Check for debris or foreign objects lodged in the wheel mechanisms. Ensure the brake is fully disengaged.
- **Handle feels unstable:** Ensure the push or pull handle is securely locked into its adjusted position. Check all connection points for tightness.

SPECIFICATIONS

Feature	Detail
Brand	INFANS
Model Number	111915c7-4cae-451e-959d-62d3355e6340
Color	Black
Material	600D Oxford Fabric (Fabric Parts), Aluminum (Frame), Rubber (Tires)
Unfolded Dimensions (L x W x H)	41" x 22" x 42"
Folded Dimensions (L x W x H)	20" x 22" x 36"
Net Weight	35 lbs
Max Load Per Seat	33 lbs (15 kg)
Recommended Age	≥6 Months
Seating Capacity	2 Children
Harness Type	3-Point
Safety Compliance	ASTM, CPSIA

Product Dimensions



Suitable Ages:
6+Months Old



Weight Capacity
for Each Seat



Image: Detailed diagram illustrating the unfolded and folded dimensions of the stroller, along with suitable ages and weight capacity per seat.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official INFANS website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question