

[Manuals.plus](#) /

> [jumper](#) /

> Jumper 2-in-1 Laptop User Manual

jumper J1

Jumper 2-in-1 Laptop User Manual

Model: J1 | Brand: jumper

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Jumper 2-in-1 Convertible Laptop. Designed for versatility and performance, this device features a 16-inch IPS FHD 360-degree touchscreen, a Celeron N5095 processor, 16GB RAM, and 640GB storage. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your laptop.



Image: The Jumper 2-in-1 Laptop, showcasing its convertible design and touchscreen capabilities.

SETUP

1. Initial Charging

Before first use, connect the laptop to a power outlet using the provided adapter. The battery indicator light will show charging status. Allow the laptop to charge fully for optimal battery performance.

2. Powering On/Off

To power on, press and hold the power button located on the side of the laptop until the screen illuminates. To power off, navigate to the Start Menu in Windows 11 Home and select 'Power' then 'Shut down'.

3. Fingerprint Reader Setup

For enhanced security, set up the fingerprint reader. Go to Windows Settings > Accounts > Sign-in options > Fingerprint Recognition (Windows Hello Fingerprint) and follow the on-screen instructions to register your fingerprints.



Image: The fingerprint reader on the side of the Jumper laptop, enabling secure and quick login.

4. Network Connection (WiFi 6)

To connect to a wireless network, click the Wi-Fi icon in the taskbar, select your desired network, and enter the password if prompted. The laptop supports WiFi 6 for faster and more stable connections.

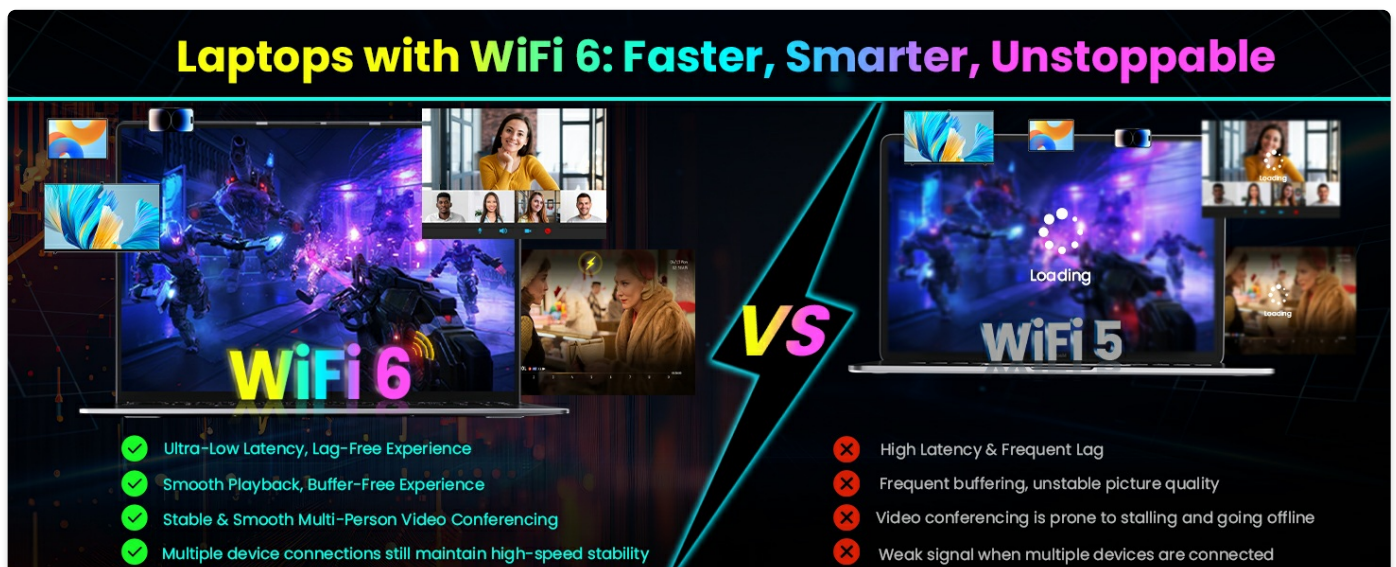


Image: Visual representation of WiFi 6 advantages over WiFi 5, including lower latency and smoother experience.

5. Office 365 Activation

Your laptop may include a 1-year subscription to Office 365. Follow the instructions provided with your laptop or on the Microsoft website to activate your subscription.



Image: Office 365 suite icon, indicating the included software.

OPERATING INSTRUCTIONS

1. 2-in-1 Convertible Modes

The Jumper laptop features a 360-degree hinge, allowing it to transform into four modes: Laptop, Stand, Tablet, and Tent. Gently rotate the screen to switch between modes as needed for your task or entertainment.



Image: The Jumper 2-in-1 laptop demonstrating its 360-degree flip capability and various usage modes.

Your browser does not support the video tag.

Video: A demonstration of the 16-inch touchscreen laptop with its 360-degree flip functionality, showcasing its versatility.

2. Touchscreen Functionality

The 16-inch IPS FHD display supports multi-touch gestures. Use your fingers to navigate, zoom, scroll, and interact with applications directly on the screen.

16" FHD Visual Experience

The 1920x1200 resolution display features touch functionality, delivering vibrant colors, clear images, and responsive touch interaction to enhance the user experience.



1920*1200
Resolution



16
inch



16:10
Aspect Ratio



Eye Care



Touch Screen



Image: The 16-inch FHD display of the Jumper laptop, emphasizing its touch functionality and vivid visuals.

3. Backlit Keyboard Usage

To activate or deactivate the backlit keyboard, press the **Fn + Spacebar** keys simultaneously. This feature enhances visibility in low-light conditions.



Image: The backlit keyboard of the Jumper laptop, illustrating its illumination for use in low-light environments.

4. Storage Management

Your laptop comes with 512GB SSD and 128GB eMMC storage. The SSD is upgradeable up to 2TB. To expand storage, you can install a compatible M.2 2280 SATA SSD in the empty slot.

The Ideal Choice!

Leverage ample storage to boost work efficiency, delivering fast performance and quick data access. Easily meet the needs of basic office tasks, entertainment, and design.

16GB Memory Freely expandable Memory 128GB eMMC 512GB Solid State Disk



Image: Internal view of the laptop's storage and RAM configuration, highlighting upgradeability.

5. Connecting Peripherals

The laptop is equipped with various ports for connectivity:

- **Micro SD Card Slot:** For expanding storage with a Micro SD card.
- **USB 3.0 Ports (x3):** For connecting USB devices like external drives, mice, or keyboards.
- **Headphone Port:** For audio output to headphones or external speakers.
- **HDMI Port:** For connecting to external displays or projectors.
- **Type-C Port:** A versatile port for data transfer, display output, and charging.

Movies, Streaming, Working – All Ports Covered



Image: Detailed view of the laptop's various ports, including Micro SD, USB 3.0, Headphone, HDMI, and Type-C.

6. Audio Features

The laptop features two built-in stereo speakers, delivering clear and balanced sound. For private listening, connect headphones to the headphone port.

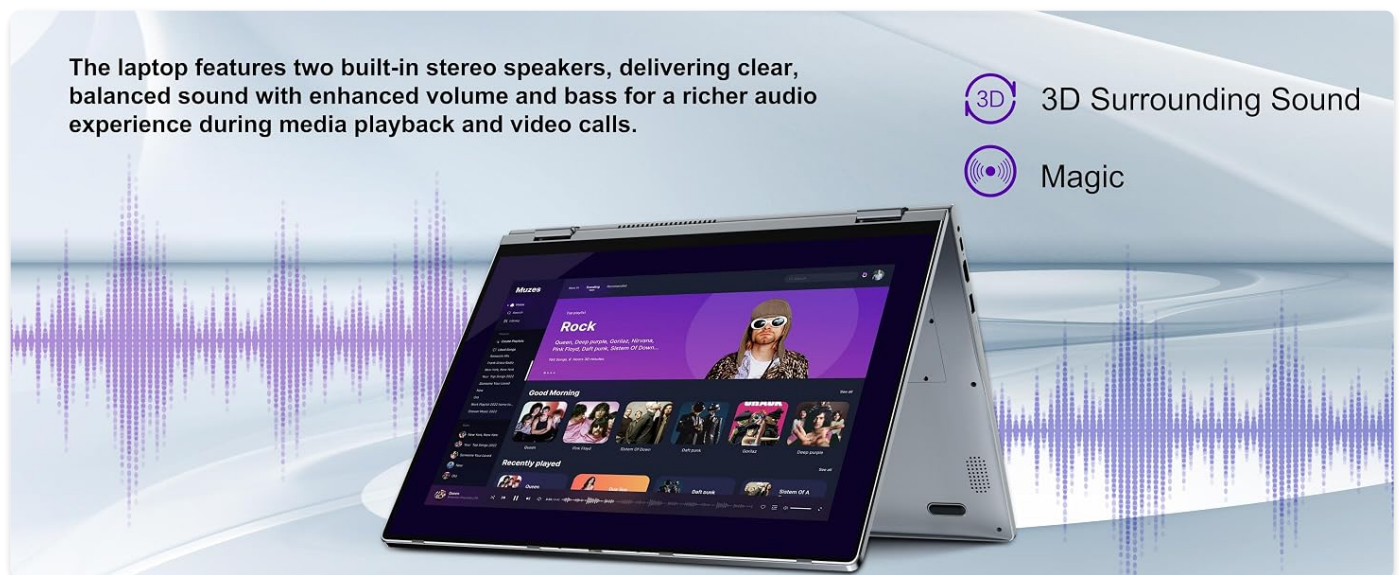 


Image: The laptop showcasing its audio capabilities with a music interface and visual sound waves.

7. Bluetooth Connectivity

Enable Bluetooth in Windows Settings to connect wireless devices such as headphones, speakers, or mice.

8. Camera Usage

The laptop includes a hideable camera for video calls and conferences. Ensure proper lighting for clear video quality.



Image: The laptop being used for a video conference, demonstrating its camera and display for communication.

MAINTENANCE

1. Cooling System

The laptop features a bottom-mounted fan for efficient cooling. Ensure the vents are not obstructed to prevent overheating, especially during intensive tasks. Regularly clean dust from the vents using compressed air.

Exquisitely Crafted Keyboard, Lighting Up the Night

Press "FN + Spacebar" to activate the backlit keyboard, making it easier to type in low-light conditions. The laptop also features a fingerprint reader on the side, ensuring secure, fast login and added protection for your data.

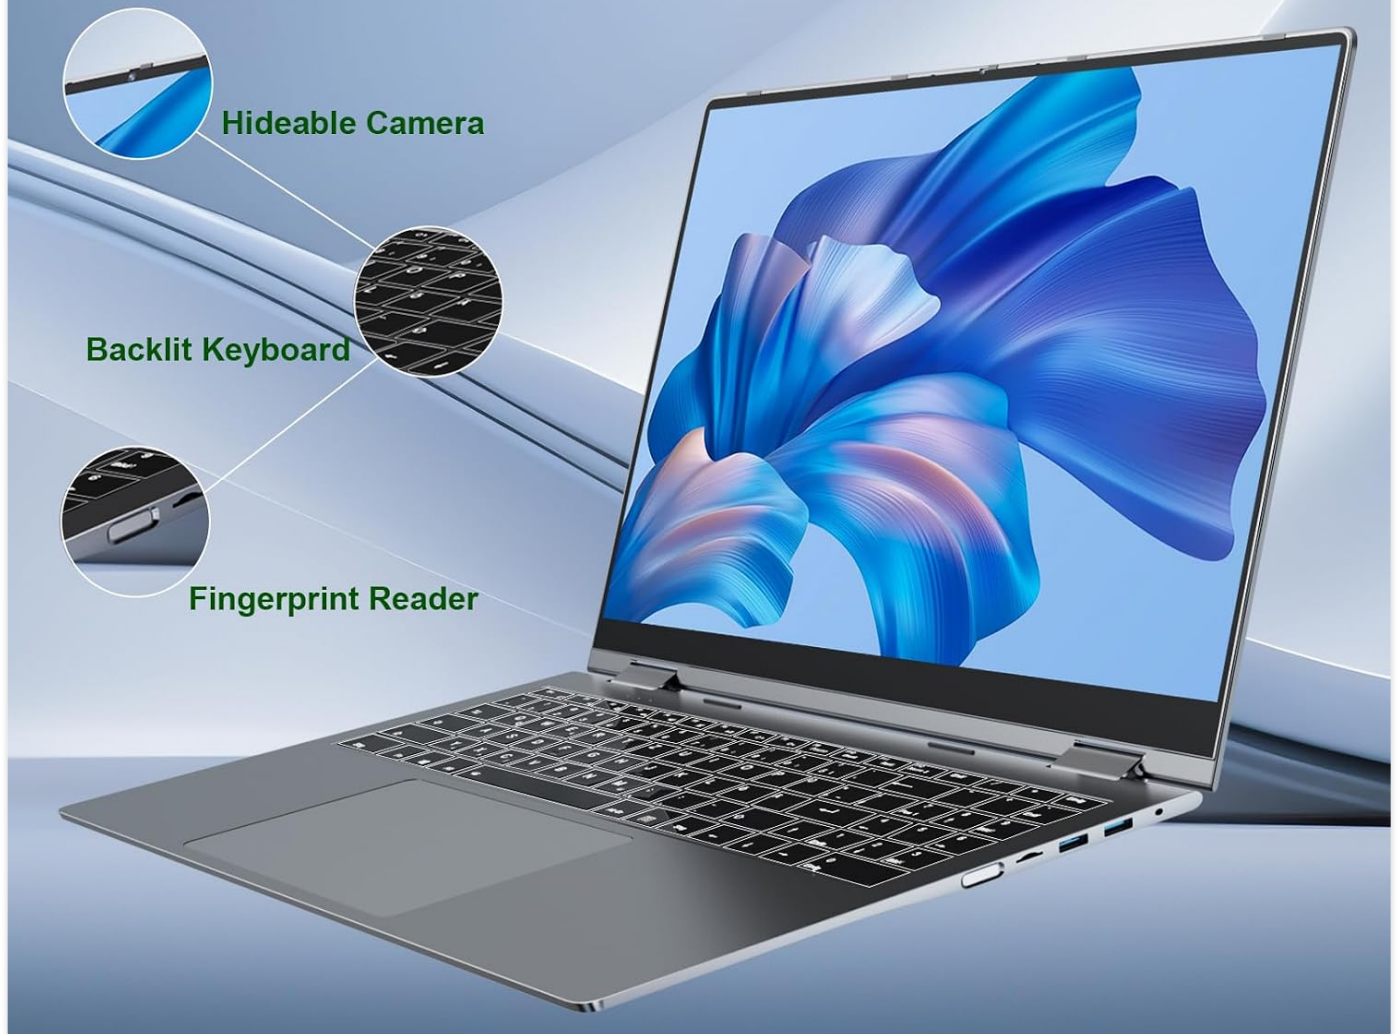


Image: Illustration of the laptop's advanced cooling system, showing air intake and exhaust for heat dissipation.

2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the laptop in a cool, dry place when not in use for extended periods. The average battery life is approximately 8 hours.

Advanced Cooling System for Laptops

Touchscreen Laptop with a fan helps maintain optimal performance by preventing overheating. The fan ensures efficient cooling during intensive tasks, prolonging the laptop's lifespan and maintaining smooth operation.

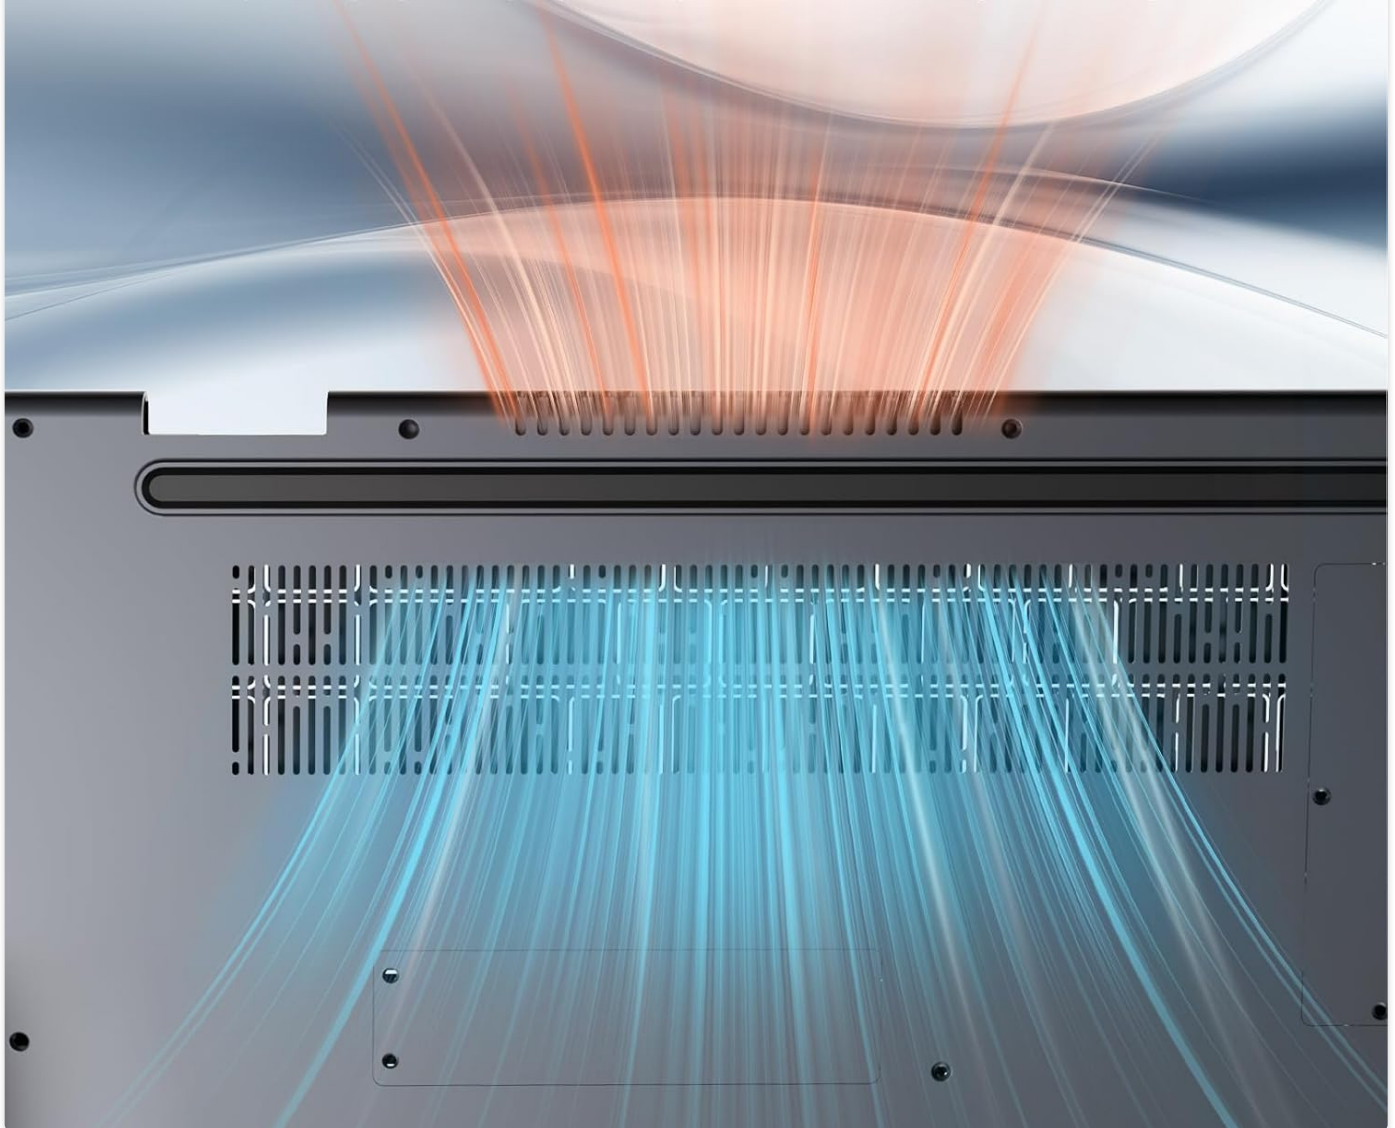


Image: The Jumper laptop in different usage scenarios, emphasizing its long-lasting battery for all-day use.

3. Cleaning

Use a soft, lint-free cloth to clean the screen and exterior. For stubborn smudges, dampen the cloth slightly with water or a screen-safe cleaner. Avoid harsh chemicals.

4. Software Updates

Regularly check for and install Windows updates to ensure your system has the latest security patches and performance improvements. Go to Windows Settings > Windows Update.

TROUBLESHOOTING

If you encounter issues with your Jumper laptop, refer to the following common solutions:

- **No Power:** Ensure the power adapter is securely connected and the outlet is functional. Try a different outlet.
- **Screen Issues:** If the screen is blank or flickering, try restarting the laptop. Check display settings if connected to an

external monitor.

- **Slow Performance:** Close unnecessary applications, check for background processes, and ensure sufficient free storage space. Consider running a disk cleanup.
- **Wi-Fi Connectivity Problems:** Restart your router and the laptop. Ensure Wi-Fi is enabled on the laptop and you are connected to the correct network.
- **Touchscreen Unresponsive:** Restart the laptop. If the issue persists, check for driver updates in Device Manager.
- **Fingerprint Reader Not Working:** Ensure your finger is clean and dry. Re-register your fingerprint in Windows Settings if necessary.

For more complex issues or persistent problems, please contact Jumper customer support.

SPECIFICATIONS

Feature	Detail
Brand	jumper
Model Name	J1
Screen Size	16 Inches
Screen Resolution	1920 x 1200 pixels
Processor	Intel Celeron N5095 (2.0GHz to 2.9GHz)
RAM	16GB DDR4 (expandable)
Storage	512GB SSD + 128GB eMMC (SSD upgradeable to 2TB)
Graphics Coprocessor	Intel UHD Graphics
Operating System	Windows 11 Home
Wireless Type	5 GHz Radio Frequency, 802.11ax (WiFi 6), 2.4 GHz Radio Frequency
USB Ports	3 x USB 3.0
Average Battery Life	8 Hours
Item Weight	5.05 pounds
Dimensions (LxWxH)	14.35 x 9.5 x 0.72 inches
Special Features	Fingerprint Reader, 360° Rotation, Backlit Keyboard, Dual Memory Card Slots

WARRANTY AND SUPPORT

Your Jumper laptop comes with a 1-year warranty. For warranty claims, technical support, or service inquiries, please visit the official Jumper website or contact their customer service department. Keep your purchase receipt as proof of purchase.

For more information, visit the [Jumper Official Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPMHGJHS>

More documents and user manuals: <https://manuals.plus/>