

deime WAL-2.6QT-BLACK

DEIME Air Fryer 3 Qt Digital Instruction Manual

MODEL: WAL-2.6QT-BLACK

[Safety](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using this appliance.

- **Read all instructions:** Familiarize yourself with the appliance's operation before first use.
- **Hot surfaces:** The appliance's exterior and interior surfaces become hot during operation. Use oven mitts when handling hot components.
- **Electrical safety:** Ensure the voltage indicated on the appliance matches your local power supply. Do not immerse the cord, plug, or appliance in water or other liquids.
- **Proper ventilation:** Place the air fryer on a stable, heat-resistant surface, at least 4 inches (10 cm) away from walls or other appliances to allow adequate air circulation.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Avoid damage:** Do not use the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- **Unplug when not in use:** Always unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before adding or removing parts.
- **Do not overfill:** Overfilling the basket may cause food to contact the heating element, resulting in smoke.
- **Flammable materials:** Do not place flammable materials such as paper, cardboard, or plastic in the air fryer.

2. Product Overview

The DEIME 3 Qt Digital Air Fryer is designed for compact, efficient cooking. It features a digital control panel for precise temperature and time adjustments, and a non-stick, dishwasher-safe basket for easy cleaning.



Image 1: The DEIME 3 Qt Digital Air Fryer with its cooking basket partially removed, revealing a batch of golden french fries. This illustrates the compact design and the removable basket component.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Cooking Basket:** Removable, non-stick basket for holding food.
- **Digital Control Panel:** Touch-sensitive interface for setting time and temperature.
- **Handle:** For safely pulling out and inserting the cooking basket.

Control Panel:



Image 2: A detailed view of the DEIME Air Fryer's digital control panel, displaying '400' for temperature and 'TIME' for cooking duration. The image also highlights the product dimensions: 8.66 inches wide, 10.62 inches high, and 8 inches deep.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control (TEMP):** Use ▲ / ▼ buttons to adjust temperature.
- **Time Control (TIME):** Use ▲ / ▼ buttons to adjust cooking time.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.

3. Setup and First Use

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

Initial Cleaning:

1. Wipe the exterior of the air fryer with a damp cloth.
2. Wash the cooking basket with hot water, dish soap, and a non-abrasive sponge. Rinse

thoroughly and dry completely.

3. Do not immerse the main unit in water.

Placement:

1. Place the air fryer on a stable, level, heat-resistant surface.
2. Ensure there is at least 4 inches (10 cm) of clear space around the back and sides of the appliance for proper ventilation.
3. Do not place the air fryer directly against a wall or under cabinets.

First Use (Burn-off):

It is recommended to run the air fryer empty for about 10 minutes on its first use to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal and will dissipate.

1. Plug the air fryer into a grounded electrical outlet.
2. Set the temperature to 350°F (175°C) and the timer to 10 minutes.
3. Allow the cycle to complete, then unplug and let the unit cool down.

4. Operating Instructions

General Cooking Steps:

1. **Prepare Food:** Place your ingredients into the cooking basket. Do not overfill; ensure there is enough space for air to circulate.
2. **Insert Basket:** Slide the cooking basket firmly back into the main unit.
3. **Power On:** Plug the air fryer into a grounded electrical outlet. The power button will illuminate. Press the power button to turn on the display.
4. **Set Temperature:** Use the ▲ / ▼ buttons under 'TEMP' to adjust the desired cooking temperature.
5. **Set Time:** Use the ▲ / ▼ buttons under 'TIME' to adjust the desired cooking time.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle. The fan and heating element will activate.
7. **Shake/Toss (Optional):** For even cooking, especially with smaller items like fries, pull out the basket halfway through the cooking time and gently shake or toss the food. Reinsert the basket to resume cooking.
8. **Finish Cooking:** The air fryer will beep when the set time has elapsed. Carefully pull out the basket and transfer the cooked food to a plate.
9. **Power Off:** Press the power button to turn off the appliance, then unplug it from the outlet.



Image 3: The DEIME Air Fryer with its basket open, showcasing perfectly cooked, crispy french fries garnished with cherry tomatoes. This demonstrates the appliance's ability to achieve crispy results.

Preheating:

While not always necessary, preheating can improve cooking results for some foods. To preheat, set the desired temperature and time (e.g., 3-5 minutes) and let the air fryer run empty before adding food.

Cooking Tips:

- For best results, lightly spray or brush food with oil.
- Smaller food items usually require shorter cooking times than larger ones.
- Foods that require shaking or tossing during cooking (e.g., fries, nuggets) often benefit from a slightly lower temperature and longer cooking time.

5. Cleaning and Maintenance

Clean the air fryer after every use to prevent food residue buildup and maintain performance.

Before Cleaning:

1. Unplug the air fryer from the power outlet.
2. Allow the appliance to cool down completely before handling any parts.

Cleaning the Basket:

- The cooking basket is non-stick and dishwasher safe.
- For manual cleaning, wash with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the basket in hot water with dish soap for about 10 minutes before cleaning.

Cleaning the Exterior:

- Wipe the exterior of the air fryer with a damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may damage the finish.

Cleaning the Interior:

- Wipe the interior with a damp cloth and mild dish soap.
- If necessary, use a soft brush to remove any food residue from the heating element.
- Ensure the interior is completely dry before storing or next use.

Storage:

Store the air fryer in a cool, dry place with the power cord neatly wrapped.

6. Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working. Basket not fully inserted.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance. Push the cooking basket firmly into the main unit until it clicks into place.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/tossed.	Cook food in smaller batches. Shake or toss food halfway through cooking.
White smoke comes from the appliance.	Greasy food residue. Excess oil used.	Clean the basket and interior thoroughly. Use less oil or pat food dry before cooking.
Food is not crispy.	Too much moisture. Not enough oil. Temperature too low/time too short.	Pat food dry before cooking. Lightly spray or brush food with oil. Increase temperature or cooking time.

7. Product Specifications

- **Model:** WAL-2.6QT-BLACK
- **Capacity:** 3 Quarts
- **Wattage:** 800 Watts
- **Product Dimensions (W x H x D):** Approximately 8.66 in x 10.62 in x 8 in
- **Material:** Plastic
- **Color:** Black
- **Special Feature:** Digital Controls

8. Warranty and Customer Support

For warranty information, technical support, or any questions regarding your DEIME Air Fryer, please refer to the manufacturer's official website or contact their customer service department directly.

Contact details are typically provided in the packaging or on the product's dedicated support page.

Please retain your proof of purchase for warranty claims.