

Manuals.plus /

› Disaenvir /

› Disaenvir 30-Inch 6700W 4-Burner Electric Cooktop User Manual (Model US-DSC-D46703-MG-TY)

Disaenvir US-DSC-D46703-MG-TY

Disaenvir 30-Inch 6700W 4-Burner Electric Cooktop User Manual

Model: US-DSC-D46703-MG-TY

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Disaenvir 30-inch 6700W 4-burner electric cooktop. Please read all instructions carefully before use and retain this manual for future reference.

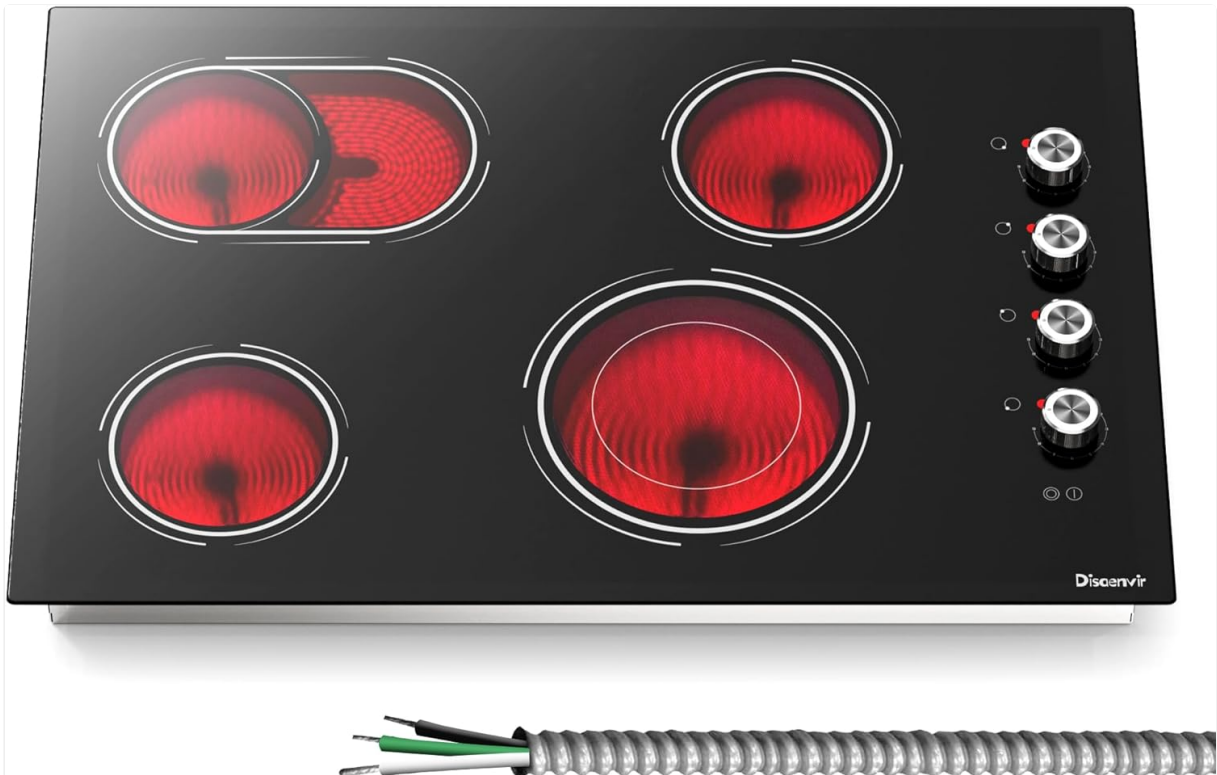


Image 1: Top-down view of the Disaenvir 30-inch 4-burner electric cooktop, showcasing its sleek black ceramic surface and four radiant heating elements.

2. SAFETY INFORMATION

- **Electrical Connection:** This appliance requires a 220V-240V hard-wired electrical connection. It does not come with a plug. Installation should be performed by a qualified electrician to ensure compliance with local electrical codes and safety standards.
- **Hot Surface Indicator:** The cooktop features hot surface indicator lights that remain illuminated after a burner has been turned off, indicating that the surface is still hot to the touch. Exercise caution to prevent burns.
- **General Safety:** Do not leave cooking unattended. Use appropriate cookware for electric cooktops. Keep flammable materials away from the cooktop surface.

3. SETUP AND INSTALLATION

The Disaenvir electric cooktop is designed for built-in installation into a countertop. Ensure the countertop cutout dimensions are accurate for a secure fit.

1. **Cut-out Dimensions:** The recommended cut-out size is approximately 28.74 inches (L) x 19.3 inches (W).
2. **Product Dimensions:** The overall product size is 30.3 inches (L) x 20.5 inches (W) x 2.1 inches (H).
3. **Electrical Wiring:** Connect the cooktop to a dedicated 220V-240V circuit. Refer to the detailed wiring diagram in the included user manual for specific connections.
4. **Securing the Cooktop:** Use the provided brackets and screws to secure the cooktop firmly into the countertop opening.



Image 2: Diagram illustrating the product dimensions and the hard-wired electrical connection requirements for the cooktop.

Included Components: Your cooktop package includes the 4-burner electric cooktop unit, a user manual, and a cleaning scraper.

4. OPERATING INSTRUCTIONS

Your Disaenvir electric cooktop features intuitive knob controls for precise heat management.

- **Knob Control:** Each burner has a dedicated knob. Rotate the knob clockwise to increase the heat level from 1 to 9. Turn counter-clockwise to decrease the heat or turn off the burner.
- **Power Levels:** The cooktop offers 9 power levels for versatile cooking, from gentle simmering to rapid boiling.
- **Burner Configuration:** The cooktop includes four radiant burners with varying power outputs:
 - Two 1200W burners.
 - One 2000W burner.
 - One dual/expanded ring burner offering 1100W or 2300W.
- **Cookware Compatibility:** This cooktop is compatible with all types of flat-bottomed cookware, including cast iron, stainless steel, and non-stick pans.

Simple Knob Control

Easy to Operate



Image 3: Detailed view of the cooktop's knob controls, demonstrating their simple and tactile design for adjusting heat settings.

Touch "  " to Switch the Zone

Double Ring Burner

1100W~2300W



Expansion Burner

1100W/2000W

Two Power Levels and Sizes to Choose

Image 4: Illustration of the dual ring and expanded ring burner, highlighting its adaptability for different cookware sizes.

All Flat-Bottomed Cookware Friendly

No Need to Change Your Pans to Accommodate this Stove



Image 5: Visual representation of the cooktop's compatibility with different flat-bottomed cookware types.

Official Product Video: Disaenvir 30 Inch Electric Cooktop Knob Control

Your browser does not support the video tag.

Video 1: A short demonstration of the Disaenvir 30-inch electric cooktop, focusing on the knob controls and the heating elements.

5. MAINTENANCE

To maintain the appearance and performance of your cooktop, regular cleaning is recommended.

- **Cleaning the Surface:** Allow the cooktop to cool completely before cleaning. Use a soft cloth or sponge with a non-abrasive cleaner specifically designed for ceramic or glass cooktops. For stubborn stains, use the provided cleaning scraper carefully.
- **Avoid Abrasives:** Do not use abrasive pads, powders, or harsh chemical cleaners, as these can scratch or damage the glass surface.

6. TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following general troubleshooting tips. For more detailed

solutions, consult the full user manual.

- **Cooktop Not Heating:** Ensure the cooktop is properly connected to the power supply and that the circuit breaker has not tripped. Check that the control knobs are correctly set to a heat level.
- **Uneven Heating:** Verify that your cookware has a flat bottom and is making full contact with the heating element.
- **Indicator Lights Not Working:** If the hot surface indicator lights are not functioning, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Disaenvir
Model Number	US-DSC-D46703-MG-TY
Installation Type	Drop-In (Built-in)
Heating Elements	4 Radiant Burners
Total Wattage	6700W
Voltage	220V-240V (AC)
Product Dimensions (L x W x H)	30.3" x 20.5" x 2.1"
Cut-out Dimensions (L x W)	28.74" x 19.3"
Material Type	Tempered Glass / Glass Ceramic
Control Type	Knob Control
Special Features	Adjustable Temperature, Automatic Shut-Off, Hot Surface Indicator, Power-On Indicator

8. WARRANTY AND SUPPORT

For warranty information or technical assistance, please refer to the contact details provided in your product packaging or the full user manual. You may also visit the Disaenvir Store on Amazon for additional resources.