

## UPHA B0DPMPLWDJ

# UPHA 42-inch Round Propane Gas Fire Pit Table User Manual

Model: B0DPMPLWDJ

Brand: UPHA

## 1. SAFETY INFORMATION

---

Please read and understand all safety warnings and instructions before assembling, operating, or servicing this fire pit table. Failure to follow these instructions could result in property damage, bodily injury, or death.

- This appliance is for outdoor use only. Do not operate indoors.
- Maintain proper clearance from combustible materials. Ensure at least 3 feet (0.9 meters) from the top and sides to any combustible surfaces.
- Keep children and pets away from the fire pit table during operation and while it is cooling down.
- Never leave the fire pit table unattended when in use.
- Do not use this appliance for cooking.
- Ensure the propane tank is placed outside the fire pit table and connected securely.
- Always check for gas leaks before each use. Use a soapy water solution on connections; bubbles indicate a leak.
- This product is CSA certified for safety.
- For natural gas usage, a conversion kit and professional installation are required. Do not attempt to convert without proper accessories and expertise.

## 2. PACKAGE CONTENTS

---

Verify that all components are present and undamaged before proceeding with setup.



Image: Included components for the UPHA fire pit table.

- Concrete Fire Pit Table (1 pc)
- Propane Tank Cover Table (1 pc)
- Propane Tank Base Ring (1 pc)
- Rain Cover (1 pc)
- Propane Hose (1 pc)
- Lava Rocks (1 bag)
- Navyblue Fire Glass (1 bag)
- User Manual (1 pc)

## 3. SETUP INSTRUCTIONS

---

### 3.1 Unpacking and Placement


The fire pit table is shipped in two packages. Carefully remove all components from their packaging.

- Place the fire pit table on a firm, level, non-combustible surface.
- Utilize the adjustable balance feet on the fire pit table to ensure stability on various outdoor surfaces.
- Position the propane tank cover table near the fire pit table, ensuring the propane tank (not included) is easily accessible for connection.

# Product Dimensions



Table Weight Capacity: **200LBS**

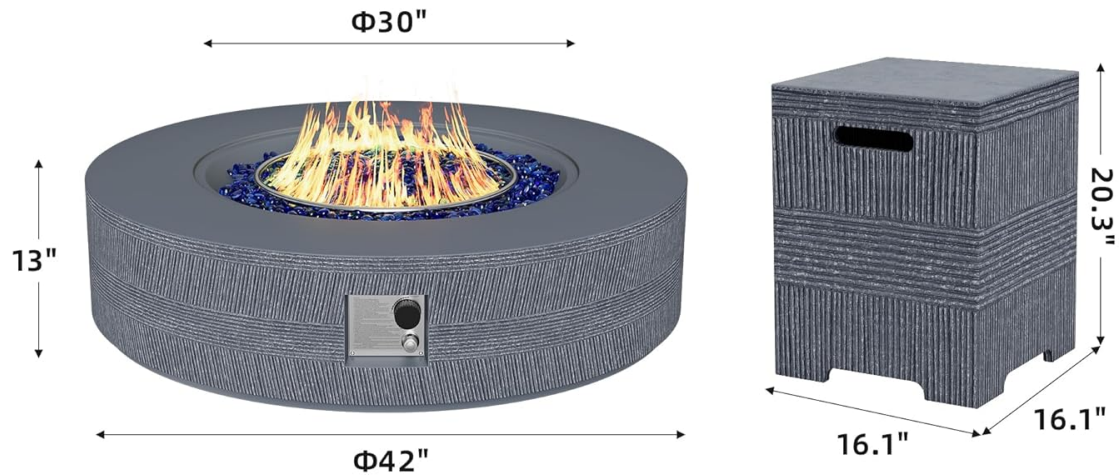

## TANK POSITION:OUTSIDE

Propane tank(not include)does **NOT** fit inside the fire table.



Image: Product dimensions and external propane tank placement.

### 3.2 Connecting the Propane Tank

1. Ensure the control knob on the fire pit table is in the "OFF" position.
2. Place a standard 20-pound propane tank (not included) onto the propane tank base ring, then cover it with the propane tank cover table.
3. Connect the propane hose from the fire pit table to the propane tank valve. Hand-tighten the connection securely. Do not use tools to overtighten.
4. Perform a leak test: Mix a solution of soapy water (50% soap, 50% water). Apply the solution to all gas connections. Open the propane tank valve slowly. If bubbles appear, there is a leak. Close the tank valve immediately and re-tighten connections. Repeat the test. If leaks persist, do not operate the appliance and contact customer support.

# 42 Inch Outdoor Fire Pit

CSA Certification



## 9.8 FT Gas Hose (for propane use only)

Please replace the natural gas pipe  
when using natural gas



## 304 Stainless Steel Burner

More long-lasting than regular stainless steel

Image: Gas hose connection and burner detail.


### 3.3 Adding Lava Rocks and Fire Glass

- Distribute the lava rocks evenly over the burner area.
- Carefully place the navyblue fire glass on top of the lava rocks, ensuring the burner ports are not completely blocked. This allows for proper gas flow and flame distribution.

# 50000BTU Outdoor Fire Table

Ignite the perfect atmosphere for your outdoor gathering

Auto-ignition in **5 seconds**  
provides **8-10 hours** of heat for an **8-foot diameter** area

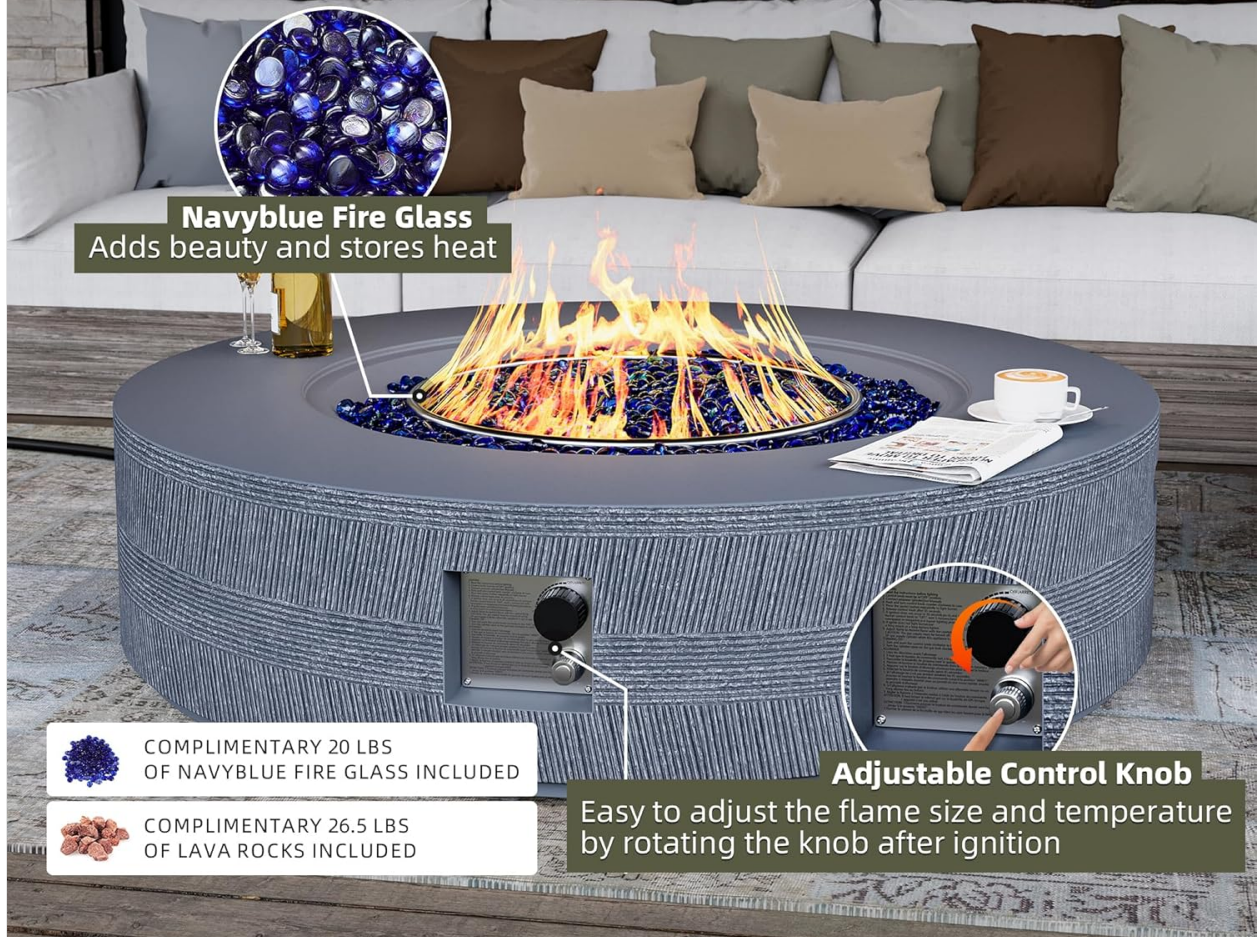

**Navyblue Fire Glass**  
Adds beauty and stores heat

 COMPLIMENTARY 20 LBS  
OF NAVYBLUE FIRE GLASS INCLUDED

 COMPLIMENTARY 26.5 LBS  
OF LAVA ROCKS INCLUDED

**Adjustable Control Knob**

Easy to adjust the flame size and temperature  
by rotating the knob after ignition

Image: Fire pit in operation, highlighting fire glass and control knob.

## 4. OPERATING INSTRUCTIONS

### 4.1 Electronic Ignition

1. Ensure the propane tank valve is fully open.
2. Press and hold the electronic ignition button.
3. While holding the ignition button, slowly rotate the control knob to the "LOW" position. Continue to hold the ignition button for at least 45 seconds to allow gas to flow and ignite.
4. Once the flame is lit, release the ignition button.
5. If the flame does not ignite, turn the control knob to "OFF", wait 5 minutes for gas to dissipate, and repeat the ignition process.

### 4.2 Adjusting Flame

To adjust the flame height and heat output, rotate the control knob clockwise for a lower flame and counter-clockwise for a higher flame.

### 4.3 Shutting Down

1. Rotate the control knob to the "OFF" position.
2. Close the valve on the propane tank.
3. Allow the fire pit table to cool completely before covering or moving.

## 5. MAINTENANCE

---

### 5.1 Cleaning

- Ensure the fire pit table is completely cool before cleaning.
- Wipe any stains or dirt from the concrete surface with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.
- The 304 stainless steel burner is designed for long-lasting performance. Clean any debris from the burner ports to ensure optimal flame.

### 5.2 Storage and Protection

For periods of non-use or during inclement weather, it is recommended to utilize the included oxford rain cover to protect the table and prolong its lifespan.

# Outdoor Side Table

Made of **sturdy premium concrete** it can hold up to **200 lbs**



# Rain Cover

After use in bad weather, keep the fire pit dry and ventilated



Image: Rain cover protecting the fire pit table and side table.

## 6. TROUBLESHOOTING

If you encounter issues with your UPHA fire pit table, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Burner does not ignite electronically.	No gas flow, igniter not sparking, igniter electrode misaligned.	Ensure propane tank valve is open. Check for gas leaks. Verify igniter is clicking. If igniter spark is not reaching the gas, a long lighter or gas match may be used to manually ignite.
Flame goes out unexpectedly after some time.	Thermocouple issue, low gas pressure, wind.	Ensure the thermocouple is clean and properly positioned in the flame. Check propane tank level. Re-ignite the unit. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Low flame or inconsistent flame.	Low gas pressure, partially closed tank valve, burner ports blocked.	Ensure propane tank valve is fully open. Check propane tank level. Clean burner ports of any debris or fire glass.
Gas odor detected.	Gas leak.	Immediately turn off the gas at the propane tank. Perform a leak test with soapy water. Do not operate if a leak is present. Contact emergency services if the odor is strong or persistent.

## 7. SPECIFICATIONS

Feature	Detail
Brand	UPHA
Model Number	B0DPMPLWDJ
Product Dimensions	42"D x 42"W x 13"H
Material	Artificial Premium Concrete, Stainless Steel
Color	Grey Texture
Shape	Round
Item Weight	99.2 Pounds
Table Weight Capacity	200 Pounds
Fuel Type	Liquefied Petroleum Gas (Propane)
Heat Output	50,000 BTUs
Certification	CSA Certified



Image: UPHA 42-inch Round Propane Gas Fire Pit Table.

## 8. WARRANTY INFORMATION

---

Specific warranty details for the UPHA 42-inch Round Propane Gas Fire Pit Table are not provided in this manual. For information regarding product warranty, please refer to the purchase documentation or contact UPHA customer support directly.

## 9. CUSTOMER SUPPORT

---

For further assistance, technical support, or to inquire about replacement parts, please contact UPHA customer service through the retailer where the product was purchased or visit the official UPHA brand store online.

Online Store: [UPHA Store on Amazon](#)

