

manuals.plus /

› [Peski](#) /

› [Peski Portable Bluetooth Karaoke Machine User Manual](#)

## Peski

# Peski Portable Bluetooth Karaoke Machine User Manual

Model: T-08 | Brand: Peski

## 1. INTRODUCTION

Thank you for choosing the Peski Portable Bluetooth Karaoke Machine. This device is designed to provide an immersive audio experience with its powerful sound output, versatile connectivity, and dynamic LED lighting. It is ideal for home entertainment, parties, and outdoor gatherings. This manual will guide you through the setup, operation, and maintenance of your new karaoke machine to ensure optimal performance and enjoyment.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Peski Karaoke Speaker Unit
- 2 x Wireless Microphones (AA batteries not included)
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Figure 2.1: Complete package contents of the Peski Karaoke Machine. This image displays the main karaoke speaker unit, two wireless microphones, a USB-C charging cable, and a USB-A to USB-C charging cable. The speaker features dual illuminated woofers and a top slot for a tablet or smartphone.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your karaoke machine.

#### 3.1 Speaker Components

# SUPERIOR STEREO SOUND

Dual subwoofers and tweeter for more powerful immersive sound and deep bass



15W Power 


3"x2 Tweeters 

Figure 3.1: Internal audio architecture. An exploded view of the karaoke machine illustrating its internal audio architecture, including two 3-inch tweeters and a 15W power output, designed for powerful and immersive sound.

## 3.2 Control Panel

# 8 HOURS of Non-STOP PLAYTIME

Long-lasting battery life ensures you don't have to worry about running out of power, even outdoors, letting you enjoy music to the fullest.



Figure 3.2: Top control panel. A detailed view of the top control panel of the karaoke machine, featuring clearly labeled buttons for LED light control, mode selection (M), play/pause, and track navigation/volume adjustment (K>/+).

## 3.3 Connectivity Options

# ALL FEATURES ARE READY

Enjoy your singing time

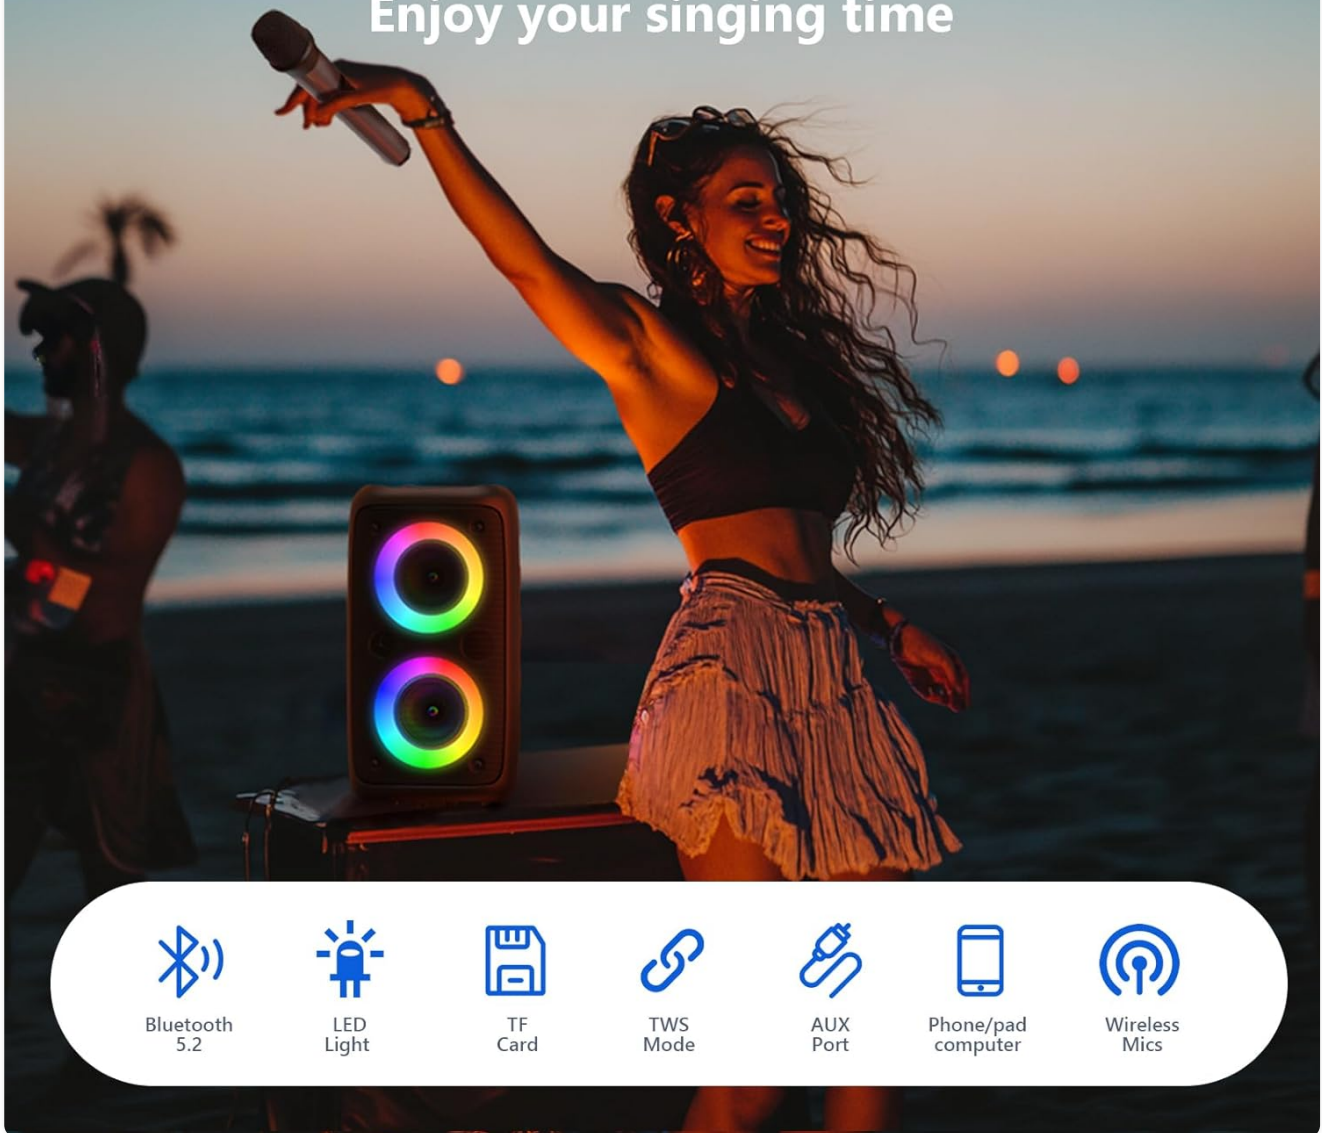


Figure 3.3: Versatile connectivity and features. This graphic summarizes the versatile connectivity and features of the karaoke machine, including Bluetooth 5.2 for wireless streaming, LED lighting effects, support for TF cards, True Wireless Stereo (TWS) pairing, AUX input, and compatibility with various smart devices and computers, along with its wireless microphone capability.

## 4. SETUP

### 4.1 Charging the Speaker

Before first use, fully charge the karaoke machine. Connect the provided USB charging cable to the charging port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status. A full charge provides approximately 8 hours of playtime.

### 4.2 Installing Microphone Batteries

Each wireless microphone requires 2 AA batteries (not included). Open the battery compartment at the bottom of the microphone, insert the batteries according to the polarity markings, and close the compartment securely.

### 4.3 Powering On/Off

To power on the speaker, press and hold the power button located on the control panel until the LED lights illuminate. To power off, press and hold the power button again until the lights turn off.

## 5. OPERATING INSTRUCTIONS

### 5.1 Bluetooth Pairing

1. Power on the karaoke machine. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth indicator.
2. Enable Bluetooth on your device (smartphone, tablet, PC, etc.).
3. Search for "Peski T-08" or similar in your device's Bluetooth list and select it to connect.
4. Once connected, a confirmation sound will be heard, and the Bluetooth indicator will stop flashing. You can now play audio wirelessly through the speaker.

### 5.2 True Wireless Stereo (TWS) Pairing

The TWS function allows you to connect two Peski T-08 speakers for a true stereo sound experience.

1. Ensure both Peski T-08 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the 'M' (Mode) button for a few seconds until you hear a pairing tone.
3. The two speakers will automatically search and pair with each other. Once successfully paired, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in Section 5.1. Audio will play through both speakers in stereo.

# TRUE WIRELESS STEREO PAIRING

Pairing two speakers to build a nature audio environment to create a three-dimensional effect.



Figure 5.1: TWS setup. This image illustrates the True Wireless Stereo (TWS) function, showing two karaoke machines connected wirelessly to create a wider, more immersive stereo sound experience, ideal for larger spaces or enhanced audio.

## 5.3 USB/TF Card Playback

Insert a USB flash drive or TF (microSD) card into the respective port on the speaker. The speaker will automatically switch to USB/TF card mode and begin playing audio files. Use the track navigation buttons (K>/+) to skip tracks.

## 5.4 AUX Input

Connect an external audio device (e.g., MP3 player, TV) to the speaker's AUX port using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode. Control playback from your connected device.

## 5.5 Microphone Usage

Power on the wireless microphones by sliding the power switch. They will automatically connect to the speaker. Use the volume controls on the microphone or the speaker to adjust microphone volume. The speaker may also have an echo effect control for vocal enhancement.

## 5.6 LED Light Control

Press the 'LED' button on the control panel to cycle through different LED light modes or to turn the lights off. The speaker features vibrant, dynamic lighting that synchronizes with the music.

# DYNAMIC COLORFUL SHOW

Switch 5 Dynamic LED lighting for party show



Figure 5.2: Dynamic LED lighting. This image showcases the dynamic LED lighting feature of the karaoke machine, with vibrant, color-changing lights emanating from the speaker grilles, enhancing the party atmosphere.

## 5.7 Product Demonstration Video

Video 5.1: Portable Karaoke Machine. This video demonstrates the portability and basic functions of the Peski Karaoke Machine, showcasing its compact design and ease of use for various settings.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your karaoke machine, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker and microphones. Do not use abrasive cleaners, alcohol, or solvents, as these may damage the surface.
- **Storage:** When not in use for extended periods, store the machine in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries from microphones if storing for a long time to prevent leakage.
- **Battery Care:** Recharge the speaker regularly, even if not in frequent use, to maintain battery health. Avoid

completely draining the battery before recharging.

- **Handling:** Handle the unit with care. Avoid dropping or subjecting it to strong impacts, which can damage internal components.

## 7. TROUBLESHOOTING

If you encounter issues with your Peski Karaoke Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery drained; Power button not pressed correctly.	Charge the speaker fully. Press and hold the power button firmly.
No sound from speaker	Volume too low; Incorrect input mode; Device not connected.	Increase speaker and device volume. Ensure correct mode (Bluetooth, AUX, USB/TF). Re-pair Bluetooth device.
Microphones not working	Microphone batteries low/incorrectly installed; Microphone not powered on; Microphone out of range.	Replace AA batteries in microphones. Ensure microphones are switched ON. Keep microphones within operating range of the speaker.
Bluetooth connection unstable	Device too far; Interference; Low speaker battery.	Move device closer to speaker. Avoid obstacles. Charge speaker.
TWS pairing failed	Speakers already connected to other devices; Incorrect pairing procedure.	Ensure both speakers are disconnected from other devices. Follow TWS pairing steps precisely (Section 5.2).

## 8. SPECIFICATIONS

Detailed technical specifications for the Peski Portable Bluetooth Karaoke Machine:

**Model Number:** T-08

**Output Wattage:** 15 Watts

**Power Source:** Battery Powered

**Connectivity Technology:** Bluetooth 5.2, USB, AUX, TF card

**Audio Input:** Microphones

**Product Dimensions:** 7 x 7 x 12 inches

**Item Weight:** 4.38 pounds

**Mounting Type:** Floor Mount

**Compatible Devices:** Television, iPad, Personal Computer, Tablet, Smartphone

**Color:** Black

**Manufacturer:** Peski

**Country of Origin:** China

**First Available Date:** December 5, 2024

## 9. WARRANTY AND SUPPORT

Peski products are manufactured with high-quality standards. For information regarding warranty coverage, returns, or technical support, please refer to the warranty card included with your product or visit the official Peski website. Keep your purchase receipt as proof of purchase for any warranty claims.