



[Manuals.plus](#) /

> [SideKing](#) /

> SideKing 23.6" Battery Powered Sprayer Wand User Manual (Model SQ3.7VDXD-BK-5M)

SideKing SQ3.7VDXD-BK-5M

SideKing 23.6" Battery Powered Sprayer Wand User Manual

Model: SQ3.7VDXD-BK-5M

[Introduction](#) [Safety Instructions](#) [Package](#)
[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the SideKing 23.6" Battery Powered Sprayer Wand. This electric sprayer is designed for efficient and convenient application of liquids in your lawn and garden. Featuring a telescopic wand, three spray forces, a battery indicator, and a 16.4ft hose, it offers versatility for various spraying tasks. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. SAFETY INSTRUCTIONS

- Always wear appropriate personal protective equipment (PPE) such as gloves and eye protection when handling chemicals.
- Do not spray flammable liquids or use the sprayer near open flames.
- Keep the sprayer out of reach of children and pets.
- Ensure the USB charging port is sealed when using the sprayer outdoors or in wet conditions to maintain its IPX4 waterproof rating.
- Do not submerge the main handle unit in water.
- Use only the provided charging cable and adapter.
- Inspect the hose and connections for any damage before each use.
- Clean the sprayer thoroughly after each use, especially when switching between different types of liquids.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Battery Powered Sprayer Wand (Main Unit)
- 16.4ft (5m) Hose with Gravity Filter
- Fan Nozzle

- Shower Nozzle
- Brass Cone Nozzle
- USB Charging Cable
- User Manual



Image: The complete SideKing Battery Powered Sprayer Wand package contents, including the main unit, hose, various nozzles, and charging cable.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your sprayer wand:

1. **Charge the Battery:** Before first use, fully charge the sprayer wand using the provided USB cable. The battery indicator lights will show the charging status. A full charge provides 2-3 hours of runtime.
2. **Attach the Nozzle:** Select the desired nozzle (Fan, Shower, or Brass Cone) and screw it onto the end of the telescopic wand until secure.
3. **Connect the Hose:**
 - Unscrew the nut from the handle.
 - Thread the nut through the hosepipe first.
 - Insert the hosepipe into the tail end of the handle.
 - Tighten the nut to secure the hosepipe.

- Insert the gravity filter into the other end of the hosepipe.

4. **Extend the Wand:** Adjust the telescopic wand to your desired length by twisting and pulling the sections. Ensure it is securely locked in place before use.



Image: Visual guide showing the assembly steps for the sprayer wand, including attaching the nozzle, connecting the hose, and inserting the filter.

Retractable Boom Design



Image: Illustration of the retractable boom design, highlighting the extendable metal wand for reaching different heights.

5. OPERATING INSTRUCTIONS

- 1. Prepare Liquid:** Fill a bucket, tank, or other water source with the desired liquid (water, fertilizer, herbicide, etc.). Place the gravity filter end of the hose into the liquid.
- 2. Power On:** Press the red "On/Off" button on the handle to turn on the sprayer. The battery indicator lights will illuminate.
- 3. Adjust Spray Force:** Press the blue "Speed" button to cycle through the three spray intensity modes:
 - **Gentle Mist:** Ideal for delicate plants or light watering.
 - **Medium Spray:** Suitable for general gardening tasks.
 - **Strong Stream:** For targeted application or reaching higher areas.
- 4. Begin Spraying:** Once the desired spray force is selected, the sprayer will begin operating. Direct the nozzle towards the target area.
- 5. Change Nozzle Pattern:** For the Fan and Shower nozzles, rotate the nozzle head to adjust the spray pattern from a fine mist to a jet stream. The Brass Cone nozzle provides a consistent cone spray.
- 6. Monitor Battery:** The battery indicator lights on the handle provide real-time feedback on the remaining battery life. Recharge when the indicator shows low battery.
- 7. Power Off:** Press the red "On/Off" button again to turn off the sprayer.



Images: Left, a close-up of the sprayer handle with battery indicator and speed control. Right, a comparison of the three adjustable spray intensities: gentle, medium, and strong.



Images: Left, the three available nozzle types and their adjustable spray patterns. Right, the sprayer's versatility in drawing water from multiple sources.

Video Demonstration: SideKing 23.6" Battery Powered Sprayer Wand

Your browser does not support the video tag.

Video: An official demonstration of the SideKing 23.6" Battery Powered Sprayer Wand in use, showcasing its features and operation.

6. MAINTENANCE

- **Cleaning:** After each use, especially with chemicals, rinse the sprayer thoroughly by running clean water through it. This prevents clogging and extends the life of the unit.
- **Filter Cleaning:** Regularly check and clean the gravity filter to ensure optimal performance and prevent blockages.
- **Storage:** Store the sprayer in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (not fully depleted or fully charged for long periods) before storing.
- **Battery Care:** Recharge the battery periodically if the sprayer is not used for extended periods to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Sprayer does not turn on.	Low battery; Power button not pressed correctly.	Charge the battery fully. Press the On/Off button firmly.
Weak or no spray.	Clogged nozzle or filter; Low liquid level; Air in hose.	Clean the nozzle and filter. Refill the liquid source. Ensure the hose is fully submerged and free of kinks.
Leaking from connections.	Loose connections; Damaged O-rings.	Tighten all connections. Inspect and replace O-rings if damaged.
Battery indicator not working.	Unit not powered on; Faulty unit.	Ensure the sprayer is turned on. Contact customer support if the issue persists.

8. SPECIFICATIONS

Feature	Detail
Model Number	SQ3.7VDXD-BK-5M
Wand Length	23.6 inches (extendable)
Hose Length	16.4 feet (5 meters)
Battery Runtime	2-3 hours
Spray Forces	3 (Gentle, Medium, Strong)
Nozzle Types	Fan, Shower, Brass Cone
Waterproof Rating	IPX4
Material	Acrylonitrile Butadiene Styrene (ABS)
Charging Port	USB

9. WARRANTY AND SUPPORT

The SideKing 23.6" Battery Powered Sprayer Wand comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product is free from material and workmanship flaws under normal use.

For any product inquiries, technical assistance, or warranty claims, please contact our dedicated support team. We are available **24/7** to assist you.

Please retain your proof of purchase for warranty validation.