



Manuals.plus /

› Smoby /

› Smoby Life Natura Playhouse with Kitchen Instruction Manual Model 7600810739

Smoby 7600810739

Smoby Life Natura Playhouse with Kitchen Instruction Manual

Model: 7600810739

[Introduction](#)

[Safety Information](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Smoby Life Natura Playhouse with Kitchen, model 7600810739. This playhouse is designed for children aged 2 years and older, offering an engaging environment for imaginative play with its integrated kitchen area.



Image: Two children interacting with the Smoby Life Natura Playhouse, showcasing its design and integrated kitchen.

2. SAFETY INFORMATION

WARNING:

- This product contains small parts during assembly. Adult supervision is required at all times when children are using the playhouse.
- Ensure all components are securely fastened before allowing children to play.
- Regularly inspect the playhouse for any damage or loose parts to prevent injury.
- Do not modify the product in any way, as this may compromise its safety and structural integrity.
- Keep children away from the product during assembly to avoid potential hazards.

3. SETUP AND ASSEMBLY

The Smoby Life Natura Playhouse is designed for straightforward assembly. However, due to its size, **two adults are recommended for assembly** to ensure stability and ease of construction. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the included parts list are present.
2. **Identify Parts:** Refer to the assembly diagrams to identify each piece. While parts are not individually numbered, matching them to the diagrams is crucial.
3. **Assemble Base Structure:** Begin by connecting the main wall panels. Ensure they are correctly oriented as per the diagrams.
4. **Attach Roof:** Securely attach the roof panels to the assembled wall structure.
5. **Install Doors and Windows:** Insert the blown plastic gate, windows, and sliding shutters into their designated slots.
6. **Assemble Kitchen Unit:** Attach the kitchen unit, including the 'grill' plate and sink, to the side of the playhouse.
7. **Add Accessories:** Place the included accessories (2 glasses, 2 plates, cutlery, 1 pot, 2 sausages) in the kitchen area. Utilize the two hooks on the side of the sink for hanging utensils.
8. **Final Check:** Once assembled, ensure all connections are tight and the structure is stable.

For detailed visual instructions, please scan the QR code provided on the product packaging or visit the official Smoby support website. A link to additional instructions can be found here: [Smoby Assembly Instructions](#)

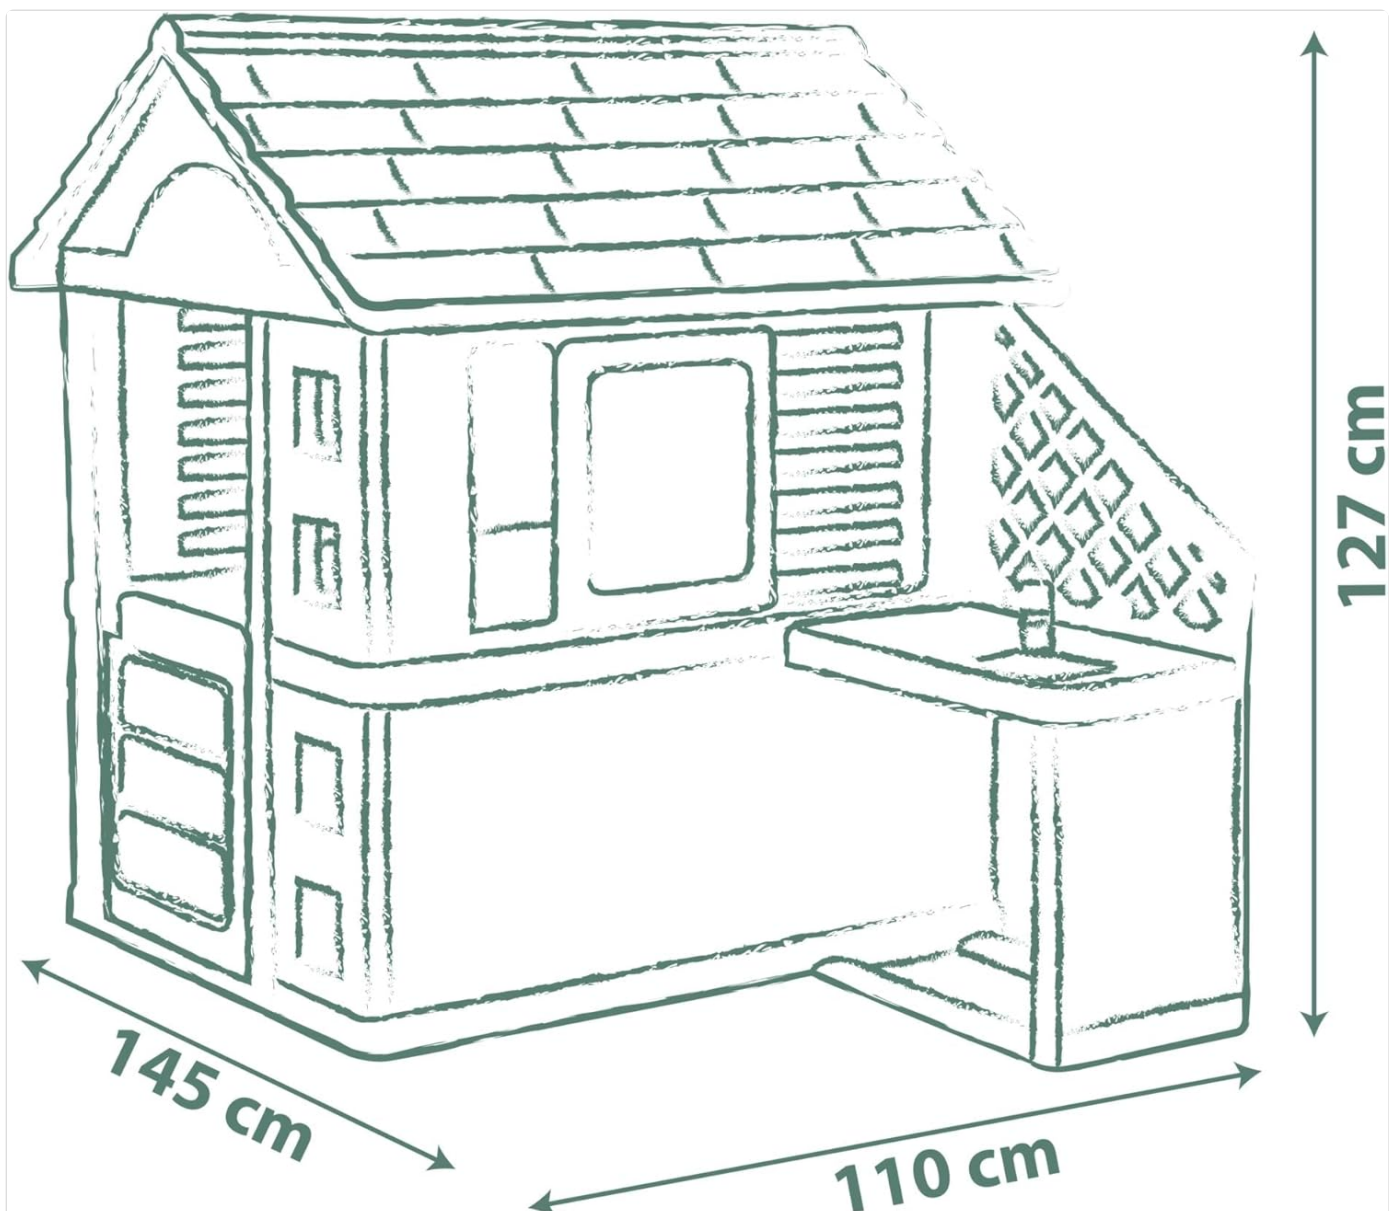


Image: Dimensional diagram of the playhouse, showing its length (145 cm), width (110 cm), and height (127 cm).



Image: The product packaging, which may contain additional assembly information or QR codes for instructions.

4. OPERATING INSTRUCTIONS

The Smoby Life Natura Playhouse is designed for interactive and imaginative play. Here's how children can interact with its features:

- **Entering and Exiting:** Children can open the blown plastic gate to enter and exit the playhouse.

- **Windows and Shutters:** The windows feature sliding shutters, allowing children to simulate different scenarios, such as opening them for light or closing them for privacy.
- **Kitchen Area:** The integrated kitchen includes a 'grill' plate and a sink. Children can use the provided accessories to mimic cooking and washing activities.
- **Utensil Hooks:** Two hooks are conveniently located next to the sink for hanging kitchen utensils, promoting organization during play.



Image: A child engaging with the kitchen unit, demonstrating the use of the sink and accessories.

Smoby
Life

57%*
MATIÈRE RECYCLÉE
RECYCLED MATERIAL

FABRIQUÉ EN FRANCE
MADE IN FRANCE

* Ce jouet contient au moins 57% de matière recyclée.
This toy contains at least 57% of recycled material.

Image: A child peering out of a window, illustrating the interactive window feature.

5. MAINTENANCE

To ensure the longevity and appearance of your Smoby Life Natura Playhouse, follow these maintenance guidelines:

- **Cleaning:** The playhouse is made of plastic and is easy to clean. Use a damp cloth with mild soap and water to wipe down surfaces. Avoid abrasive cleaners.
- **UV Treatment:** The plastic is anti-UV treated to ensure good resistance and color retention over time. However, prolonged exposure to extreme weather conditions may still affect its appearance.
- **Lubrication:** If the sliding windows become stiff, apply a small amount of silicone-based lubricant to the tracks to ensure smooth operation.
- **Inspection:** Periodically inspect all parts for wear, damage, or loose connections. Tighten any loose screws or replace damaged parts immediately.
- **Storage:** While designed for outdoor use, storing the playhouse indoors or covering it during harsh weather conditions (e.g., heavy snow, strong winds) can extend its lifespan.



Image: Visual highlighting the product's composition of at least 57% recycled material and its manufacturing origin in France, indicating material quality.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Difficulty during Assembly:** If you find the assembly instructions unclear, refer to the QR code link provided in the Setup section for additional guidance. Ensure all parts are correctly oriented before attempting to force connections.

- **Missing or Damaged Parts:** If any parts are missing or arrived damaged, do not attempt to assemble the product. Contact Smoby customer support immediately for replacement parts.
- **Stiff Sliding Windows:** If windows do not slide smoothly, apply a small amount of silicone spray or a similar lubricant to the tracks. Avoid oil-based lubricants that can attract dirt.
- **Playhouse Instability:** Ensure all screws and connections are fully tightened. If the playhouse still feels unstable, re-check the assembly steps to confirm all parts are correctly installed.

7. SPECIFICATIONS

Feature	Detail
Model Number	7600810739
Brand	Smoby
Dimensions (L x W x H)	145 cm x 110 cm x 127 cm
Material	Plastic (at least 57% recycled material)
Weight	11 Kilograms
Recommended Minimum Age	24 months (2 years)
Recommended Maximum Age	72 months (6 years)
Included Components	Playhouse, 2 glasses, 2 plates, cutlery, 1 pot, 2 sausages
Assembly Required	Yes

8. WARRANTY INFORMATION

The Smoby Life Natura Playhouse with Kitchen comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims. The warranty does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear. For specific terms and conditions, please refer to the warranty documentation included with your product or contact Smoby customer support.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact Smoby customer support.

- **Website:** Visit the official Smoby website for FAQs and support contact information.
- **Email:** Refer to your product packaging or the official website for the customer service email address.
- **Phone:** Refer to your product packaging or the official website for the customer service phone number.

Please have your product model number (7600810739) and proof of purchase ready when contacting support.